


NEW HOME®
LIGHT RUNNING

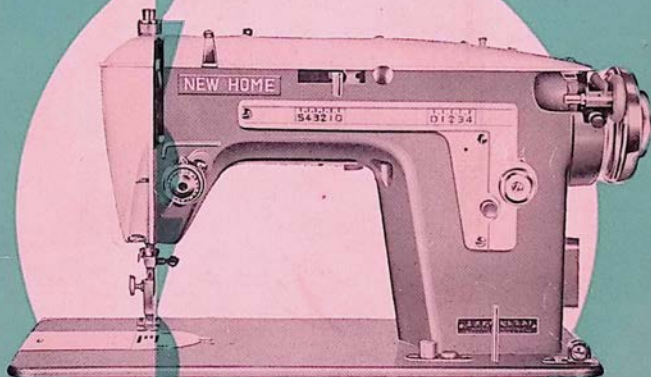

MODEL 532

THE NEW HOME SEWING MACHINE COMPANY

P. O. BOX 25901,

LOS ANGELES 25, CALIFORNIA, U. S. A.

FOR YOUR PROTECTION

This sewing machine was accurately adjusted, carefully inspected and thoroughly tested before shipment from the factory.

The New Home Sewing Machine Company guarantees this machine against defect due to faulty workmanship or materials; however, this guarantee is effective only so long as the machine in question is not exposed to abuse beyond the normal wear and tear to which such products may be subjected.

Attachments are not covered; electrical equipment is for one year from date of purchase.

To get extra needles, bobbins, light globes, oil, attachments or sewing accessories see the colorful BUSY SUSAN display at your sewing machine, variety, department or notions store.

THE NEW HOME SEWING MACHINE COMPANY

P. O. BOX 25901,

LOS ANGELES 25, CALIFORNIA, U S. A

SINCE 1860

CONTENTS

Name of Each Part.....	2
Right Needle and Thread for Right Cloth	3
Preparing to Sew	4
Bobbin : To remove the Bobbin Case	5
.....	6
.....	6
.....	7
.....	7
.....	8
.....	8
.....	9
.....	9
.....	10
.....	10
.....	12
.....	12
.....	13
.....	14
.....	15
.....	16
.....	17
.....	18
.....	18
.....	19
.....	19
.....	20
.....	21
.....	22
.....	24

NEW HOME®
MIGHTY RUNNING

Sewing Machine

Unmatched
Quality and Performance

Since 1860

NEW  HOME[®]
LIGHT RUNNING

Sewing Machine

LIFE-TIME GUARANTEE

Each new NEW HOME Sewing Machine is warranted to be free from defects in materials and workmanship entering into the manufacture and assembly, for the life of the machine. Any part, when returned transportation charges prepaid, will be repaired or replaced if proved to be defective.

Parts and accessories, such as belts, needles, bobbins, pulleys, attachments, etc which normally require replacement, are not covered by this warranty. Electrical equipment as supplied by the manufacturer is warranted for one (1) year against defects in materials and workmanship.

This warranty does not cover any machine which, in our opinion, has been altered or damaged so as to affect its performance, nor any machine not used under normal household conditions, nor any machine not given reasonable care in accordance with the printed instructions.

Date of Purchase: _____

Dealer's Name: _____

Signed By: _____

Certificate of Registration

New Home

Sewing Machine

Serial No. _____

Model No. _____

Purchaser _____

Address _____

City _____

Date of Purchase _____

Dealer's Name _____

Detach and Mail—No postage necessary

FOR YOUR PROTECTION

Guarantee
Bond

NEW HOME®
SEWING MACHINES

Sewing Machine

*Unmatched
Quality and Performance*

Since 1860

Postage
Will be Paid
by
Addressee

No
Postage Stamp
Necessary
If Mailed in the
United States


BUSINESS REPLY CARD

First Class Permit No. 40231. Sec. 131,23 P.O.D., Los Angeles, Calif.

THE NEW HOME SEWING MACHINE COMPANY

P. O. BOX 25901

LOS ANGELES 25, CALIFORNIA




FOR YOUR PROTECTION

Guarantee
Bond

CONTENTS


Name of Each Part.....	2
Right Needle and Thread for Right Cloth	3
Preparing to Sew	
Bobbin : To remove the Bobbin Case	4
To wind the Bobbin	5
To thread the Bobbin Case	6
To insert the Bobbin Case.....	6
Needle : To insert the needle.....	7
To thread the needle	7
Needle Plate : To change the Needle Plate.....	8
Presser Foot : To change the Presser Foot	8
Patchomatic Darners.....	9
Built-in Sewlight	9
To Start Sewing	10
To regulate the thread tensions	10
To regulate the direction of feed and stitches.....	12
To remove the work	12
Sewing Applications	
Zigzag sewing	13
Button sewing	14
Buttonhole sewing	15
Braid sewing	16
Darning and Embroidery	17
Hemming.....	18
Sewing on zipper	18
To use quilting attachment.....	19
Cloth guide	19
Maintenance	
To open the Shuttle Race.....	20
To oil the machine.....	21
Setting a Motor to the Machine.....	22
Check-up for smooth sewing.....	24

NAME OF EACH PART

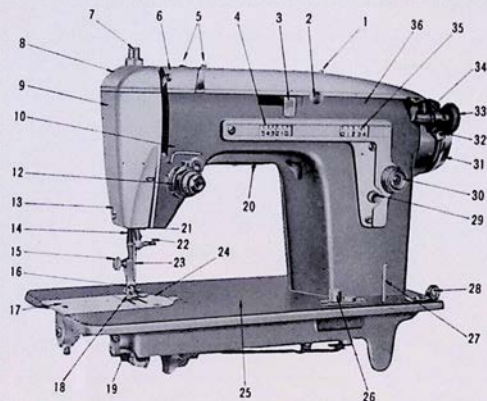

(Fig. 1)

- | | |
|----------------------------------|-----------------------------------|
| 1. Arm spool pin | 13. Face plate set screw |
| 2. Zigzag width stop lock | 14. Presser bar |
| 3. Zigzag width regulating lever | 15. Thumb screw |
| 4. Zigzag width indicator | 16. Presser foot |
| 5. Upper arm thread guide | 17. Slide plate |
| 6. Thread take-up lever | 18. Feed dog |
| 7. Automatic darning | 19. Shuttle race |
| 8. Top cover | 20. Switch for light |
| 9. Face plate | 21. Needle bar |
| 10. Lower arm thread guide | 22. Needle clamp |
| 11. Presser bar lifter | 23. Needle |
| 12. Thread tension regulator | 24. Needle plate |
| | 25. Bed |
| | 26. Drop feed buttons |
| | 27. Bed spool pin |
| | 28. Bobbin winder tension bracket |
| | 29. Reverse button |
| | 30. Stitch length regulating dial |
| | 31. Hand wheel |
| | 32. Bobbin winder push button |
| | 33. Bobbin winder wheel |
| | 34. Bobbin winder spindle |
| | 35. Stitch length indicator |
| | 36. Arm |

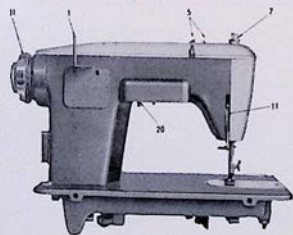

(Fig. 2)


RIGHT NEEDLE AND THREAD FOR RIGHT CLOTH

Size of Needles	Cloth	Size of Threads
No. 9	Thin calico, silk, serge and muslin.	No. 80-100 cotton thread or fine silk thread.
No. 10	Thin calico, cotton cloth, crepe de chine, hosiery and silk.	No. 60-100 cotton thread or ordinary silk thread.
No. 14	Ordinary cotton cloth, thick silk, thin woolen goods, towels and shirting.	No. 40-60 cotton thread or ordinary silk thread.
No. 16	Thick cotton cloth, serge and thin woolen goods.	No. 30-60 cotton thread or ordinary silk thread.
No. 18	Ordinary woolen goods, trousers, over-coats, thick calico and children's clothes.	No. 30-60 cotton thread or ordinary silk thread.

Note: Use a good quality mercerized cotton thread, if available, to avoid shrinking when laundered.

PREPARING TO SEW

TO REMOVE THE BOBBIN CASE

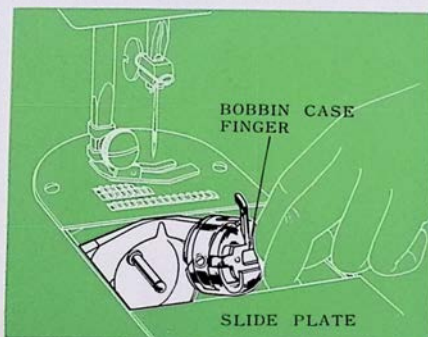

(Fig. 3)

Turn the hand wheel toward you until the needle bar is at its highest point.

Open the slide plate in the bed of the machine so that the bobbin case can be reached. (Fig. 3)

Insert the thumb and forefinger to open the latch and withdraw the bobbin case.

While the latch is held open, the bobbin is retained in the bobbin case and will not drop out.

On releasing the latch and turning the bobbin case downward, the bobbin will drop out.

The bobbin case must never be removed when the needle bar is in the lower position.

Neither should a bent needle be used, as it is liable to damage the bobbin case or the shuttle.

TO WIND THE BOBBIN

Disconnect the hand wheel by holding it in the left hand while turning the stop motion screw over toward you with the right hand, as shown in Fig. 4.




(Fig. 4)

Wind the free end of the thread several times round the bobbin and press it onto the spindle (A), passing the thread through the tension bracket (B)

Press the push-button (C) until the latch fits securely into the bobbin.

When the bobbin is filled, the latch automatically disengages and stops the winding operation.

By using the spool pin on the machine bed (D) spare bobbins can be wound and prepared without interfering with your sewing.

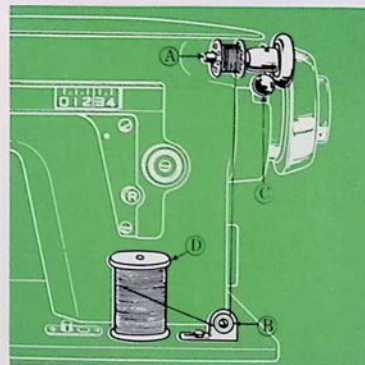

(Fig. 5)

TO THREAD THE BOBBIN CASE


Hold the bobbin between the thumb and forefinger of your right hand and pull out two or three inches of thread.

Hold the bobbin case in your left hand, turn the open side up and place the threaded bobbin into it. (Fig. 6)

With the right hand, guide the thread into the slot in the edge of the bobbin case. (Fig. 7)

Then pull the thread to the right, under the tension spring and into the delivery eye. (Fig. 8)

In order to keep the bobbin from dropping out of the case when turned with the open side down, always keep the hinged latch on the bobbin case open.

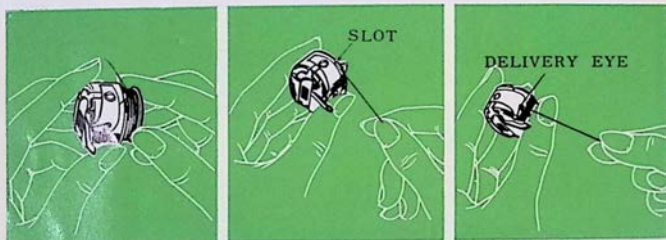

(Fig. 6)

(Fig. 7)

(Fig. 8)


TO INSERT THE BOBBIN CASE

Hold the bobbin case by the latch and place it on the center post of the shuttle with the finger of the bobbin case opposite the notch at the top of the shuttle.


Release the latch and press the bobbin case into the shuttle until the latch catches on the center post of the shuttle with a click. (Fig. 9)

Permit the bobbin thread to hang down freely a few inches.

(Fig. 9)

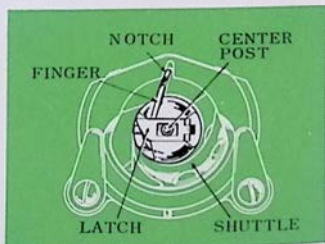

TO INSERT THE NEEDLE

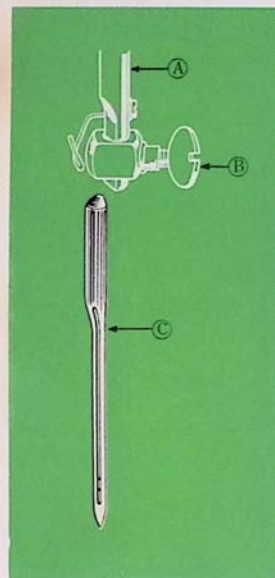


(Fig. 10)

Raise the needle bar (A) (Fig. 10) to its highest point by turning the hand wheel with your right hand.

Loosen the needle clamp screw (B) at the end of the needle bar, and insert the needle (C), with the flat side (Fig. 11) to the right, into the slot of the needle bar.

Insert the needle as far as it will go until it touches the pin which is visible in the slot above the needle clamp and tighten the needle clamp screw firmly.

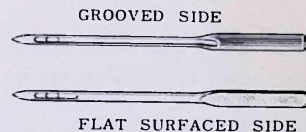


(Fig. 11)

TO THREAD THE NEEDLE

Raise the take-up lever (6) to its highest point.

Place a spool of thread on the spool pin on the back of the machine arm.

Pass the thread through the upper arm thread guides (1 and 2), through the lower arm thread guide (3), downward between the tension discs (4) from the back, up over the tension thread guard (5) from behind, down into the hook of the take-up spring (6) up

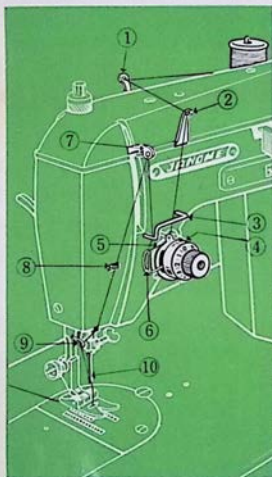

(Fig. 12)

and through the hole in the end of the take-up lever (7), down through the face plate thread guide (8) and into the wire thread guide (9) at the lower end of the needle bar; then from left to right through the eye of the needle (10). (Figs. 12, 13 & 14)




(Fig. 13)



(Fig. 14)

Draw about four inches of thread through the eye of the needle with which to commence sewing.

TO CHANGE THE NEEDLE PLATE

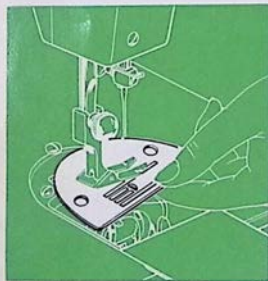

(Fig. 15)

Raise the needle to its highest point by turning the hand wheel, and raise the presser foot by lifting the presser bar lifter.

Move the slide plate to the left and lift the needle plate out as shown in Fig. 15.

Place another needle plate on the guide screws and press it down.

Note : When sewing straight stitches only, it is recommended to use the needle plate for straight stitching which is included in the accessories.

PATCHOMATIC DARNER

For releasing pressure on the foot, press down the ring (A) (Fig 16), which will allow the darner to spring up to its highest position and leave the material free from any pressure from the presser foot.

For sewing thin or light fabrics, press the top of the darner (B) down lightly to get the required slight pressure on the fabric.

For sewing thicker or heavier fabrics, push the top of the darner down further, in order to get a stronger pressure on the presser foot.



(Fig. 16)

BUILT-IN SEWLIGHT

To insert the electric-bulb, pull the knob (A) (Fig. 17) until the socket is tilted at an angle enabling you to screw the bulb in.


Always push the socket back into the position before sewing.

The light is turned on and off by means of the switch (B). (Fig. 17)



(Fig. 17)

TO START SEWING

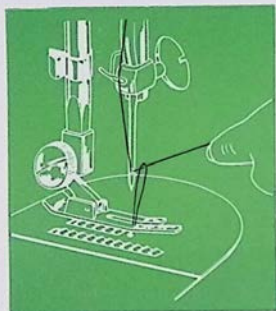

(Fig. 18)

Pull the upper thread through the needle eye and hold it loosely with the left hand.

Turn the hand wheel toward you with the right hand until the needle moves down and up again to its highest point, thus catching the lower (bobbin) thread.

Now pull the end of the upper thread you are holding and the bobbin thread will be brought up with it through the needle hole in

the needle plate, as shown in Fig. 18.


Place both ends of threads back under the presser foot.

Place the fabric to be sewn beneath the presser foot, lower the foot upon it and then start the machine according to the directions already given.

Note: For straight sewing the zigzag width regulating lever (Fig. 1-3) must be set to the right, so that the zigzag width indicator points to "0".

TO REGULATE THE THREAD TENSIONS


For ordinary stitching, the tension on the upper and lower threads should be equal so as to lock both threads in the center of the fabric.



A


If the tension on either thread is stronger than on the other, imperfect stitching will be the result.

If the tension on the upper thread is greater than that on the lower thread, it will lie straight along the upper surface of the fabric.



B

If the tension on the lower thread is greater than that on the upper thread, the lower thread will lie straight along the under-side of the fabric.




C

TENSION ON THE UPPER THREAD

The sewing machine will give perfect performance when the upper thread tension is correctly adjusted.

A) The tension on the upper thread becomes stronger when the tension-dial is turned in the direction marked (+). (Fig. 19)

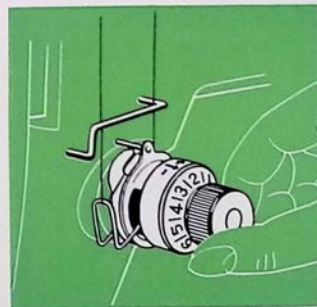


B) Contrariwise, the upper thread tension becomes weaker when the dial is turned in the direction marked (-).

C) Once the tension has been adjusted satisfactorily, the dial can be returned to the same dial-number to obtain the same result.

(Fig. 19)

TENSION ON THE LOWER THREAD

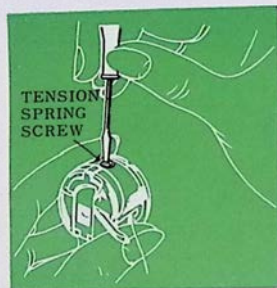


The tension on the lower thread is regulated by the screw on the bobbin case tension spring. (Fig. 20)

Use the small driver and tighten the screw slightly to increase the tension, or loosen it to slacken the tension.

(Fig. 20)

TO REGULATE THE DIRECTION OF FEED AND STITCHES

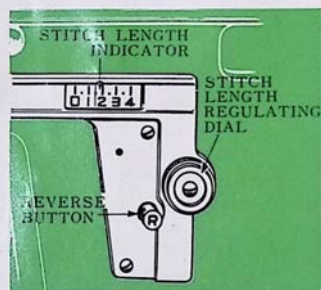

(Fig. 21)

For reverse stitching, press and hold reverse button "R" until the desired number of stitches are sewn.

To regulate the length of stitch, turn the stitch length regulating dial to the required length, as shown in the stitch length indicator window. (Fig. 21)


TO REMOVE THE WORK

Raise the needle bar to its highest point, lift the presser foot, draw the fabric back and cut the ends of threads.


Leave the machine threads about four inches long for resuming sewing.

SEWING APPLICATIONS

ZIGZAG SEWING

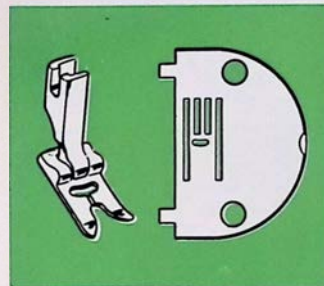

(Fig. 22)

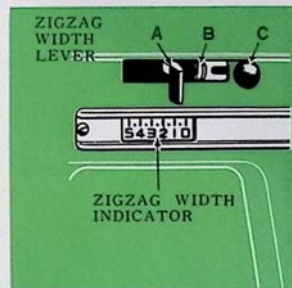

(Fig. 23)

Make sure the needle plate and the presser foot are for zigzag use. (Fig. 22)


The controls for zigzag stitch are located on the arm of the machine as shown in Fig. 23.

Notice the lever "A" which adjusts width of zigzag seams. By moving this lever gradually to the left toward "5" the machine will sew a zigzag seam of increasing width, depending on the position of the lever. (Fig. 23)

When sewing buttonholes, the stopper "B" will be found useful. This stopper serves as a stop for the lever "A".

To set the stopper "B", loosen the stop lock "C", move the stopper to the desired position, tighten the stop lock "C".

BUTTON SEWING

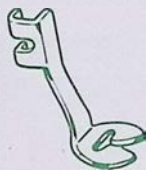

(Fig. 24)

Set the zigzag width lever "A" to 5 or less, according to the distance between the holes in the button.

Place the fabric under the presser foot.

Place the button between the presser foot and the fabric, with the holes in a horizontal line and lower the presser foot.

Turn the hand wheel slowly toward you, making sure the needle enters the holes in the button.


Slowly start the machine, making about six or seven stitches. To knot the thread, set the lever "A" to "O" and make three or four stitches.

When sewing four-hole buttons, first sew one set of two holes, then stitch into the second set of two holes and lock the thread with three or four plain stitches in the last hole in the same way as described above.

Raise the needle bar to its highest point.


Raise the presser bar, remove the regular presser foot, and attach the button sewing presser foot. (Fig. 24).

Drop the feed by pressing down the drop feed button "DARN" on the right hand corner of the bed. (Fig. 25)

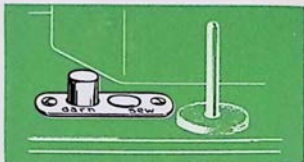


(Fig. 25)

BUTTONHOLE SEWING

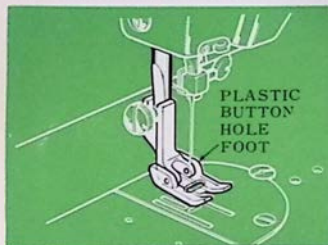

(Fig. 29-a)

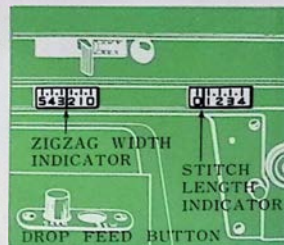


(Fig. 29-b)

Replace the presser foot with the plastic button hole presser foot. (Fig. 29-a)

With a pencil or tailors chalk, mark the position and length of button hole on the fabric.

Set the zigzag width lever to "2.4", and set the stitch length dial to "0.5". (Less if stitches are too far apart — slightly more if the stitches are too close together.) See Fig. 29-b.

Set the fabric on the machine bed with the starting point of button hole (A) underneath the needle and sew slowly to the point (B).



To sew the lower bar tack, press down the drop feed button "DARN" and set the zigzag width lever to "5".

Sew four or five stitches by turning the hand wheel toward you by your right hand.

Stop the machine when the needle comes to the Point (C).




Before sewing the right row of the button hole, set the zigzag width lever to "2.6" and press down the drop feed button "SEW".

Turn the hand wheel to bring the needle to the point (D).



(Fig. 26)

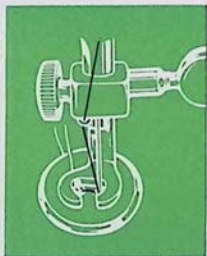

(Fig. 27)



(Fig. 28)



Raise the bar lifter and turn the fabric around 180 degrees.

Raise the needle to the highest point by turning the hand wheel to reset the zigzag width lever to "2.4".

Now lower the bar lifter and commence sewing the other row and bar tack in the same way for the left row and bar tack sewing.

To lock the thread, set the zigzag width lever to "0", press down the drop feed button "DARN" and sew a few stitches.

Cut the slot of the button hole with a seam ripper carefully not to cut through the bar tacks.



Note :

When moving the zigzag width lever, the needle must be raised up from the fabric lest the needle will be bent or broken.

To make a heavier button hole, sew twice by repeating the same procedure.

It is recommended to make some samples on a piece of fabric to acquire the correct stitch settings.

BRAID SEWING



(Fig. 30)

Remove the regular presser foot from the machine and attach the braider foot, as shown in Fig. 30.

Insert the braid through the thread guide spring on the cording foot and lay it under the foot.

Adjust width of zigzag seam and length of stitch to obtain a covering of the braid which


appears the most desirable for the material you are sewing.

Using a needle thread of a contrasting color will enhance the beauty of your braiding.

DARNING AND EMBROIDERY



(Fig. 31)

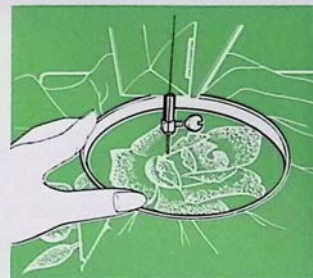

(Fig. 32)

Raise the presser bar lifter and remove the presser foot.

Drop the feed by pressing down the drop feed button.

Now your machine is ready for embroidery and darning.

Embroidery will be done most successfully when the fabric is stretched and fixed in an embroidery hoop. (Fig. 31)


Hold the hoop closely on the machine bed with both hands, press the material with your left forefinger in the vicinity of the needle.

This will help in holding down the material and will prevent the machine from making skipped stitches.

Manipulate work carefully and be sure to keep fingers out of the path of the needles.

Adjust thread tensions for the best appearance of embroidery work and slightly increase the bobbin thread tension to avoid the lower thread from being pulled up.

HEMMING

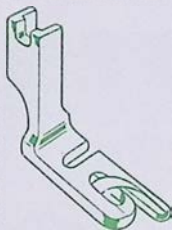

(Fig. 33)

Raise the needle to its highest point.

Raise the presser bar, remove the regular presser foot, and attach a hemmer foot. (Fig. 33)

Fold over the edge of the fabric approximately 1/8 inch wide, then fold it over again in the same way for a length of about 2 inches.

Insert this folded end into the spiral-formed opening (scroll) of the hemmer foot. (Fig. 34)

Move the fabric back and forth until the hem forms itself in the scroll.

Pull the fabric toward you until the beginning of the hem is just below the needle.


Guide the fabric into the hemmer foot while proceeding.

Note : Do not crowd fabric into the scroll, nor leave the scroll only partly filled with fabric.

Instead of a straight stitch, you can also use a zigzag stitch for this hemming operation.


Be sure, however, to adjust the width of the zigzag stitch so that it is as wide as the hem itself.

Using a very long stitch and tight tensions will produce a SHELL STITCH.

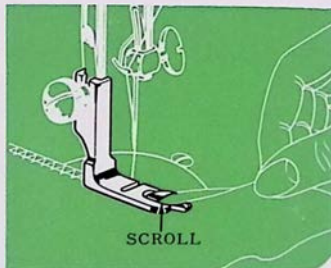

(Fig. 34)

SEWING ON ZIPPER

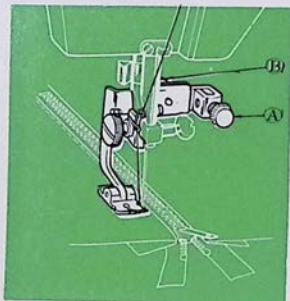

The double purpose zipper foot (zipper-quilter) included in the accessories enables you to attach a zipper on fabric.

Take off the hook-shaped quilting attachment from the zipper foot and attach the foot to the presser bar of the machine.

First open out the zipper and place fabric in the position under the needle.

(Fig. 35)

Set the machine for straight stitching. Loosen the thumb screw (Fig. 35-B) to set the foot on the left side of the needle and sew the left-side zipper as shown in Fig. 35.

To sew the right-side zipper, bring the foot to the right side of the needle.

TO USE QUILTING ATTACHMENT


The quilting attachment will enable you to sew parallel lines on padded fabrics without the necessity of marking them in advance.

There are two kinds of quilters in the accessories to be attached to the right or left side of the clamp on the zipper foot depending on the distance between the parallel lines.

To attach the quilter to the foot, loosen the thumb screw (A) and clamp the quilter by the thumb screw.


Adjust the curved hook to the desired distance from the needle and adjust it to press into the fabric.

When sewing, the hook should follow the preceding line of stitching. (Fig. 36)

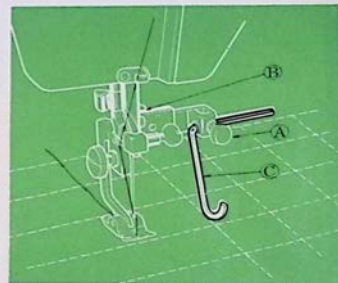

(Fig. 36)

CLOTH GUIDE

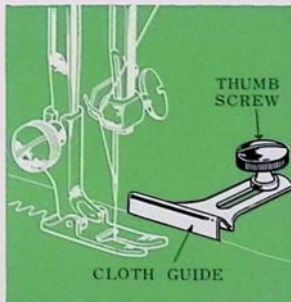


When you wish to sew close to the edge of the fabric or to make a wide hem up to 1 1/2 inches in a straight (or zigzag) and uniform line, the cloth guide will be of help. To attach the guide, place it over a hole to the right of the needle in the bed of the machine. (Fig. 37)

Attach the guide with the thumb screw adjusting it to the desired distance, and then tighten it firmly.

(Fig. 37)

MAINTENANCE

TO OPEN THE SHUTTLE RACE

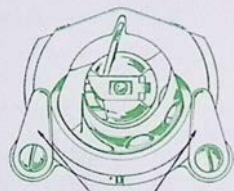

(Fig. 38)

The design of the shuttle race enables you to do this most easily and efficiently, without sacrificing the precision which is so essential to these parts.


To open the shuttle race, first raise the needle bar to its highest point and remove the bobbin case. (Fig. 38)

Next, twist the shuttle race ring clasps outward (Fig. 39), then take out the shuttle race ring.

Carefully remove the shuttle and clean the shuttle race.

Replace the shuttle ring, and lock it with the clasps.

Be careful not to drop the shuttle lest you damage it.

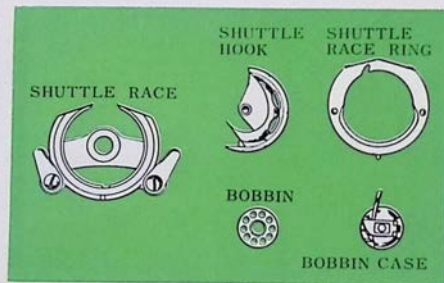


(Fig. 39)

TO OIL THE MACHINE

To ensure easy and free working of the machine, it is necessary that all moving parts be covered with a film of oil and not be allowed to become dry.

The shuttle race should also be oiled frequently.

The machine should be oiled at the places indicated by arrows in Fig. 40 and Fig. 41.

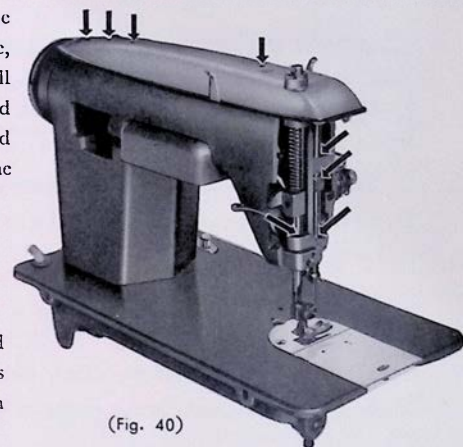


(Fig. 40)

To remove the face plate, loosen the face plate set screw.

(Fig. 1—No. 13)

After oiling, run the machine rapidly for a few minutes to work the oil into the bearings.

When in constant use the machine should be oiled two or three times a week.

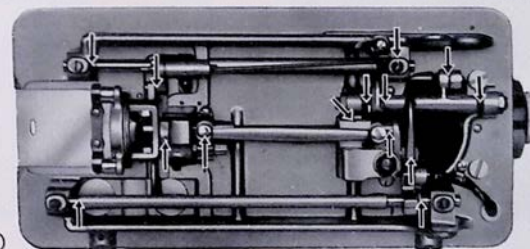

(Fig. 41)

SETTING A MOTOR TO THE MACHINE


TO ATTACH THE MOTOR TO THE MACHINE

Place the motor bracket on the tongue over which the slot in the motor bracket fits.


Then insert the screw and after shifting the motor upward as far as it will go, tighten the screw. (Fig. 42)

TO PLACE THE BELT ON THE MOTOR

Place the belt on the machine. Then slip the belt in the groove in the hand wheel, and force it in the motor pulley. (Fig. 43)

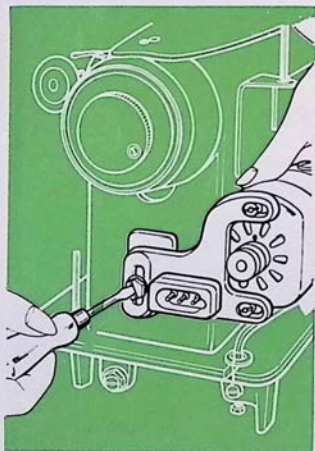

(Fig. 42)

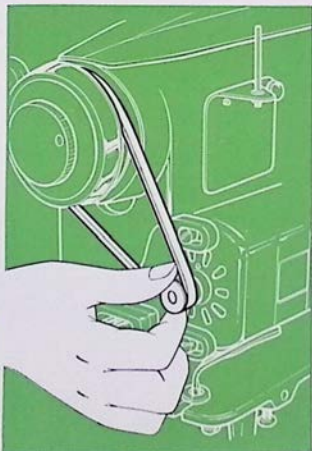

(Fig. 43)

TO REGULATE THE BELT TENSION


To adjust the belt tension, loosen the attaching screw about one turn with a screw driver. This will allow the motor to drop downward.

Then tighten the screw firmly, and the belt should have the correct tension. (Fig. 44)


TO OIL THE MOTOR

It is necessary to oil the motor occasionally in order to keep the bearings from wearing out.

Apply a few drops of oil to the oil hole as shown in Fig. 45.

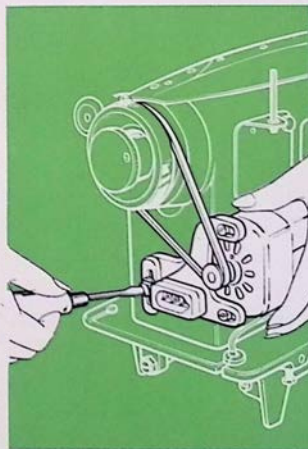

(Fig. 44)

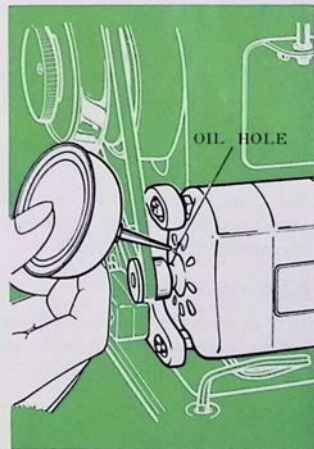

(Fig. 45)

CHECK-UP FOR SMOOTH SEWING

MACHINE WORKING HEAVILY

If the machine works hard after standing idle for some time, apply a little kerosene in place of oil.

Then run the machine rapidly to clean the bearings, and oil it with sewing machine oil. The use of inferior oil is usually the cause of the machine working heavily.

THREAD BREAKS

If the needle thread breaks, it is probably due to one of the following causes: The machine being improperly threaded.

The tensions being too tight.

The needle being bent or having a blunt point.

The thread being too coarse for the size of the needle.

The thread take-up spring broken.

If the lower thread breaks, adjust the bobbin tension, also see that the inside of the bobbin case and the underneath of the tension spring are free from lint.

SKIPPED STITCHES

A bent or blunted needle is often the cause of this. See that the needle plate is accurately inserted. Remove the needle plate and after ascertaining that the feed is clean and working freely, replace the needle plate.

NEEDLE BREAKS


See that the needle is not bent and avoid pulling the material when stitching; either condition will cause the needle to strike on the needle plate and break.

MATERIAL PUCKERS





This is generally due to incorrect tension. See also that both the bobbin case and the needle are properly threaded and that the thread used is of good quality and the correct size for the needle.

STITCHES LOOP

This can be regulated by the tensions. See also that both the bobbin case and the needle are properly threaded and that the thread used is of good quality and the correct size for the needle.

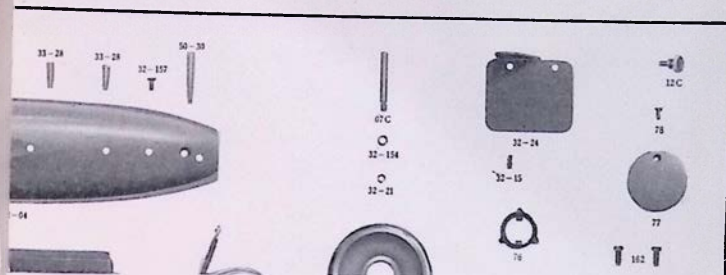

PARTS LIST

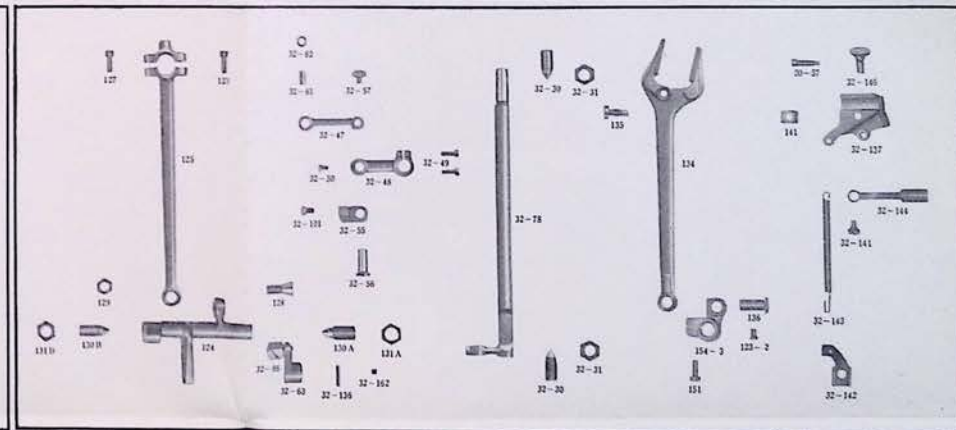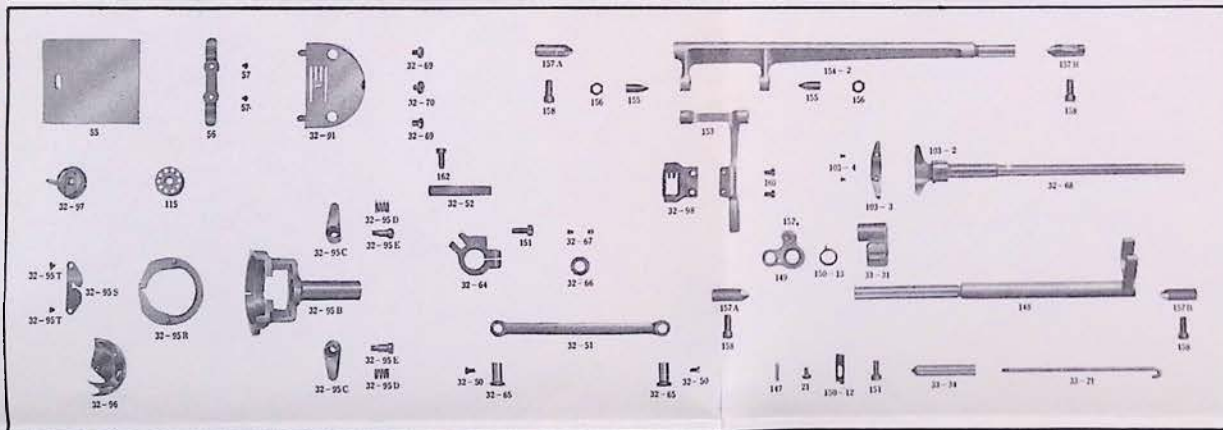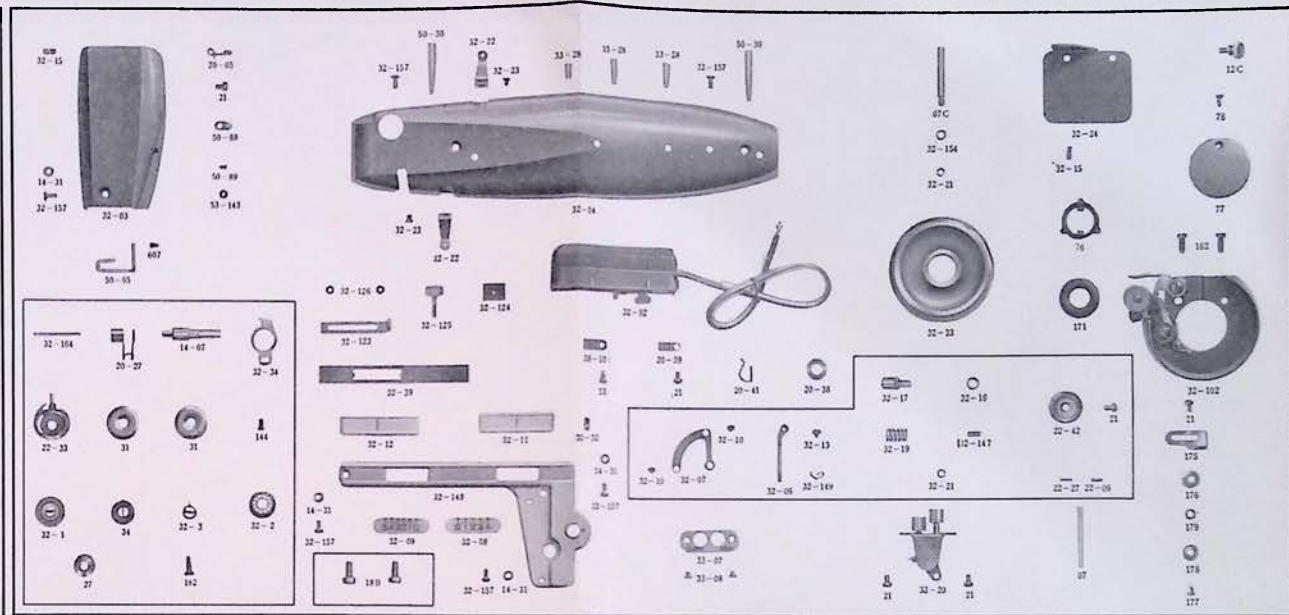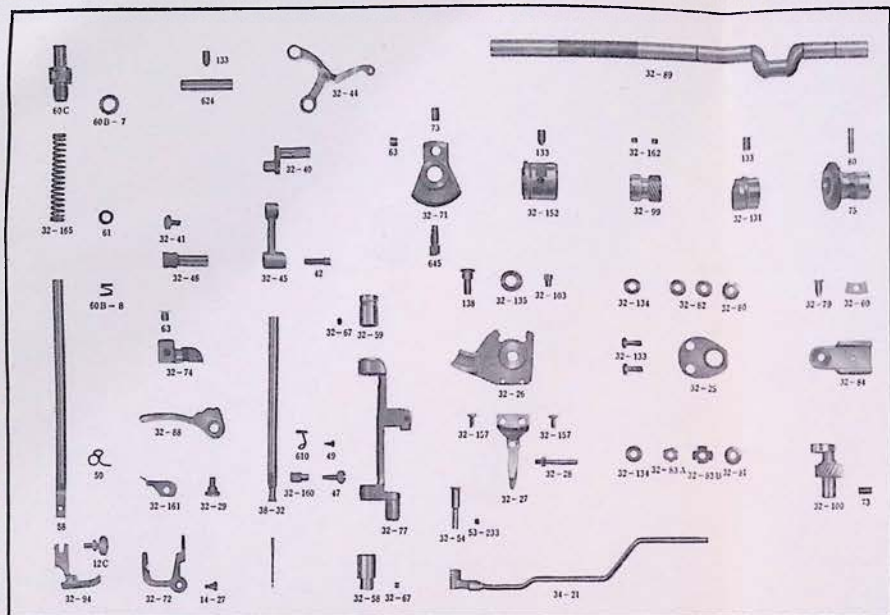

07	Bed spool pin	78	Friction screw stop screw	152	Feed lifting rock shaft crank roller	22-27	Dial knob pin spring	32-45	Needle bar crank	32-83B	Zigzag cam box bracket washer	32-144	Reverse push button
07C	Upper arm spool pin	80	Hand wheel bushing pin			22-33	Tension thread guard	32-46	Needle bar connecting stud	32-84	Zigzag cam box	32-146	Feed regulator hinge screw
12C	Arm shield screw, Presser foot thumb screw.	103-2	Shuttle driver body	153	Feed bar	22-42	Stitch length dial knob	32-47	Vertical shaft link	32-86	Oscillating shaft crank slide block	32-147	Feed regulator center screw
18B	Hinge clamping screw	103-3	Shuttle driver spring	154-2	Feed rock shaft	32-03	Face plate	32-48	Vertical shaft driving rod			32-148	Stitch indicator frame
21	Face plate thread guide set screw, Drop feed set screw, Feed lifting rock shaft crank plate set screw, Lamp cord set plate screw, Stitch length dial knob set screw, Bobbin winder tension bracket set screw.	103-4	Shuttle driver spring set screw	154-3	Feed rock shaft bracket	32-04	Top cover	32-49	Vertical shaft set screw	32-88	Presser foot lifter	32-149	Stitch indicator spring
		115	Bobbin	155	Feed bar center screw	32-06	Stitch length indicator ratchet	32-50	Shuttle race driving rod pin set screw, Vertical shaft set screw (small)	32-89	Upper shaft	32-152	Upper shaft bushing
		123-2	Hinge pin set screw	156	Feed bar center screw nut	32-07	Stitch length indicator crank			32-91	Needle plate	32-154	Spool pin washer
		124	Oscillating rock shaft	157A	Center bar (large)	32-08	Stitch length numbered plate	32-51	Shuttle race driving rod	32-92	Lamp unit	32-157	Stitch indicator frame set screw, Zigzag width lever set screw, Face plate set screw, Top cover set screw
		125	Crank connecting rod	157B	Center bar (small)	32-09	Zigzag width numbered plate	32-52	Shuttle race guide shaft	32-94	Presser foot		
		127	Crank connecting rod screw	158	Center bar set screw	32-10	Stitch length indicator crank set screw	32-54	Zigzag crank bushing pin	32-95U	Shuttle race unit		
		128	Crank connecting rod hinge screw	160	Feed dog set screw			32-55	Zigzag crank connecting rod bracket	32-95B	Shuttle race body		
		129	Hinge screw nut	162	Thread tension stud set screw, Belt cover set screw, Shuttle race guide shaft set screw.	32-11	Stitch length indicator plate			32-95C	Shuttle race clamps	32-160	Needle clamp
27	Thread tension dial knob	130A	Oscillating rock shaft center screw (small)			32-12	Zigzag width indicator plate	32-56	Vertical shaft link bushing	32-95D	Shuttle race clamp spring	32-161	Presser bar lifter washer
31	Thread tension disc					32-13	Stitch length indicator set screw	32-57	Vertical shaft link bushing cap	32-95E	Shuttle race clamp set screw	32-162	Oscillating rock shaft crank screw, Upper shaft zigzag gear set screw
32-1	Thread tension body	130B	Oscillating rock shaft center screw (large)	171	Bobbin winder rubber ring	32-15	Arm shield set screw, Face plate screw	32-58	Zigzag crank bushing (lower)	32-95R	Shuttle race ring		
32-2	Thread tension numbered dial			174U	Bobbin winder tension unit			32-59	Zigzag crank bushing (upper)	32-95S	Shuttle race spring		
32-3	Thread tension numbered dial washer	131A	Center screw nut (small)	175	Bobbin winder tension bracket	32-17	Stitch length indicator pinion	32-60	Zigzag cam box slide block	32-95T	Shuttle race spring set screw	32-164	Thread tension releasing lever pin
		131B	Center screw nut (large)	176	Bobbin winder tension disc (large)	32-18	Stitch length indicator pinion ring	32-61	Vertical shaft link pin	32-96	Shuttle hook		
34	Thread tension spring	133	Upper shaft bushing set screw, Thread take-up link pin set screw, Feed cam set screw.	177	Bobbin winder tension bracket shaft	32-19	Feed regulator screw	32-62	Zigzag width adjuster collar	32-97	Bobbin case	32-165	Presser bar spring
42	Needle bar connecting stud screw					32-21	Spool pin clamping nut	32-63	Oscillating shaft crank	32-98	Feed dog	33-07	Drop feed indicator plate
47	Needle clamping screw					32-22	Top cover thread guide	32-64	Shuttle race guide	32-99	Upper shaft zigzag gear	33-08	Drop feed indicator plate set screw
49	Needle bar thread guide set screw	134	Forked rod	178	Bobbin winder tension disc (small)	32-23	Top cover thread guide set screw	32-65	Shuttle race driving rod pin	32-100	Zigzag cam	33-20	Drop feed button
50	Thread cutter	135	Forked rod screw					32-66	Oscillating shaft collar	32-101	Zigzag crank connecting rod set screw	33-21	Drop feed plunger rod
53	Lamp cord set plate set screw	136	Forked rod hinge pin	179	Bobbin winder tension spring	32-24	Arm shield	32-67	Oscillating shaft collar set screw, Zigzag crank bushing set screw			33-28	Plastic oil tube
55	Slide plate	138	Zigzag width regulator set screw	607	Arm thread guide set screw	32-25	Zigzag cam box bracket			32-102	Bobbin winder unit	33-31	Feed lifting rock shaft bracket
56	Slide plate spring	141	Feed regulator slide block	610	Needle bar thread guide	32-26	Zigzag width adjuster	32-68	Oscillating shaft	32-103	Zigzag width adjuster stopper	33-34	Drop feed plunger
57	Slide plate spring set screw	144	Check spring stopper positioning screw.	624	Thread take-up link pin	32-27	Zigzag width lever	32-69	Needle plate positioning screw	32-123	Zigzag width stopper	34-21	Zigzag crank connecting rod
58	Presser bar			645	Thread take-up crank screw	32-28	Zigzag width lever pin	32-70	Needle plate set screw	32-124	Zigzag width stopper plate	38-10	Lamp cord set plate
60C	Patchomatic darning	148	Feed lifting rock shaft	14-07	Thread tension stud	32-29	Presser foot lifter hinge screw	32-71	Thread take-up crank	32-125	Zigzag width stopper screw	38-32	Needle bar
60B-7	Patchomatic darning washer	149	Feed lifting rock shaft crank	14-27	Thread tension releasing lever screw	32-30	Vertical shaft screw center	32-72	Thread tension releasing lever	32-126	Zigzag width stopper nut	38-47	Needle bar cap
60B-8	Patchomatic darning spring	147	Feed lifting rock shaft crank stopper	14-31	Fiber washer	32-31	Vertical shaft screw center nut	32-74	Presser bar guide bracket	32-131	Feed cam	50-30	Plastic oil tube (large)
61	Presser bar spring washer			20-05	Face plate thread guide	32-32	Stitch length indicator slide block	32-77	Zigzag crank	32-133	Zigzag cam box bracket set screw	50-88	Face plate thread guide
63	Presser bar guide bracket screw, Needle bar connecting link set screw.	150-12	Feed lifting rock shaft crank plate	20-27	Check spring	32-33	Hand wheel	32-78	Vertical shaft	32-134	Zigzag cam box bracket washer	50-89	Face plate thread guide set screw
		150-13	Feed lifting rock shaft crank spring	20-38	Lamp cord rubber grommet	32-34	Check spring stopper	32-79	Zigzag cam box bracket pin	32-135	Zigzag width adjuster washer		
73	Needle bar connecting link set screw, Zigzag cam shaft set screw			20-39	Lamp cord set plate	32-39	Stitch length indicator back plate	32-80	Zigzag cam box disc (upper)	32-136	Oscillating shaft crank pin	50-95	Arm thread guide
75	Hand wheel bushing	151	Shuttle race guide set screw, Feed rock shaft bracket screw, Feed lifting rock shaft bracket screw	20-41	Lamp cord set plate	32-40	Needle bar connecting link	32-81	Zigzag cam box disc (lower)	32-137	Feed regulator	53-143	Face plate thread guide set nut
76	Stop motion washer			20-57	Feed regulator small screw	32-41	Needle bar crank set screw	32-82	Zigzag cam box washer	32-141	Reverse push button set screw	53-233	Zigzag crank bushing pin set screw
77	Friction screw			22-06	Stitch length dial knob pin	32-44	Thread take-up link	32-83A	Zigzag cam box bracket nut	32-142	Feed regulator spring set plate		
				22-08	Dial knob shaft					32-143	Feed regulator spring		

