

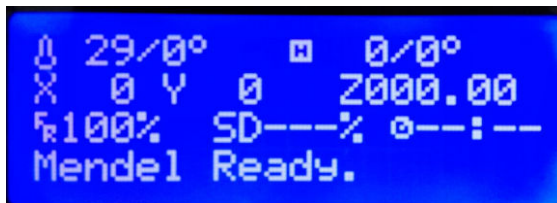


## “Err: MINTEMP” (Alarm processing method)

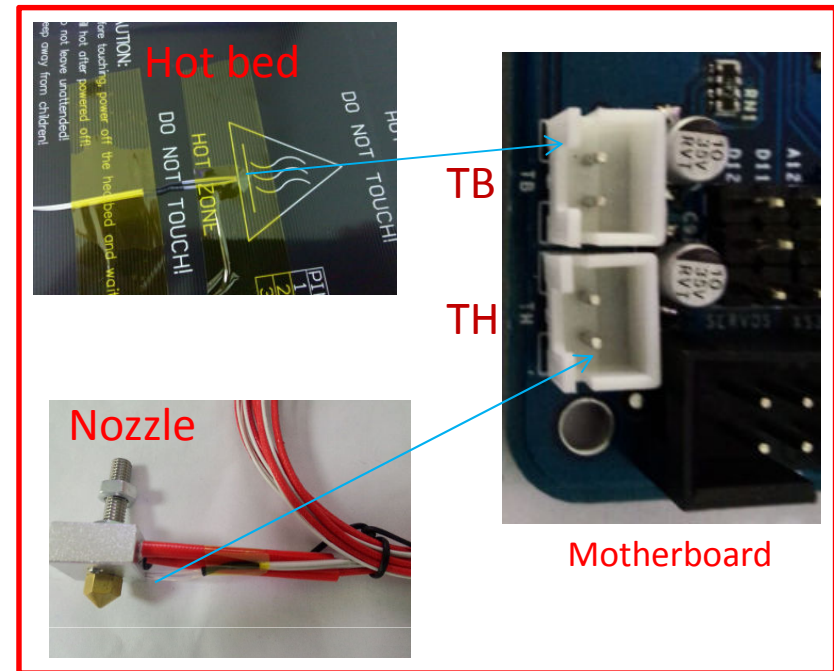

Reason: the hot bed thermistor is not connected to the main board "TB";

② (No temperature display)

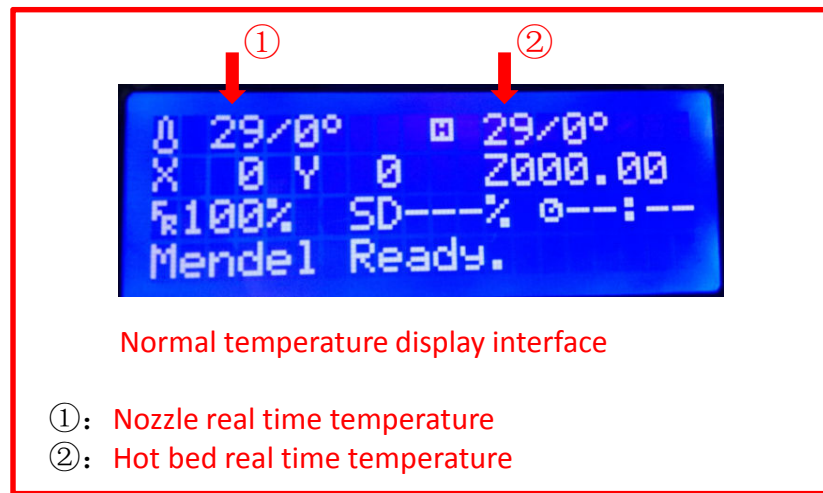

Reason: the nozzle thermistor is not connected to the main board "TH";

① (No temperature display)




Reason: the hot bed and the nozzle thermistor are not connected to the main board "TB", "TH";

① ② (No temperature display)



① ② (Temperature display)

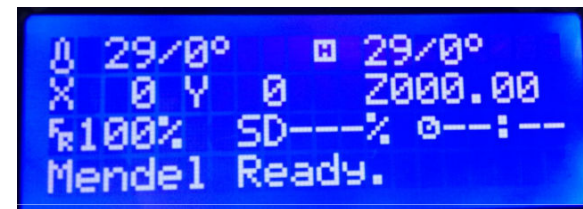

( Normal temperature display interface )

。 ( Press the reset button on the motherboard or after power-off restart, Appear "Ready Mendel", "Err: MINTEMP " Alarm release.)

( Reset button )

