
Rallybox User Manual

Software Nero2.1 · manual updated 4 November 2026

Driver Display

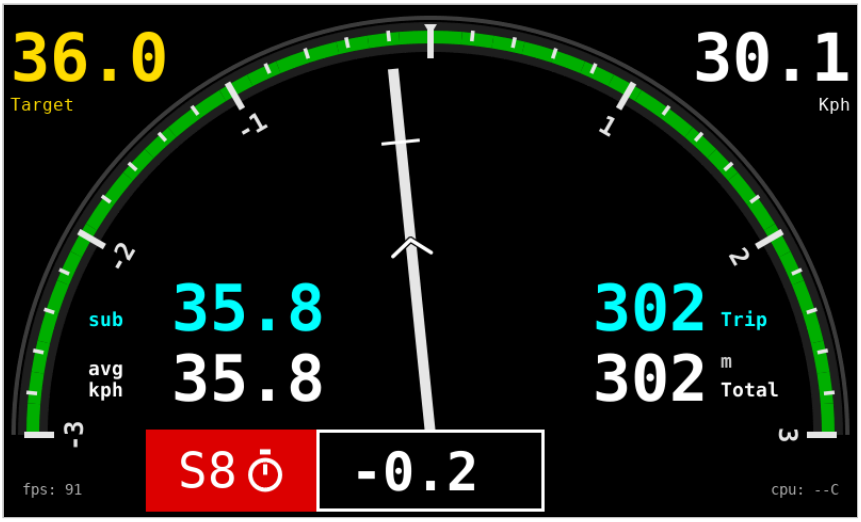


Driver display.

Navi page (greek rally)



Co-pilot display, navigation page (greek rally type, stage running).

Navi page (italian rally)

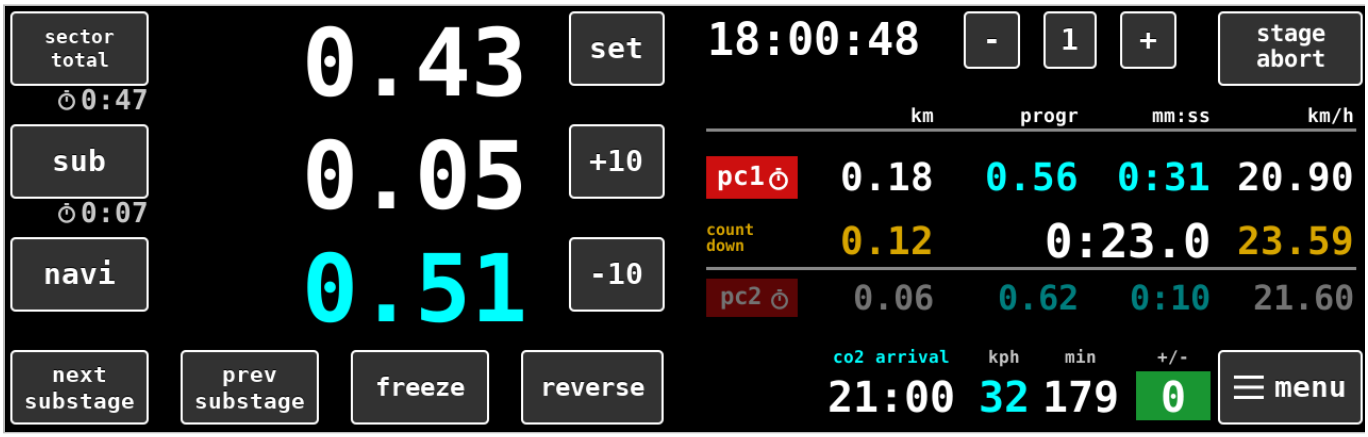


Co-pilot display, navigation page (italian rally type, inside a timed trial).

RALLY TYPES

The box works in one of three **rally types**, chosen under `settings` › **Rally type**. The choice changes the navigation and segments pages.

Rally type	Use it for	In this manual
greek	Stages start at roadbook boxes with zero distance at a set minute; speeds change at roadbook boxes.	Programming, Starting, Navigating
italian	A stage is a **sector** from one time control (CO) to the next, made of untimed driving, timed trials (pc), average trials (pm), stamp checks (ct) and the closing time control (co).	Programming, Starting, Navigating
surrey	Stages start at landmarks (with unspecified distances) within roadbook boxes displaying cumulative distance; scored on time taken.	Programming, Starting, Navigating

GETTING AROUND

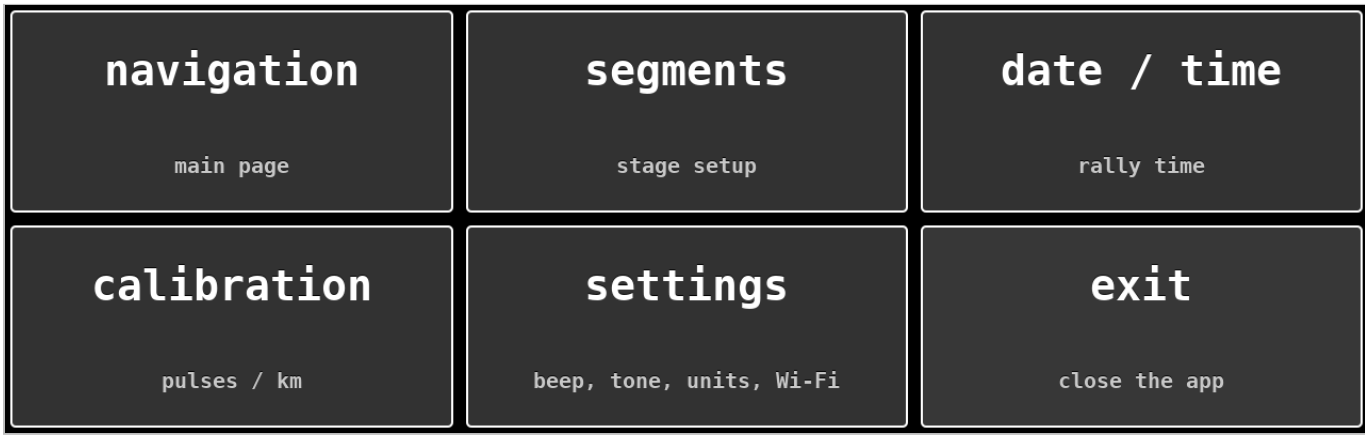

The menu page.

Every page has a `menu` key at the bottom right. Press it to reach the main menu.


- **navigation** – used while navigating and on stages.
- **segments** – stage setup.
- **date / time** – set rally time.
- **calibration** – set pulses per kilometre.
- **settings** – beep, tone, rally type, units and logging; the spanner key opens the **Setup** sub menu (displays, Bluetooth speaker, Wi-Fi and the phone link, software updates).
- **exit** – saves the settings and closes the program. It does not switch the Raspberry Pi off.

Numbers are typed on the on-screen keypad: C clears a selected entry and the arrow key deletes one character. There is no Enter key: an entry is saved when you tap another box or leave it alone for a second.

GREEK RALLY TYPE

Programming Greek Stages

Select **greek** rally from the settings page and then select `segments` from the main menu. The segments page will display a Greek flag. The system defaults to metres (rather than km) but this can be overridden in settings.

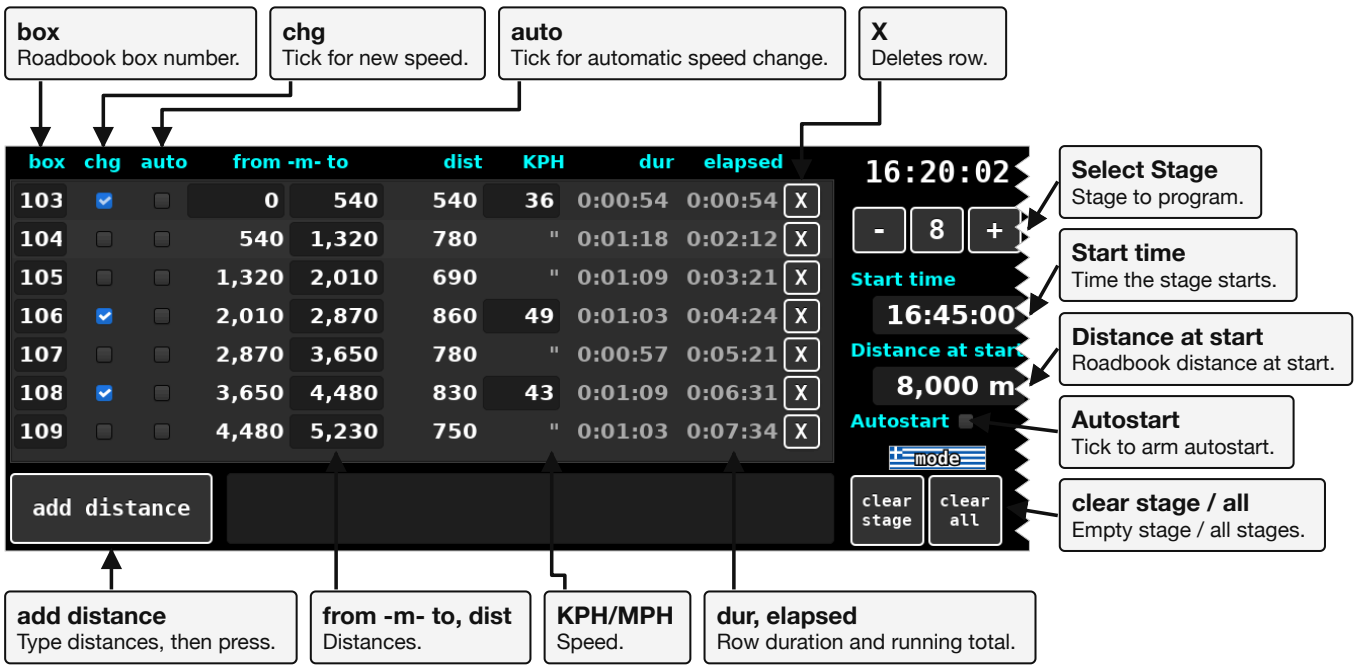

Stage 8: one row per roadbook box, speed changes at boxes 103, 106 and 108.

Entering Greek stage data

Enter every roadbook box in the stage, or only the rows with speed changes. With every box entered, Beep Assist navigation (when on) beeps ahead of each box.

1. Select the stage with **– n +**, or tap the number (1–99).
2. Tap the box beside `add distance` and type the cumulative distance at which each row ends, separated by semicolons: `540;1320;2010` (or `0.54;1.32;2.01` in km). Later entries are appended or inserted as needed.
3. Press `add distance`.
4. For rows with speed changes tick **chg** and enter the speed.
5. Tick **auto** for the box to change speed automatically at the specified distance. If unticked, the navigator must press `next speed` on the navigation page.
6. **Start time** – when the stage starts (hh:mm:ss).
7. **Distance at start** – the roadbook distance at the start line; used for Stage arrival.
8. **Autostart** – tick to arm an autostart at today's start time (a past time is refused). It can also be switched on/off on the navigation page.


Entries save automatically under the stage number shown. A running stage cannot be edited.


`upload stage` on the phone's Seg page opens a window. It shows the CSV columns for greek, surrey and italian, and marks the one this box is using. Choose the CSV, or paste it, then press `check` and `load`. A stage that is already programmed asks before it is replaced. The same key on the box opens a file window and loads that file. It is greyed while a stage is running.

Clearing stages

`clear stage` empties the stage shown; `clear all` empties every stage. Both ask first.

Starting a Greek Stage

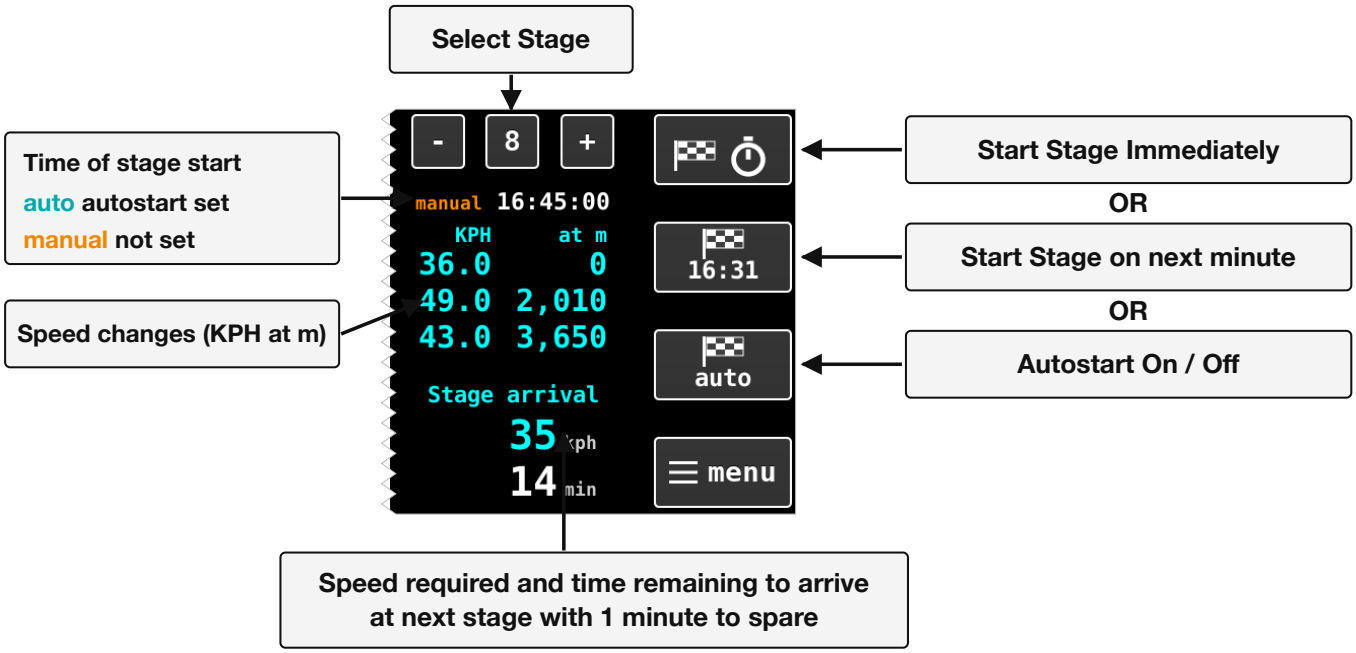

A stage can be started via preprogrammed autostart (using the time programmed on the Segments page), or by pressing the Start Now  or Start On Next Minute  button.

Autostart: When autostart is armed the button  will appear as black on white, and the word **auto** (cyan) appears next to the start time. Autostart can be quickly toggled on/off using the Autostart button on the navigation display. When Autostart is not armed the word **manual** (orange) appears next to the start time. A start time that has passed, with nothing armed or running, is crossed out in red. After `start now` the panel reads **manual** and the time of the press; the time shrinks to leave a gap before the word.

What happens with autostart:

- With less than 5 minutes to the start the driver's display will show a countdown clock.
- The Total and Trip distances will zero at the start time.
- The timer resets at the start time.

Start on Next Minute: The Start on Next Minute button constantly updates to show the next whole minute. Pressing it sets a type of autostart at that minute.

What happens with Start on Next Minute:

- Pressing the button automatically overrides any programmed autostart.
- The Total and Trip distances zero immediately (not at the departure minute). Any distance driven between pressing and the start minute will be included in the stage distance.
- The timer resets at the start minute.

Start Now: Pressing it starts a stage immediately.

What happens with Start Now:

- Pressing the button overrides any programmed autostart.
- The Total and Trip distances zero immediately.
- The timer resets immediately.
- On a Greek stage the Trip history clears. Italian and Surrey keep it.

Starting scenarios

Regular on-schedule start – in most instances this will be handled correctly by a pre-programmed autostart which resets the distances and timer at the allotted start time.

Late arrival at start – there are 2 ways to handle this scenario.


- Have autostart start the stage on time (before you have arrived) and press Total to zero the distances at the start line and attempt to catch up during the stage. This is the preferred method.
- Press Start Now – if a stage is already running the box will ask you to confirm but will measure as of the original button press. Because the timer will have started late the driver will need to catch up and target a reading where the seconds ahead is equal to the delay in starting.

Obstructed start – if traffic or the car may make you late to the first timing point, press the next-minute start key (flag with a time) on the start line instead of using autostart, and move off shortly before departure. Total and Trip reset when pressed; timing starts at the minute.

Navigating a Greek Stage



Stage 8 running, 302 m in: 1,708 m and 2 min 51 s to the speed change at 2,010 m. Stage arrival is blank once the stage's start time has passed.

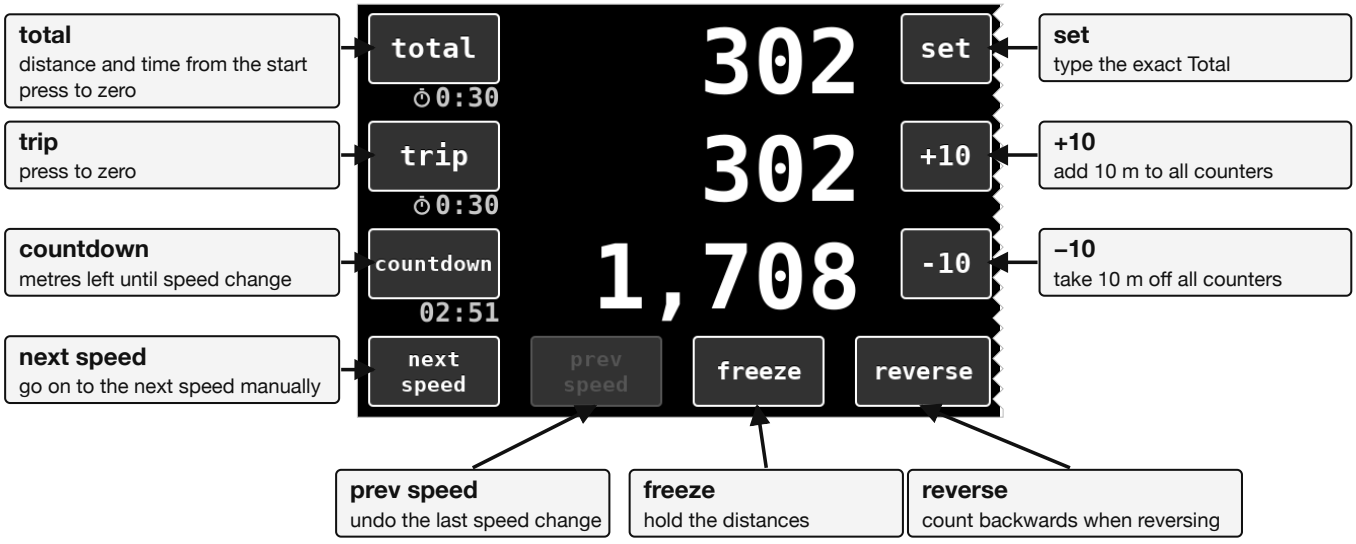

total

Distance and elapsed time since the start. Press to zero the distance.

- Outside a stage: zeroes the distance and timer, not Trip.
- Waiting for a timed autostart: zeroes Total, Trip and the timer without asking; the autostart zeroes them again at its start time. (An autostart cannot be armed during a stage.)
- If Start on Next Minute has been selected: zeroes Total and Trip without asking; the timer starts at the minute.
- During a stage (a missed start): asks first, then zeroes Total and Trip from the press; the stage clock keeps running.

trip

Shows intermediate distance and time. Press to zero it; the old figure appears in the **Trip history** column. Trip also restarts at every speed change. Starting a Greek stage clears that column, including an autostart or Start on Next Minute. Italian and Surrey keep it.

countdown

Distance and time to the next speed change. If that change is not automatic, press `next speed` there.

next speed and prev speed

`next speed` is used to move to the next speed manually. `prev speed` undoes the last speed change. The buttons can also be used to override automated speed changes.

+10, set and –10

`+10` / `–10` move all the counters (Total and Trip, and navi in the other rally types) 10 m per press; `–10` cannot take a counter below zero; `set` allows a precise distance to be entered for Total (Trip unchanged). During a stage, corrections apply across average speeds and timing errors.

freeze and reverse

`freeze` stops the distances from counting while lit; clocks and timers continue – use it after a navigation error. On release, counting resumes from the frozen figures. `reverse` makes Total and Trip (as well as countdown) count backwards. It is typically used when reversing after overshooting a junction, as the box only counts pulses and has no concept of direction. Freeze overrules Reverse if both are pressed. The buttons display as black on white when active and a whooping sound is emitted. With reverse pressed the distances can go negative.

A-B, B-C zero

Where a rally is measured on an AB, BC basis and this option is selected in settings, the `A–B, B–C zero` button appears under the Trip history. Pressing this during a stage when a timing mark or timing marshal is seen sets the timing error in the driver's display to zero, so that the average speed calculation is made independently between each timing mark.

The popup shows the error to remove and the adjustment already applied.



- `Yes` zeroes the needle at this instant.
- `Reset to 0.0` removes the adjustment so the true error shows.
- `No` changes nothing.

The stage panel display

The column shows the selected stage, the start time of the stage and autostart status, the distances at which speed changes commence and the speed needed (and allotted time) to reach the next stage with 1 minute to spare.

ITALIAN RALLY TYPE


Italian rallies have many short back-to-back timed trials, so each time-control section is programmed as linked substages.

The substage types:

Type	What it is	How the box treats it
navi (grey)	Untimed driving between controls.	A required speed is worked out from the sector's total duration so the car arrives at the card's time.
pc (red, stopwatch)	Timed trial between two pressure tubes. Between linked pcs a single tube ends one pc and starts the next.	Speed is worked out from the subsector's duration.
pm (yellow)	Average speed check with unknown timing points.	Duration is worked out from the given speed.
ct (blue)	Stamp check: no time.	Untimed, like navi.
co (green)	The time control that ends the sector; arrive in your minute.	The last row; the co arrival time is worked out from the card.

Programming Italian Sectors

Select **italian** rally from the settings page and then select `segments` from the main menu. The segments page will display an Italian flag. The system defaults to km (two decimals) but this can be overridden in settings.

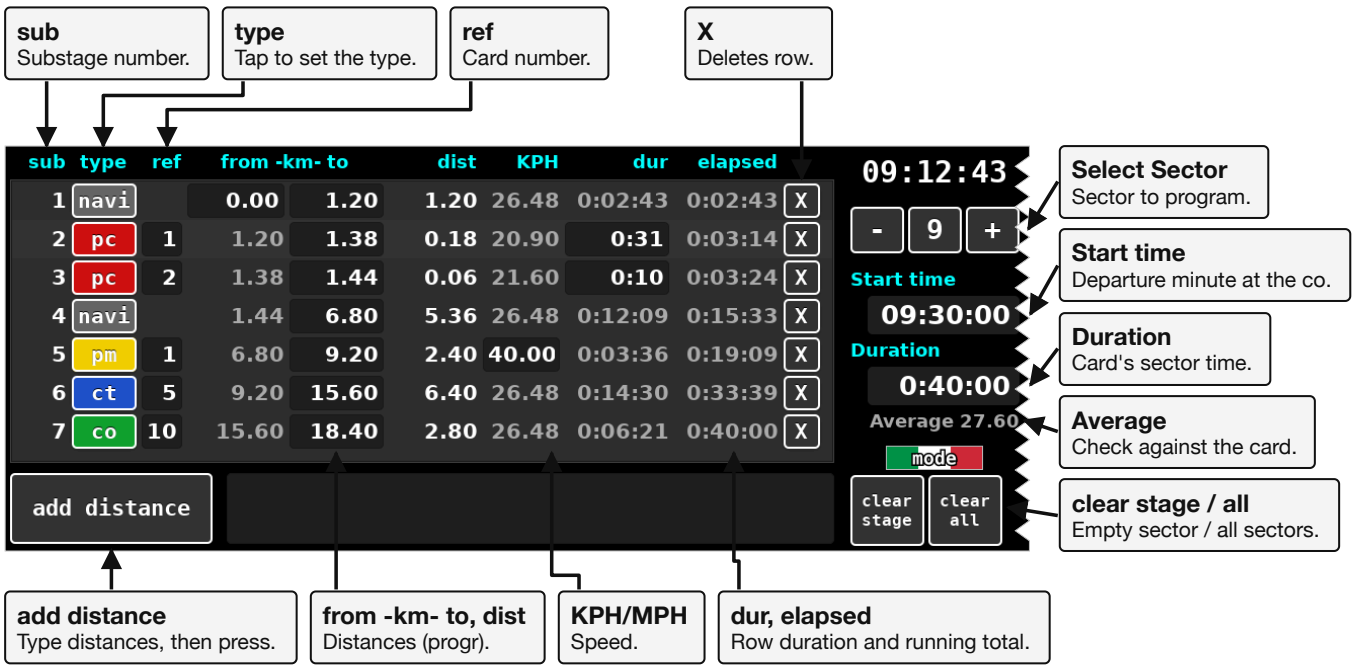

An example first sector, co 1 → co 2, with one of each substage type: navi, two linked pcs, navi, pm, ct and the closing co.

Entering Italian sector data

Enter every substage on the organiser's Times and Distance Table (TDT) starting from the row after the opening time control, up to and including the closing one (here co 2). The opening co line (0.00 km) is not entered but its time goes in **Start time**.

1. Select the sector with **– n +**, or tap the number (1–99): the number of its starting time control.
2. Tap the box beside `add distance` and type the cumulative distance (**progr**) at which each substage ends, separated by semicolons: `1.20;1.38;1.44;6.80;9.20;15.60;18.40` (or `1200;1380;1440;6800;9200;15600;18400` in metres). Later entries are appended or inserted as needed; take care inserting a distance inside an existing pc or pm which will get recalculated.
3. Press `add distance`.
4. Tap the **type** tag to cycle navi → pc → ct → pm → co. **ref** is the card's number (a new row gets the last of its type plus one but can be overridden).
5. For pc rows enter the card's time (m:ss) in **dur**; the speed is worked out.
6. For pm rows enter the speed in the KPH/MPH column; the duration is worked out.
7. **Start time** – enter the departure minute at the opening co (hh:mm:ss).
8. **Duration** – enter the card's sector duration (h:mm:ss). The **Average** displayed faintly below should correspond to that given on the TDT sheet.


Typed figures are white on dark boxes; worked-out figures grey. Entries are saved automatically. A running sector cannot be edited.

`upload stage` on the phone's Seg page opens a window. It shows the CSV columns for greek, surrey and italian, and marks the one this box is using. Choose the CSV, or paste it, then press `check` and `load`. A stage that is already programmed asks before it is replaced. The same key on the box opens a file window and loads that file. It is greyed while a stage is running.

Clearing sectors

`clear stage` empties the sector shown; `clear all` empties every sector. Both ask first.

Starting an Italian Sector

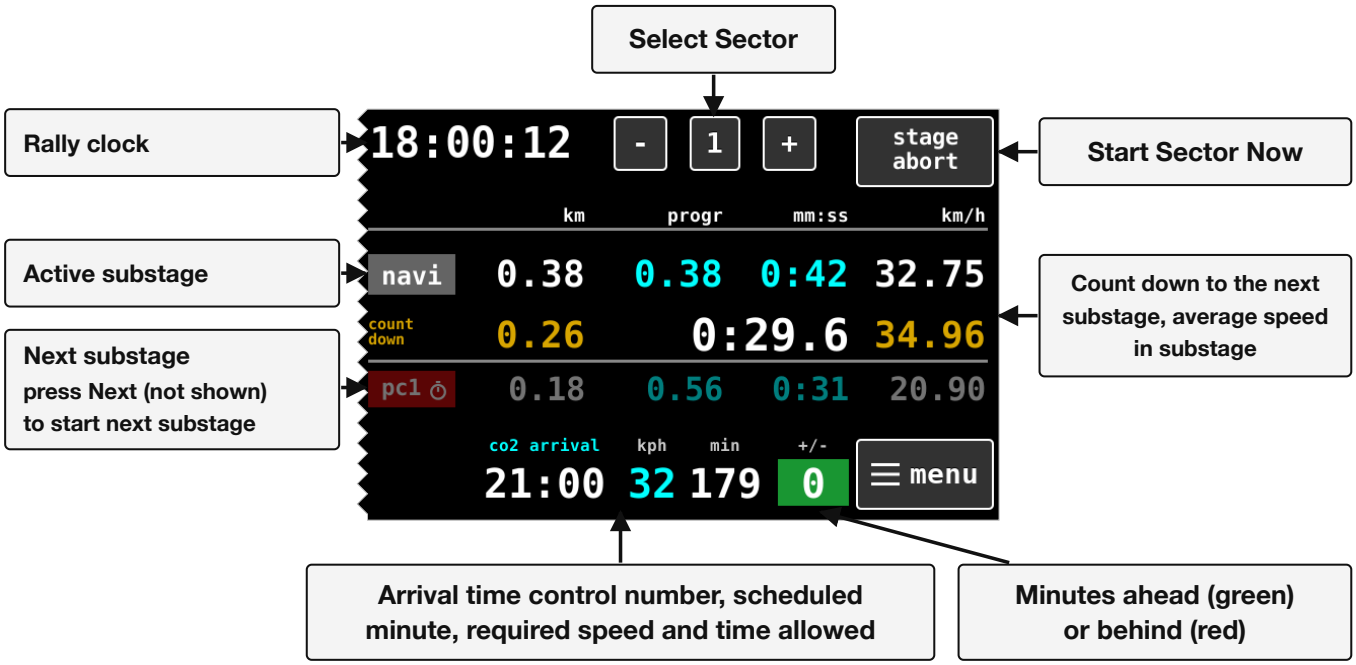


A sector is started at the time control by pressing the start now button during the **departure minute**. The sector clock starts at the second you press (a press at 11:30:40 starts it at 11:30:40), and the arrival target is that same second plus the card's sector time. The arrival second within the arrival minute is left to the crew to manage. Sector total and sub distances zero; navi distance does not zero at the same time. The `stage now` key reads `stage abort` when a sector is in progress.

An Italian sector is started with `start now` only. There is no autostart, no early departure and no “Later” or “At hh:mm” choice; the flag and autostart keys are hidden on the box and on the phone.


Starting a new substage

- Press `next substage` to enter the next substage (pc, pm etc). NB that this sets the sector total distance counter to the total distance on the card's **progr** entry. The navi distance increments independently – any variation will give a guide to calibration errors as long as Navi is not reset.
- If `next` is pressed early or by mistake press `prev substage` to undo it.
- The sector ends when you press `next substage` at the co, the last row. It does not end by itself on distance, so a box that reads long, or a wrong turn, never takes the co panel away early. `prev substage` is greyed after that last press. If you do not press `next substage` at the co, the sector keeps running; `stage abort` clears it.

Navigating an Italian Sector

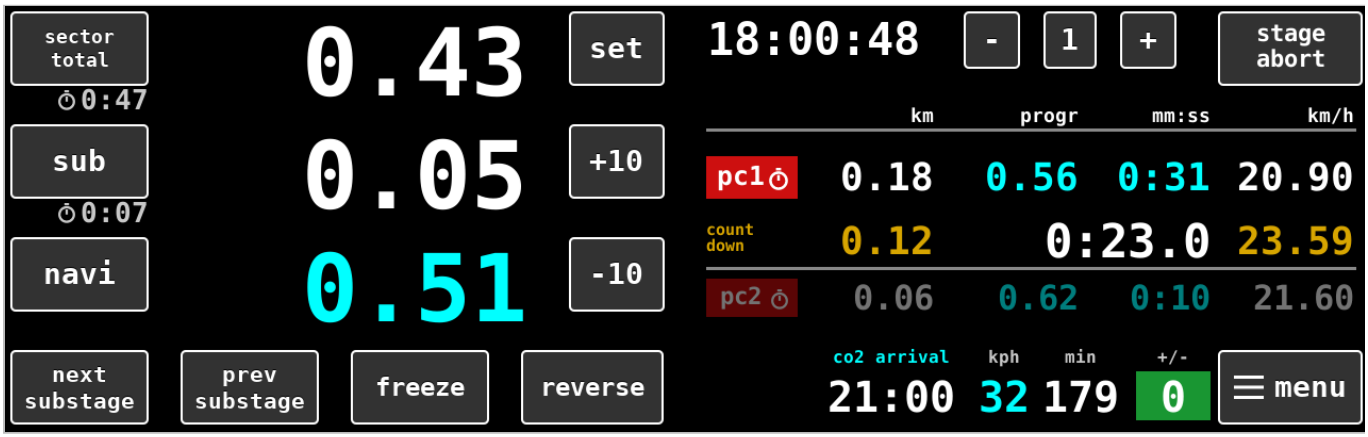

Inside pc 1, 60 m in: 120 m and 23.0 s to its end tube; average so far 23.59.

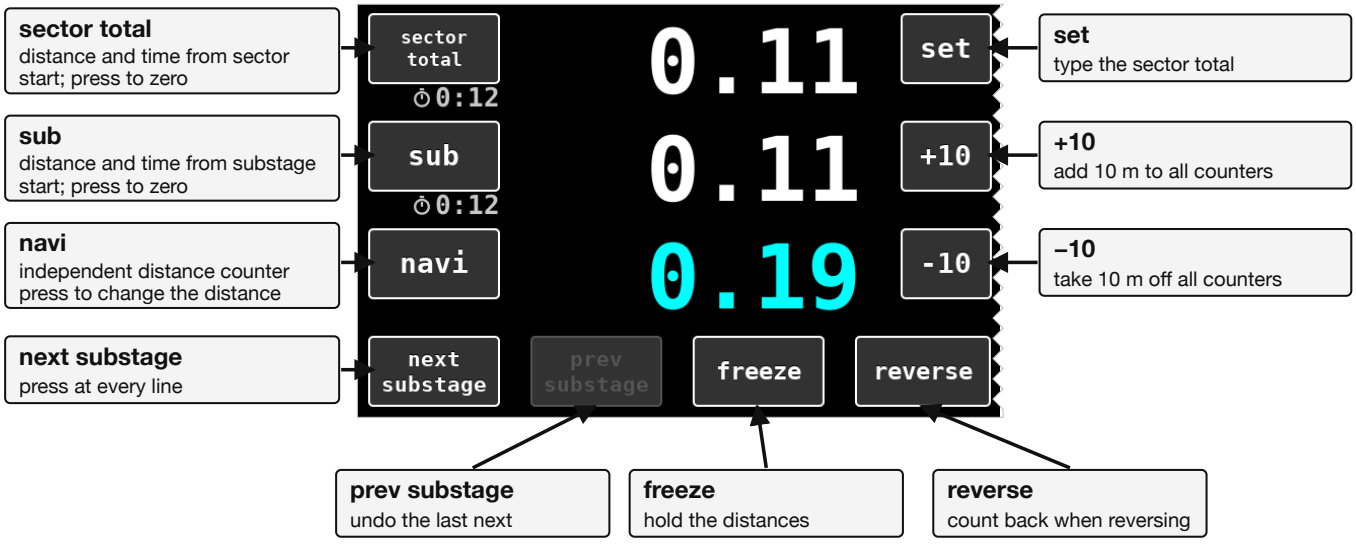

sector total

Distance and elapsed time in the sector, matching the card's **progr** value. Press to zero.


- Outside a sector, it zeroes the distance and the timer but not sub.
- During a sector, it asks first, then zeroes sector total and sub from the press while the sector clock keeps running.

sub

Distance in the current substage; zeroes at every new substage when `next substage` is pressed. Press to zero; inside a pc or pm it asks first (**In stage / Reset sub now?**, with `RESET SUB` or `Back`), as sector total does. The phone asks too.

navi

An independent distance counter, shown in cyan. Press to change the distance: the pop-up reads and asks for km or metres, whichever **Distance units** is set to.

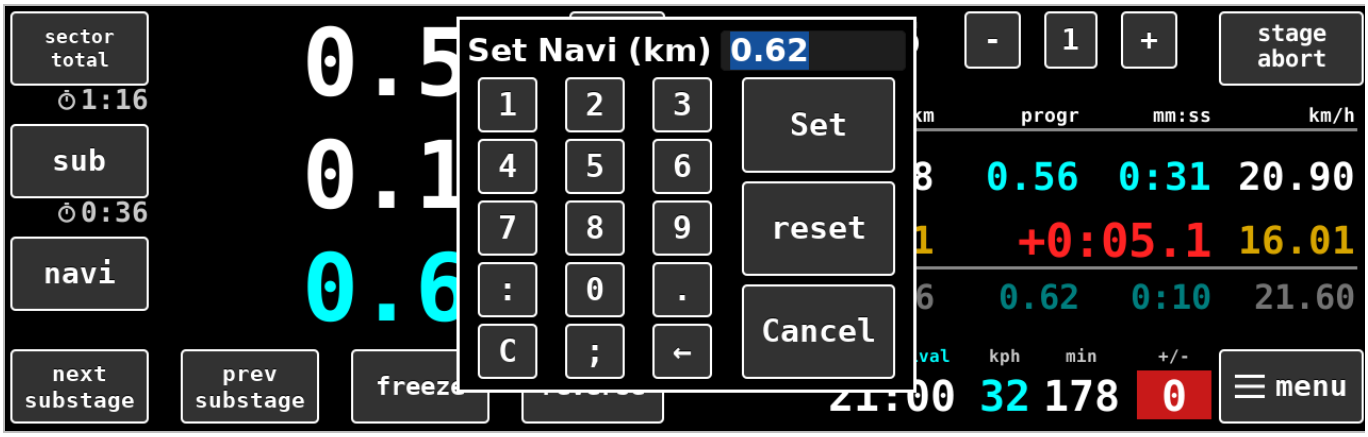

Tapping navi: Set Navi.

next substage and prev substage

`next substage` is pressed to move to the next substage. `prev substage` undoes the change.


+10, set and −10

`+10` / `−10` move all the counters (sector total, sub and navi) 10 m per press; `−10` cannot take a counter below zero; `set` allows a precise distance to be entered for sector total.

freeze and reverse

`freeze` stops the distances from counting while lit; clocks and timers continue – use it after a navigation error. On release, counting resumes from the frozen figures. `reverse` makes the distances count backwards. It is typically used when reversing after overshooting a junction, as the box only counts pulses and has no concept of direction. Freeze overrules Reverse if both are pressed. Operates on sector total, sub and navi distances. The buttons display as black on white when active and a whooping sound is emitted. With reverse pressed the distances can go negative.

The substage display

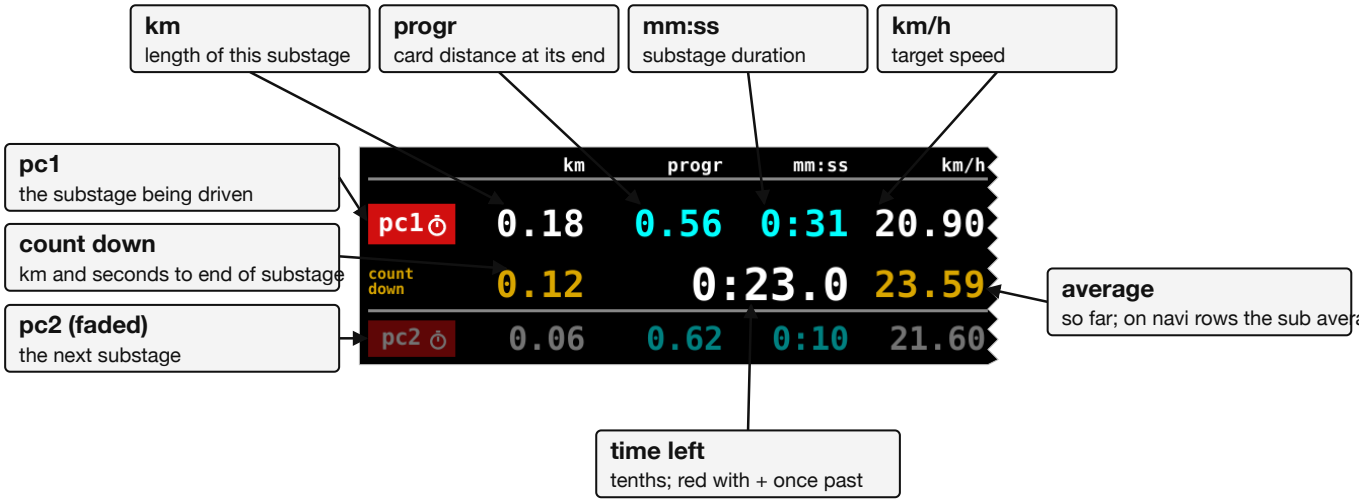

The substage display, inside pc 1.

The count down time is large and white. Past the end of a substage, the count down km (for example `+0.04`) and seconds (for example `+0:01.4`) turn red and count up. The seconds show on every row, including navi and ct. The count down km is cut to the 10 m below, never rounded.

SURREY RALLY TYPE

For regularities such as the GoodBrook Surrey Hill Ramble the roadbook gives one **running total**, never reset at a box. A stage starts at a loosely given point in a box (“about 75 m after box 11”), runs over several boxes and finishes at a point in a known box, perhaps with no printed distance. The crew writes the **time taken** on the yellow sheet. Surrey works as greek except as noted here.

	greek	**surrey**
Readouts	**total** / **trip** / **countdown**	**total** (from the `now` press) / **trip** / **navi**, the roadbook's running total, set by hand. countdown moves to the stage column.
Stage start	on a time (autostart) or `now`	`now` pressed at the landmark (autostart still works if a start time is entered)
Speed changes	at the row distance, `auto` or `next`	the same, at the roadbook total of the box
Stage end	on distance, or `next` on the last row	`next` pressed at the finish landmark; on distance if not pressed
Result	ahead / behind	ahead / behind while driving, then **time taken** (`9:20.6`)

Programming Surrey Stages

Select **surrey** rally from the settings page and then select `segments` from the main menu. The segments page will display a Union Jack and is otherwise as in Programming Greek Stages.

Entering Surrey stage data

Entry is as per greek except that Start time is usually blank. The absolute distance of the stage start is unknown – enter the distance at the start of that box instead; the end distance may be unknown – enter the distance at the end of the box instead.



The Surrey Segments page, stage SS2: from the start of box 27, speed changes at the end of box 27 and box 30.

`upload stage`, `clear stage` and `clear all` work as in greek.

Starting a Surrey Stage


A surrey stage is started with `now` (Start Now) as the car passes the start landmark. Autostart still works if a start time is entered.

Driving a stage

Set **navi** to the roadbook's figure at each box if it has drifted (`navi` › set), and always at the start box; reset it to zero where the roadbook restarts (box 1, box 66). Press `now` as the car passes the start landmark: the stage clock and total start, navi carries on, and row 1 is cut short to end at its box so later speed changes keep to the roadbook. Speed changes then happen by themselves at each box (`next` and `prev` work as in greek). At the finish landmark press `next` on the last row: the stage ends and the **time taken** stays under Trip history and on the phone.


Navigating a Surrey Stage

The navigation page

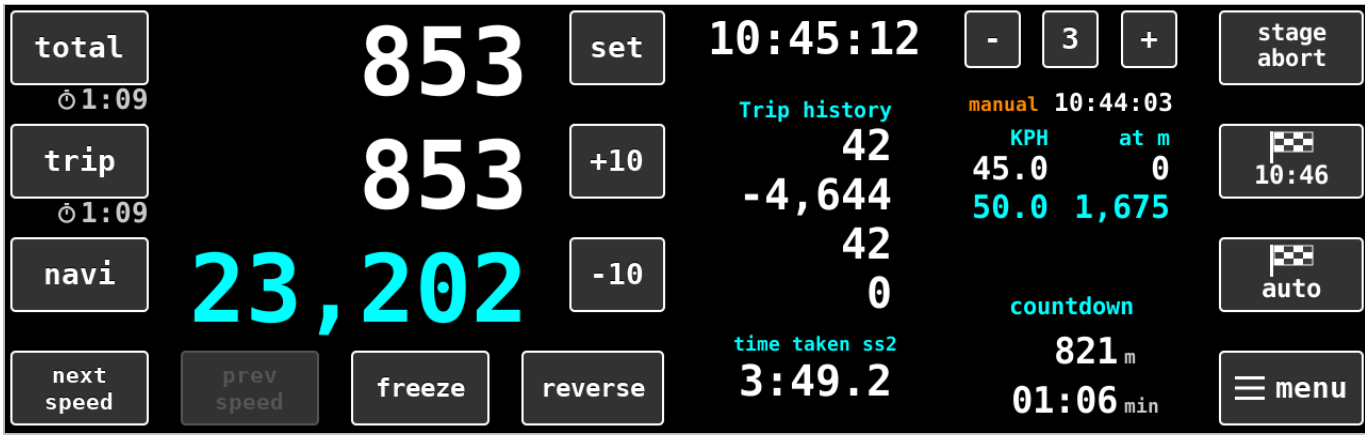

A Surrey stage running: total from the now press, trip, and navi (cyan) as the roadbook's running total.

Rows: `total` (from the now press) / `trip` / `navi` (cyan, the roadbook running total; tap to set or reset). During a stage, **countdown** (metres and minutes to the next speed change or finish) sits at the foot of the stage column; between stages Stage arrival shows there. Under the Trip history (last four), **time taken** (shown as ss and the stage number) for the last stage stays until the next one finishes. The phone shows navi and time taken. Beeps follow navi, counted from the start box. The countdown and Stage arrival figures each sit above their legend. A-B, B-C zero is available as in greek.

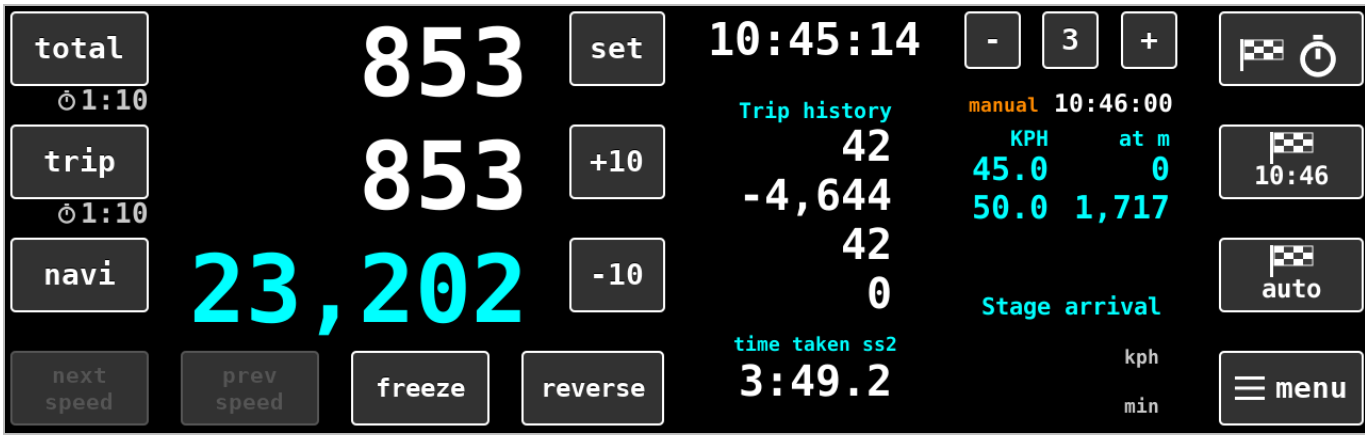

Between stages: the **time taken** for the last stage (ss2, 3:49.2) stays under Trip history.

DRIVER DISPLAYS


The driver display is the same gauge in every rally type: present speed, a needle for how far ahead or behind the car is, a chevron that counts down the row, and the distances and averages. What changes is what each part means.

	Greek and Surrey	**Italian**
Pages	Between stages, and in a stage.	On navi, ct and co rows, and inside a pc or pm.
Top left	In a stage the target speed; between stages the **arrival** speed.	The row's target speed with, in yellow, the count down to the end of the row (m:ss).
Needle	In a stage: seconds ahead or behind. None between stages.	Only inside a pc or pm: the error from the start tube. None on navi, ct and co rows.
Averages	**Sub** average since the last speed change, and the **Total** average.	Navi, ct and co rows: sub and Total averages. Pc or pm: one average over that pc or pm.
Chevron	Counts down each row, along the needle (Surrey: to the next box).	Only in a pc or pm: waits until 5 seconds are left, then runs to the line.
Distances	Trip and Total.	Sub and sector total.
Logo	Red stage number (S1, S2 …; Surrey: S); the navi logo between stages.	The substage being driven (pc 1 …), or navi.

Greek and Surrey driver display

The driver display has two pages in Greek mode: one between stages (navigation) and one in a stage. Surrey uses the same two pages.


Navigation (between stages)

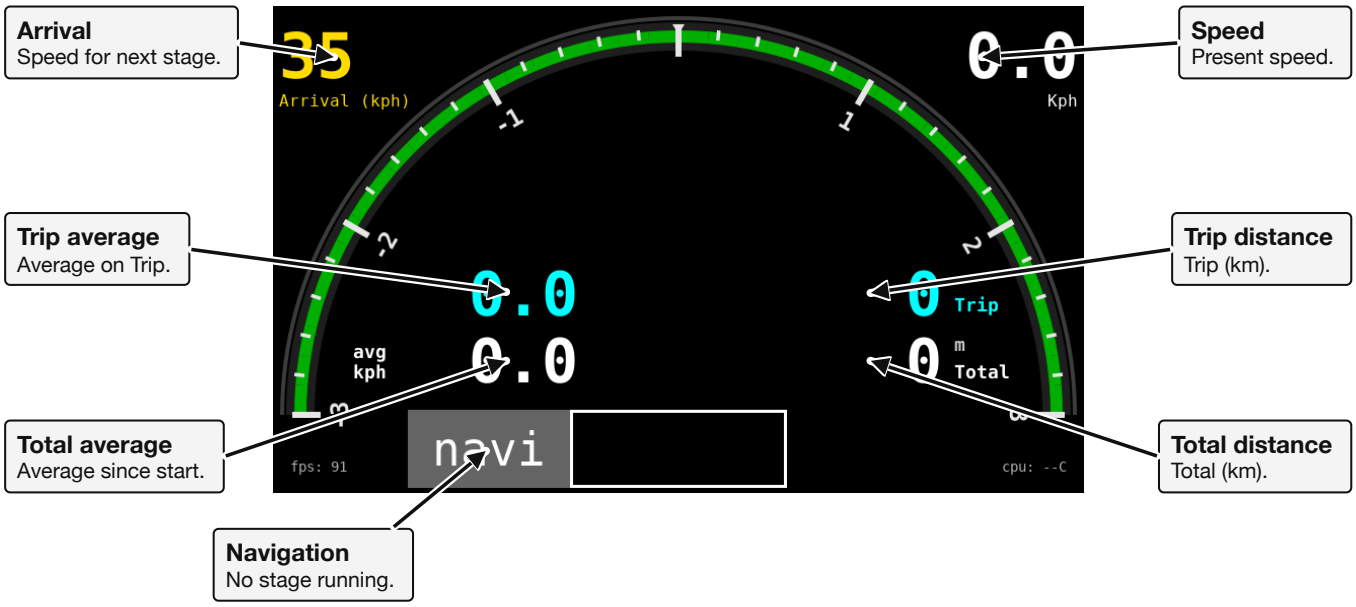

With no stage running there is no needle. The top left shows the **arrival** speed: the speed needed to reach the next stage with a minute to spare, the same figure as the co-pilot's Stage arrival. The distances and averages are Trip and Total.

In a stage


The stage display differs where marked.

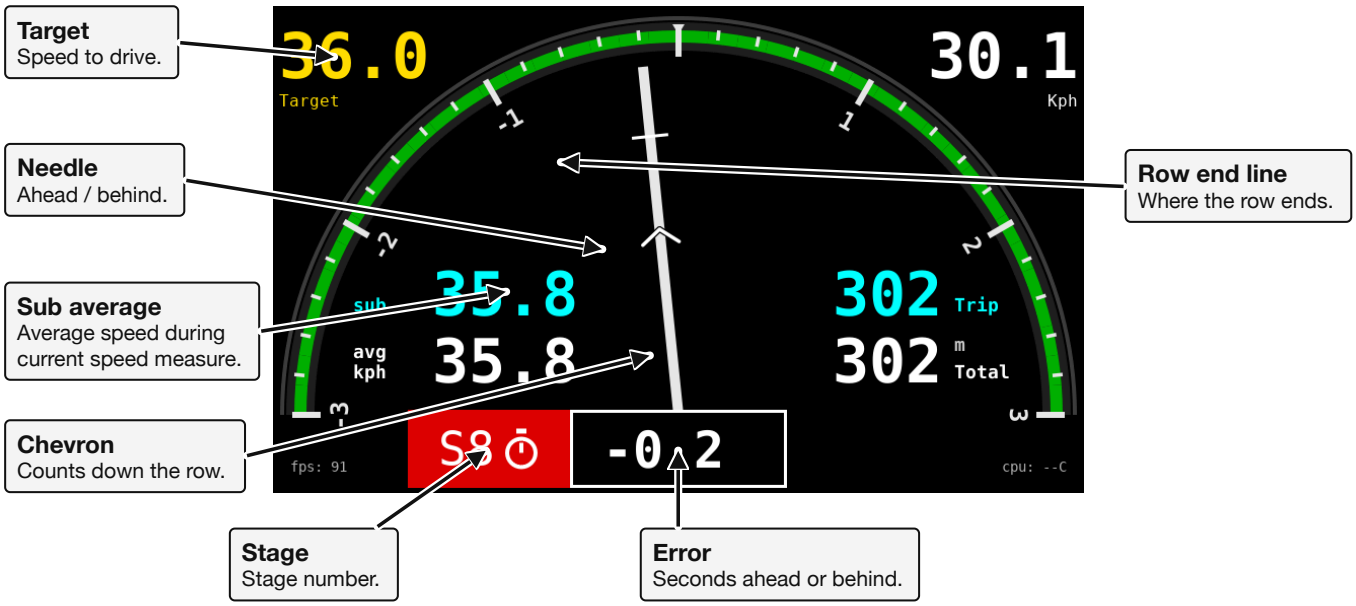

During a timed stage the needle shows how far ahead/behind the driver is in seconds. Arrival speed is not shown; that figure is only there between stages. If the error exceeds the current gauge scale (changeable from 1–3 seconds in settings) the needle will stay pinned far left (or far right if ahead) and the scale will expand. The red logo shows the stage number (S1, S2 …). The cyan **sub** average is your average speed since the last speed change in the stage data, that is, the distance driven divided by the time elapsed since then (see Entering Greek stage data). It restarts at each speed change, so it goes with the time error; the white average is the average since the start.

The chevron slides up the needle and reaches the **row end line**, the short cross-bar on the needle, as the box ends.

Surrey stage

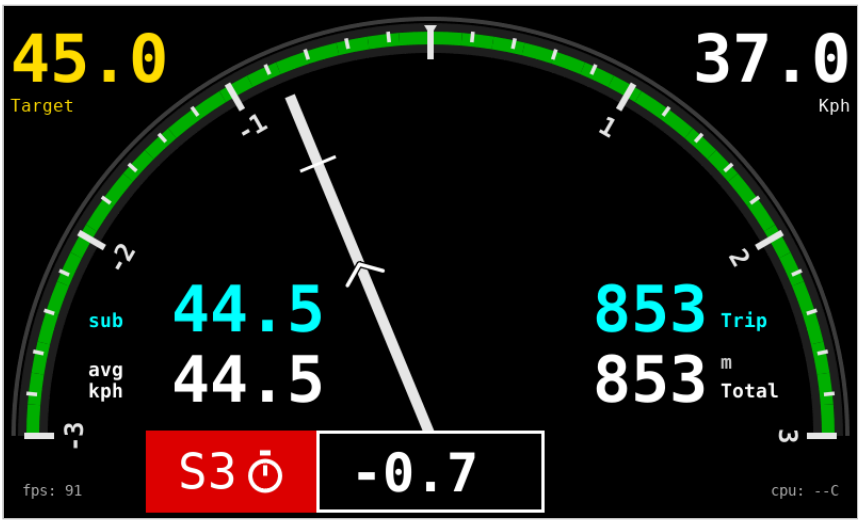

Surrey driver display in a stage: the needle, the error box and the red **S** logo.

In a stage the Surrey driver display shows the needle, the error box and the red **S** logo. Between stages it shows the arrival speed, the **navi** logo and no needle.

The chevron

One chevron rides the needle. At the start of each row it sits 20% of the way up the needle; as the row is driven it slides up toward the **row end line**, arriving as the row ends (on the stage clock, for the scheduled row), then drops back to the start for the next row. It only counts the row down: it does not show how far ahead or behind you are (the needle does that) and there is only ever one. Between stages there is no needle and no chevron.

While an autostart is pending, a T− `hh:mm:ss` countdown shows mid-display with **Early Departure ENABLED** or **DISABLED** beneath, depending on whether a regular autostart or a start on next minute is triggered. Early departure does not exist in Italian, which starts by Stage Go only.

The chevron in Surrey


As in greek, with one difference. In Surrey a row ends at a box or at the finish, so the chevron counts down to the next box, on the stage clock (the navigation beep stays on distance). Between stages there is no needle and no chevron.

Italian driver display

Two pages: one on navi, ct and co rows, and one inside a pc or pm. All figures are in km and kph. On a navi, ct or co row the cyan figure is the sub average and the white figure is the Total average, the same live averages as Greek, and both keep moving as the car moves. A pc or pm is unchanged: one average, over that pc or pm, beside the sector total.


A legend to the right of the green box reads **countdown** inside a pc or pm and **arrival** on navi rows. The gauge scale widens when the time error is bigger than the Gauge range.

Navigation (navi, ct and co rows)

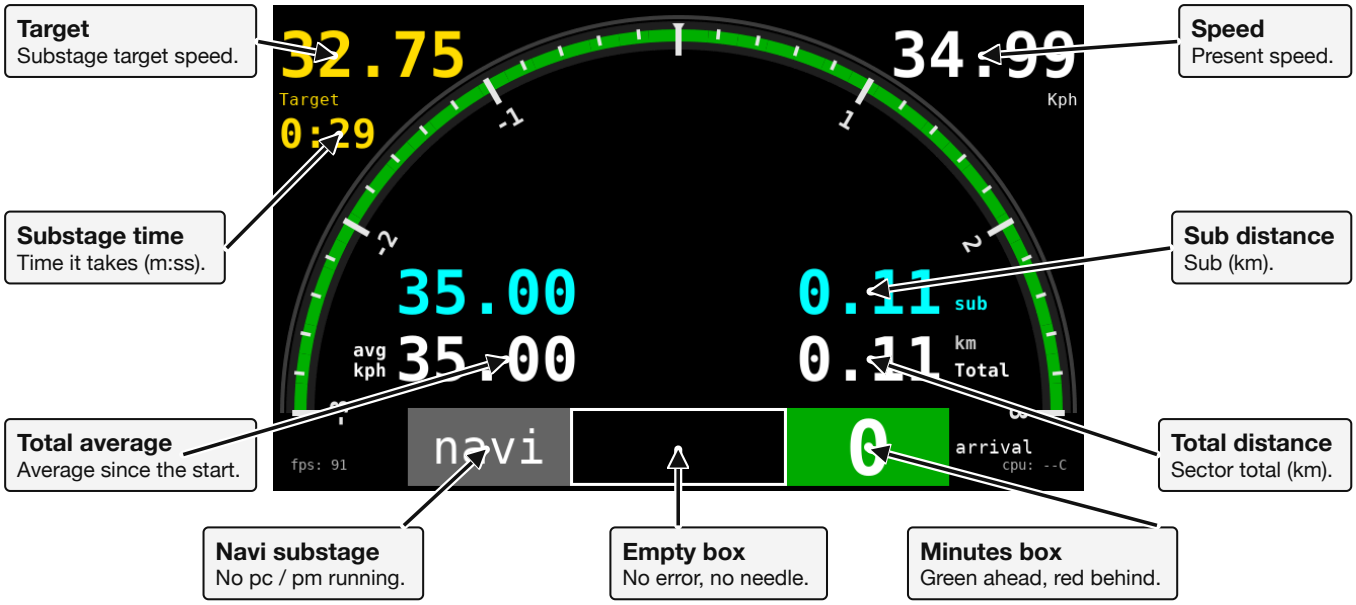

The top left shows the row's target speed and, under it in yellow, the count down to the end of the row (m:ss, whole seconds; a **+** once past the line). There is no needle and the middle box is empty: on these rows crews drive flat out and a lead of many minutes is normal. The right-hand box shows the **minutes** in hand: green when ahead, red when behind.

In a pc or pm

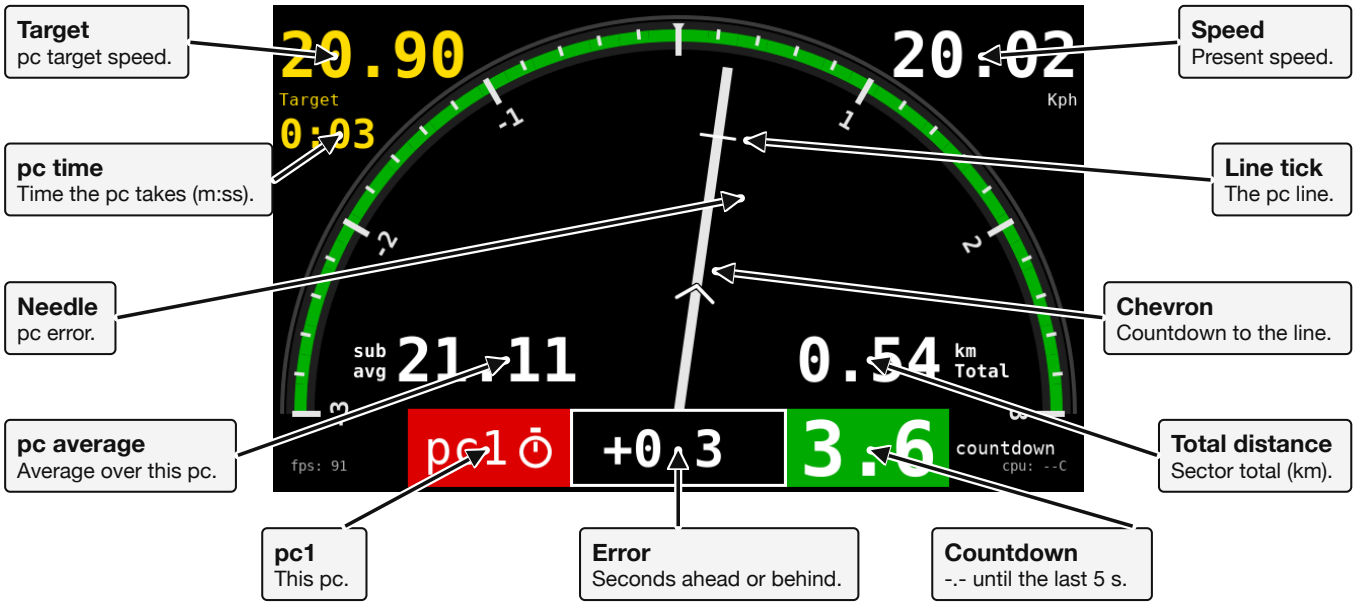


Inside a pc or pm the needle and the error box give the **error** from the start tube, in seconds. The yellow time under the target is the count down to the end tube (whole seconds). The average speed on the left is captioned

sub avg: it is the pc's or pm's own average. The box on the right shows **-.-** until 5 seconds remain, then counts down from 5.0 to 0.0.

The chevron

Inside a pc or pm one chevron sits at the start of the needle, with the line tick further up. It waits there until 5 seconds are left to the line; then it slides up the needle to the tick, arriving as the countdown reads 0.0. It only does the countdown, and there is only one. On navi, ct and co rows there is no needle and no chevron.

SINGLE-DISPLAY MODE

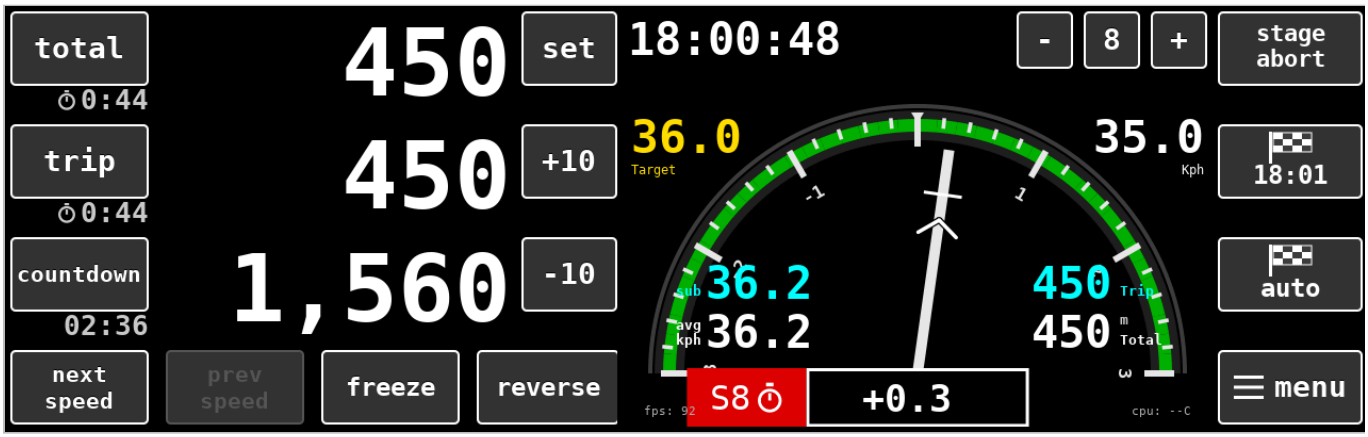


With **Force single display** on, the driver's gauge shares the co-pilot screen. Keys work as on the navigation page. Left: Total / Trip / next with `+10`, `set` and `−10`; along the foot: `prev speed`, `freeze`, `reverse` and `A–B`, `B–C` `zero`; middle: rally clock and **– 1 +** stage selector above the gauge; right: the three flag keys and `menu`. No Trip history or stage table; other pages are reached through `menu`. A pending start's countdown shows over the gauge.


THE PHONE APP

The phone app works within a phone browser window if the box and phone are on the same network. The box or a phone can be set as the hub. The advantage of using the box as the hub is that multiple devices can be used as displays and it has proven reliable in testing. The disadvantage is that connected phones lose their network connection. The advantage of using the phone as the hub is that it can continue to synch its clock and receive messages, however, multiple wireless screens cannot be attached and when using an iPhone the system will not reconnect automatically if the phone ever loses reception (which is frequent in remote parts).


Connect the phone app to the box using the instructions on the settings page and navigate to the displayed browser address. The page will load more cleanly if the web page is saved to the home screen as this disables tabbed browsing. All box features are mirrored on the phone. In landscape views mirror the box display as closely as possible; in portrait the displays are redesigned to fit the screen.


Navi

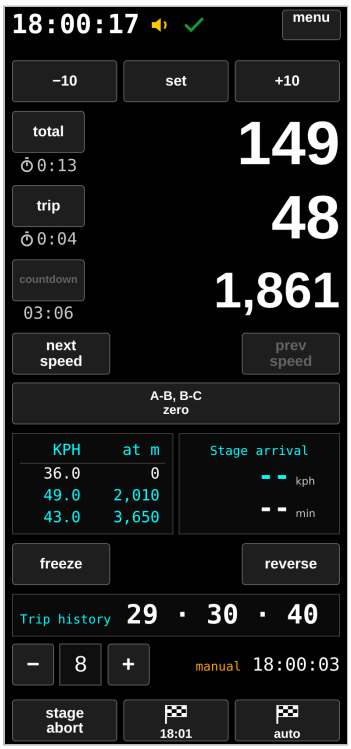

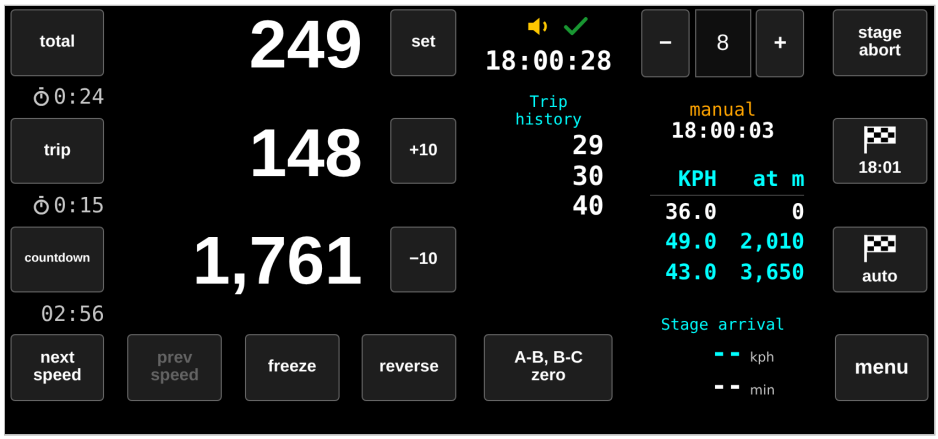


Drv

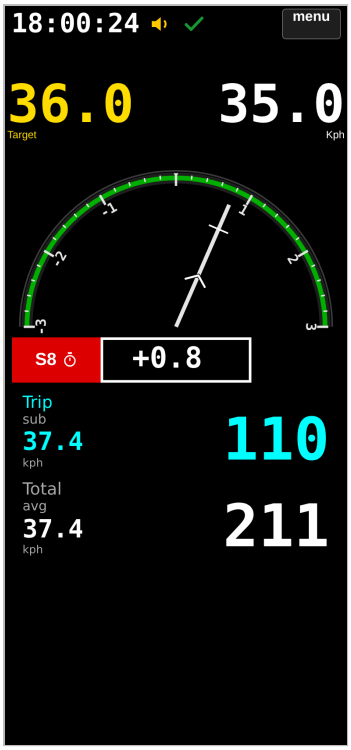
18:00:24
menu
36.0
Target
35.0
Kph
-3
-2
-1
1
2
3
S8
+0.8
Trip
sub
37.4
kph
110
Total
avg
37.4
kph
211

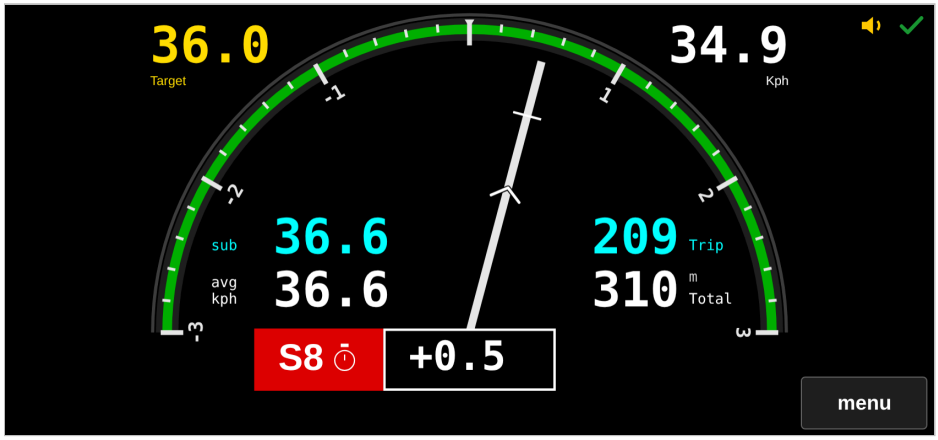

36.0
Target
34.9
Kph
-3
-2
-1
1
2
3
sub
36.6
avg
kph
36.6
209
Trip
m
310
Total
S8
+0.5
menu


Seg


18:00:52
menu
- 8 +
box
from m
to m
dist m
chg
103 0 540 540
104 540 1320 780
105 1,320 2010 690
106 2,010 2870 860
107 2,870 3650 780
108 3,650 4480 830
109 4,480 5230 750
Stage Start time
16:45:00
Distance at start
8000
Autostart
1,000;1,500;2,300

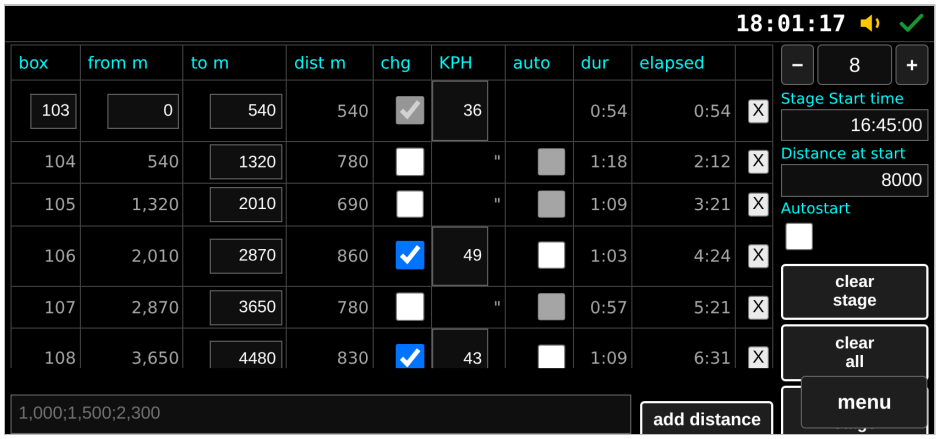

18:01:17
box
from m
to m
dist m
chg
KPH
auto
dur
elapsed
103 0 540 540 36 0:54 0:54
104 540 1320 780 " 1:18 2:12
105 1,320 2010 690 " 1:09 3:21
106 2,010 2870 860 49 1:03 4:24
107 2,870 3650 780 " 0:57 5:21
108 3,650 4480 830 43 1:09 6:31
- 8 +
Stage Start time
16:45:00
Distance at start
8000
Autostart
clear stage
clear all
menu
1,000;1,500;2,300
add distance


Set

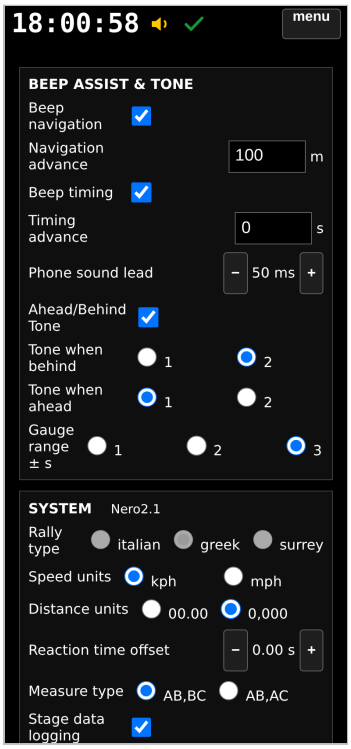
18:00:58
menu
BEEP ASSIST & TONE
Beep navigation
Navigation advance
100
m
Beep timing
Timing advance
0
s
Phone sound lead
- 50 ms +
Ahead/Behind Tone
Tone when behind
1
2
Tone when ahead
1
2
Gauge range ± s
1
2
3
SYSTEM
Nero2.1
Rally type
italian
greek
surrey
Speed units
kph
mph
Distance units
00.00
0,000
Reaction time offset
- 0.00 s +
Measure type
AB,BC
AB,AC
Stage data logging

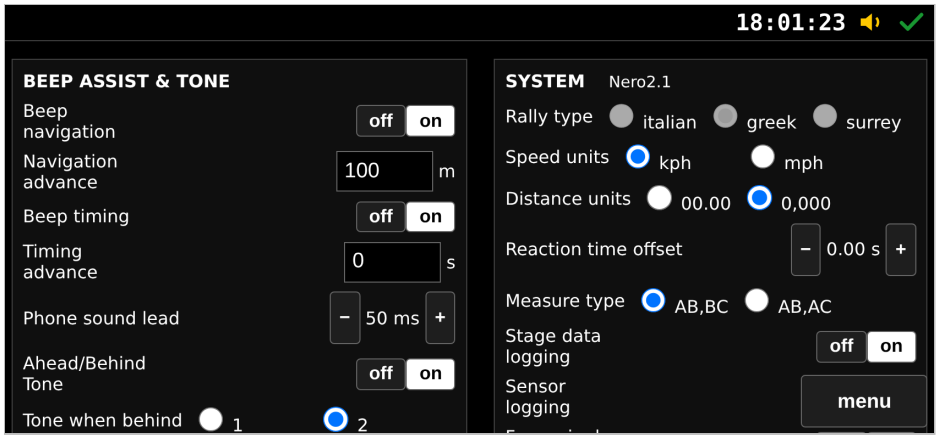

18:01:23
BEEP ASSIST & TONE
Beep navigation
off
on
Navigation advance
100
m
Beep timing
off
on
Timing advance
0
s
Phone sound lead
- 50 ms +
Ahead/Behind Tone
off
on
Tone when behind
1
2
SYSTEM
Nero2.1
Rally type
italian
greek
surrey
Speed units
kph
mph
Distance units
00.00
0,000
Reaction time offset
- 0.00 s +
Measure type
AB,BC
AB,AC
Stage data logging
off
on
Sensor logging
menu


Time

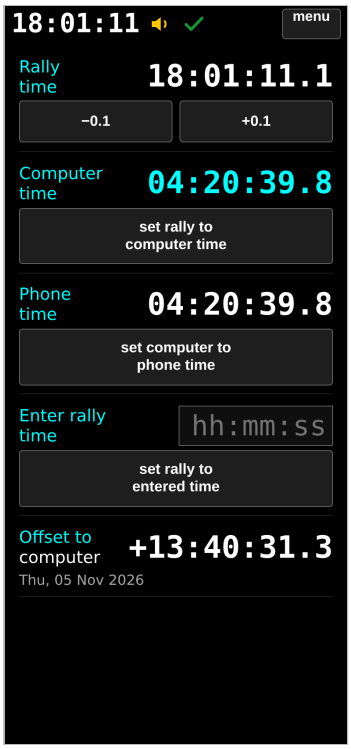
18:01:11
menu
Rally time
18:01:11.1
−0.1
+0.1
Computer time
04:20:39.8
set rally to computer time
Phone time
04:20:39.8
set computer to phone time
Enter rally time
hh:mm:ss
set rally to entered time
Offset to computer
+13:40:31.3
Thu, 05 Nov 2026

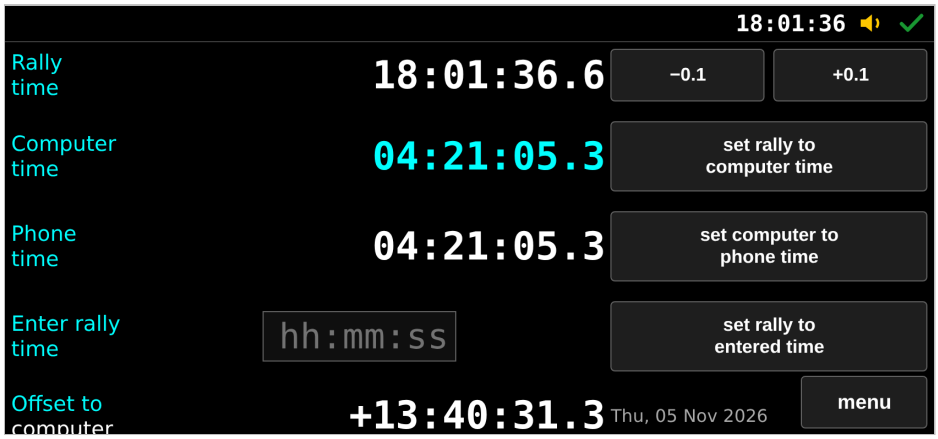
18:01:36
Rally time
18:01:36.6
−0.1
+0.1
Computer time
04:21:05.3
set rally to computer time
Phone time
04:21:05.3
set computer to phone time
Enter rally time
hh:mm:ss
set rally to entered time
Offset to computer
+13:40:31.3
Thu, 05 Nov 2026
menu

Cal

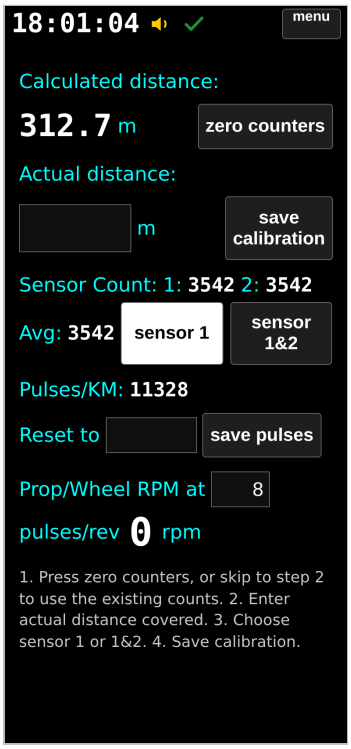
18:01:04
menu
Calculated distance:
312.7 m
zero counters
Actual distance:
m
save calibration
Sensor Count: 1: 3542 2: 3542
Avg: 3542
sensor 1
sensor 1&2
Pulses/KM: 11328
Reset to
save pulses
Prop/Wheel RPM at 8
pulses/rev 0 rpm
1. Press zero counters, or skip to step 2 to use the existing counts. 2. Enter actual distance covered. 3. Choose sensor 1 or 1&2. 4. Save calibration.

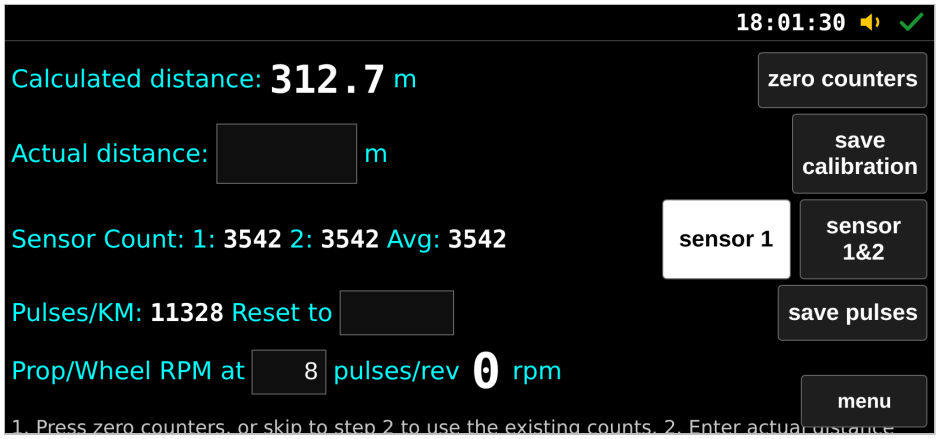
18:01:30
Calculated distance: 312.7 m
zero counters
Actual distance:
m
save calibration
Sensor Count: 1: 3542 2: 3542 Avg: 3542
sensor 1
sensor 1&2
Pulses/KM: 11328 Reset to
save pulses
Prop/Wheel RPM at 8 pulses/rev 0 rpm
menu

BEEP ASSIST


Beep Assist uses the segments **to** figures as the roadbook boxes; nothing more is entered. Switch it on in settings. Navigation double-beeps a set distance before each box. Timing single-beeps when the car should pass it, revealing distance errors from wheel spin, corner cutting or a skipping sensor. Beeps follow Total, so +10, -10 or set moves them all.

- **Beep navigation** – off/on. **Navigation advance**: metres before the box for the double beep (100 recommended).
- **Beep timing** – off/on. **Timing advance**: seconds before the box time for the single beep (0 recommended).

> In settings, Beep navigation, Beep timing and their advance figures are greyed while the rally type is italian; the choices are kept for greek. Beep Assist is for greek stages and is silent in italian. There, inside a pc, the box instead beeps the countdown to the end tube: the navigation double beep at 5 s, a single beep at 4, 3, 2 and 1, and a shorter beep on 0. The box speaker's countdown beeps sound about 0.1 s early to cover the audio delay (an estimate, not yet measured on the Pi). The same countdown sounds on a navi row, to warn that next is due. Every row that is not a pc also beeps once at 100 m before its end.

SETTING RALLY CONFIGURATIONS

DATE / TIME

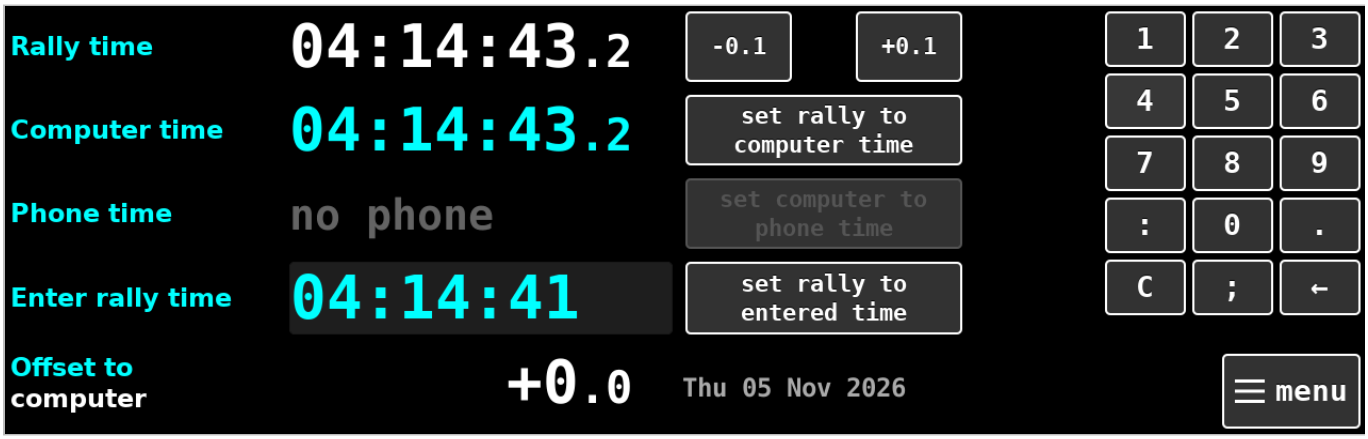

The date / time page.

Rally time (white) is the clock all stages are timed against; **Computer time** (cyan) is the Raspberry Pi's clock; **Phone time** is the linked phone's, or `no phone`. **Offset to computer** is how far rally time is ahead (+) or behind (–), for example `+2.3`, or `–11:49.2` beyond a minute.


Setting the rally clock

- `set rally to computer time` makes them equal.
- Type `hh:mm:ss` (or `hh:mm`, no tenths) in **Enter rally time** and press `set rally to entered time`. Today's date is used.
- `set computer to phone time` sets the Pi's clock from the phone, leaving the rally clock as it is. Grey until a phone connects. It needs the Pi's usual password-free permission to set its clock; without it the box says `The computer clock could not be set` and nothing changes.

Trimming

`–0.1` / `+0.1` trim the rally clock by a tenth of a second; hold to repeat. Saved at once.

CALIBRATION

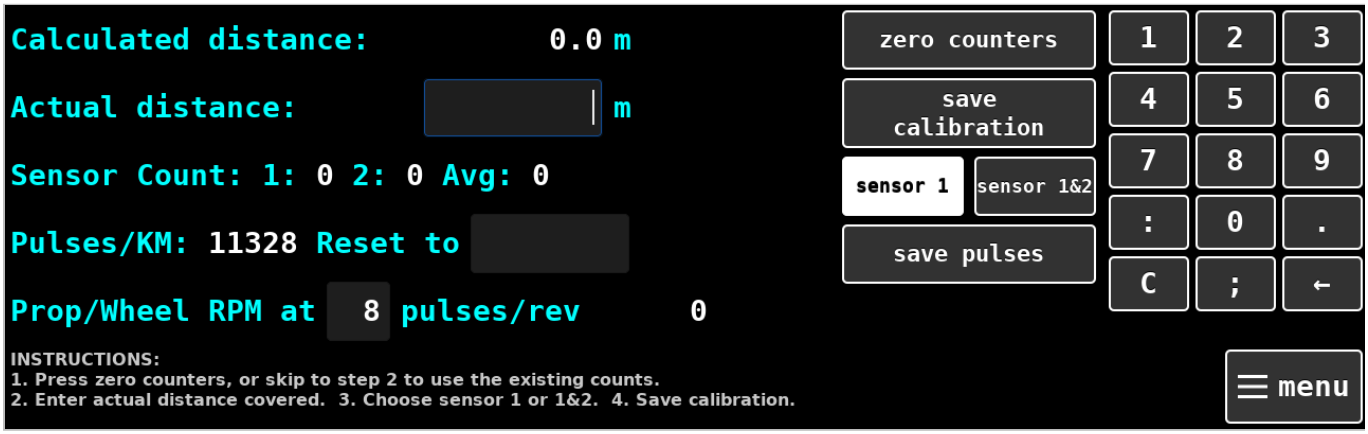

The calibration page.

Calibrating over a set distance

1. Press `zero counters` (or skip, to use the distance since the last Total reset).
2. Drive the measured distance (from 500 m to 100,000 m).
3. Type the **actual** distance driven (not what the box shows) in Actual distance.
4. Choose the counter: `sensor 1` or `sensor 1&2` (shown in white).
5. Press `save calibration`.

The page shows the calculated distance, each sensor's count and the pulses per km in use. If the distance is out of range or nothing was counted, `save calibration` silently does nothing, so check the pulses per km figure has changed.


Setting the pulses directly

If the figure is known, type it in **Reset to** and press `save pulses`; no driving needed. Zero or less is ignored.

Prop/Wheel RPM

The last row shows propshaft or wheel rpm from sensor 1. Type the sensor's pulses per revolution in the small box.

SETTINGS

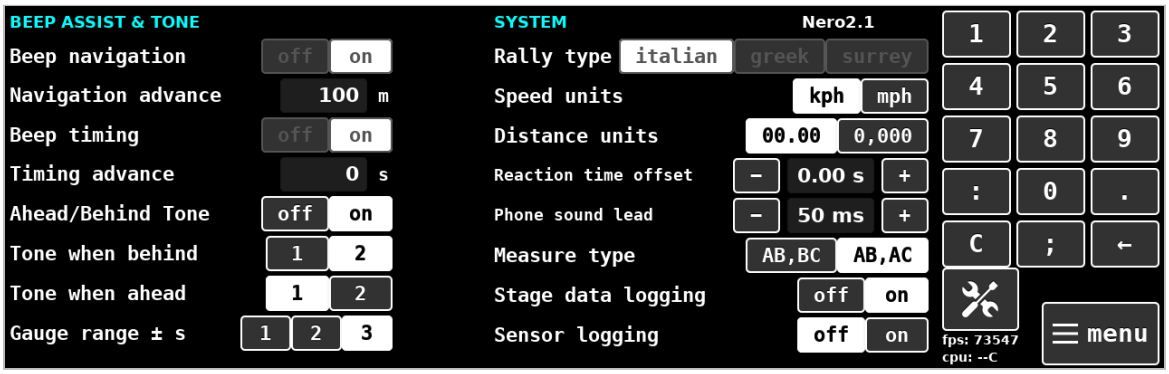

The settings page (italian rally type; the other types are greyed while a sector is running).

Each switch shows its present state lit. Changes are saved at once.

Tone

- **Ahead/Behind Tone** – the driver's error tone, off/on.
- **Tone when behind** / **Tone when ahead** – type 1 or 2; both silent under 0.2 s error and in the first 250 m (in italian from the moment a pc or pm starts). **Type 1**: a buzzer tick that speeds up with the error in 0.2 s steps, from about one a second at 0.2 s to about eight by 3 s; behind ticks slightly higher. **Type 2**: a steady tone rising in pitch in 0.2 s steps to 3 s; behind is higher and harsher, ahead lower and smoother.
- **Gauge range ± s** – 1, 2 or 3 seconds at each end of the gauge.

System

- **Rally type** – greek / surrey / italian. See Rally types. The software version (Nero2.1) is shown above it.
- **Reaction time offset** – −0.30 to +0.30 s in steps of 0.01 (default 0). A press at a point is taken as that much earlier, and the car that much further back. It applies to the italian tube `next`, the greek `next`, `start now` when moving at 5 kph or more, and the surrey start and finish. It does not apply to autostart, `±10`, `set` or `prev`. Positive means the crew press late. Find your figure by comparing the box's pc times with the official results.
- **Phone sound lead** – – / figure / + in steps of 10 ms, 0 to 400 (default 100 ms). It sets how early the box tells the phone to sound an Italian countdown beep, to cover the phone's audio delay. It applies to the countdown beeps only, not the 100 m beeps, and the phone shows the same figure.
- **Speed units** – kph or mph.
- **Distance units** – **00.00** (km, two decimals) or **0,000** (whole metres) for the driving figures and `add distance`. It does not flip to kilometres at 100 km. The **set** pop-ups (Set Total, Set Navi), **Distance at start** and Trip history use the same unit, and so does the phone. In km a figure is cut to the 10 m below, never rounded up, so it never reads ahead of the car; a counter that reverse takes behind its start reads negative.
- **Measure type** – **AB,BC** shows the A-B, B-C zero key on the greek and surrey navigation pages; **AB,AC** hides it.
- **Stage data logging** – one file per stage, a row a second (distance, speed, ahead/behind error), from stage start to end or abort; switched on mid-stage, it starts at once. If the file cannot be written, logging silently switches off.
- **Sensor logging** – raw counter readings, many rows a second while on, so much larger files. Both logs are deleted after 60 days (at program start) and can be downloaded on the phone's Set tab.

The spanner key (keypad, bottom left) opens Setup. Under it are the screen update rate (fps) and the Pi's CPU temperature.

SETUP



The Setup page (in the sandbox no real displays are found).

- **Screen setup** – each display found, with `rotate` and a touch keyboard switch; `reset layout`; **Force single display** puts the gauge on the co-pilot screen from the next program start.
- **Bluetooth speaker setup** – `remember playing speaker` stores the speaker now playing; `connect` / `disconnect` it later.
- **Wi-Fi setup** – one key per saved network: the box's own **hotspot** (lit when used) or **join** another. Below: the phone app address and QR code. Opened from the phone's home screen, it runs without browser bars.
- `check for software updates` – closes the program and checks for an update (needs internet).
- `settings` returns to the settings page.