電源供應器

e-series

NetApp
May 03, 2022

This PDF was generated from https://docs.netapp.com/zh-tw/e-series/maintenance-ef600/power-overview-requirements2-concept.html on May 03, 2022. Always check docs.netapp.com for the latest.

目錄

電源供應器 1
EF300或EF600電源供應器更換需求 1
更換EF300或EF600電源供應器 1

電源供應器

EF300或EF600電源供應器更換需求

在更換EF300或EF600陣列中的電源供應器之前、請先檢閱下列需求。

- 您必須擁有控制器櫃或磁碟機櫃模型所支援的替換電源供應器。
- 您必須擁有一個ESD腕帶、或已採取其他防靜電預防措施。

請勿混用不同電壓類型的PSU。永遠像這樣更換。

更換EF300或EF600電源供應器

您可以在EF300或EF600控制器故障時更換電源供應器。

如果電源供應器故障、您必須儘快更換、使控制器機櫃具有備援電源。

開始之前

- 檢閱Recovery Guru中的詳細資料、確認電源供應器有問題。從Recovery Guru中選取* Recheck*、以確保不需要先處理其他項目。
- 檢查電源供應器上的黃色警示LED是否亮起、表示電源供應器或其整合式風扇故障。

您需要的是 **#8217** ；需要的是什麼

- 控制器機櫃支援的替換電源供應器。
- 或您已採取其他防靜電預防措施。
- 管理站、具備瀏覽器、可存取SANtricity 控制器的《系統管理程式》。（若要開啟System Manager介面、請將瀏覽器指向控制器的網域名稱或IP位址。）

步驟1：移除故障的電源供應器

移除故障的電源供應器、以便更換為新的電源供應器。

步驟

1. 打開新電源供應器的包裝、並將其放在磁碟機櫃附近的水平面上。

   請保留所有包裝材料、以便在退回故障電源供應器時使用。

2. 拔下電源線：
   a. 打開電源線固定器、然後從電源供應器拔下電源線。
   b. 從電源拔下電源線。
3. 找到電源供應器右側的彈片、然後朝電源供應器單元方向按下。

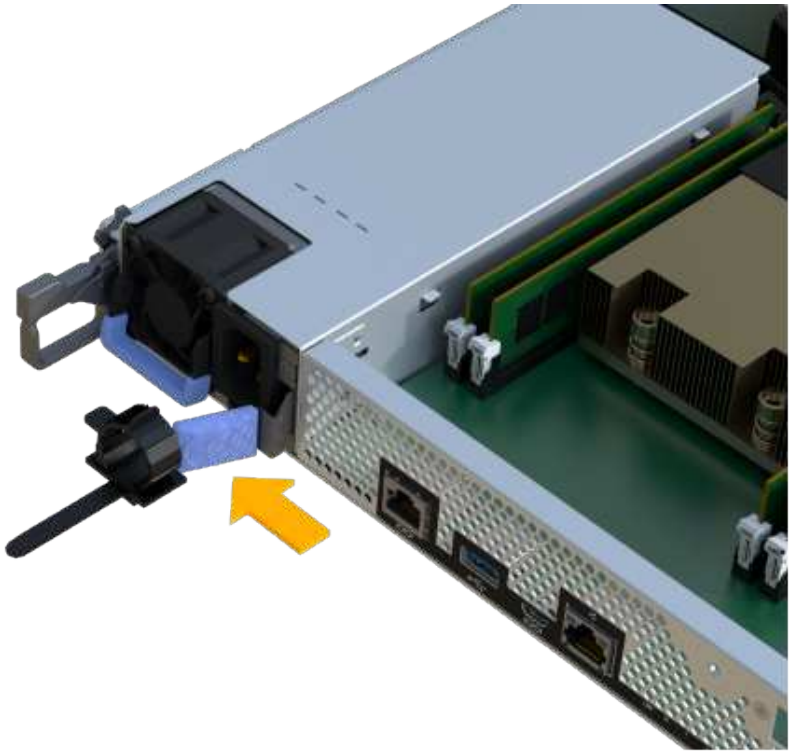

4. 找到電源供應器正面的握把。
5. 使用握把將電源供應器直接滑出系統。

移除電源供應器時、請務必用兩隻手支撐其重量。

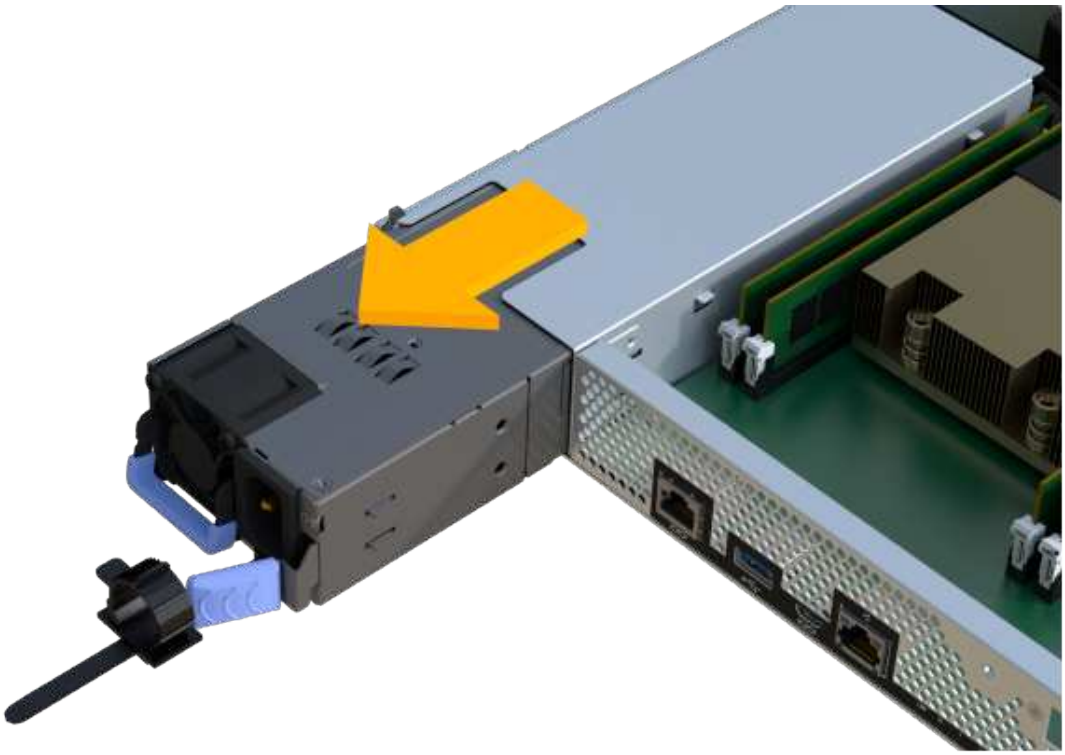

步驟2：安裝新的電源供應器並完成更換

移除故障的電源供應器之後、請安裝新的電源供應器。

步驟

1. 用兩隻手支撐電源供應器邊緣、並將其與系統機箱的開孔對齊、然後使用CAM握把將電源供應器輕推入機箱。

   電源供應器採用鎖定式設計、只能以單一方式安裝。

   > 將電源供應器滑入系統時、請勿過度施力、否則可能會損壞連接器。

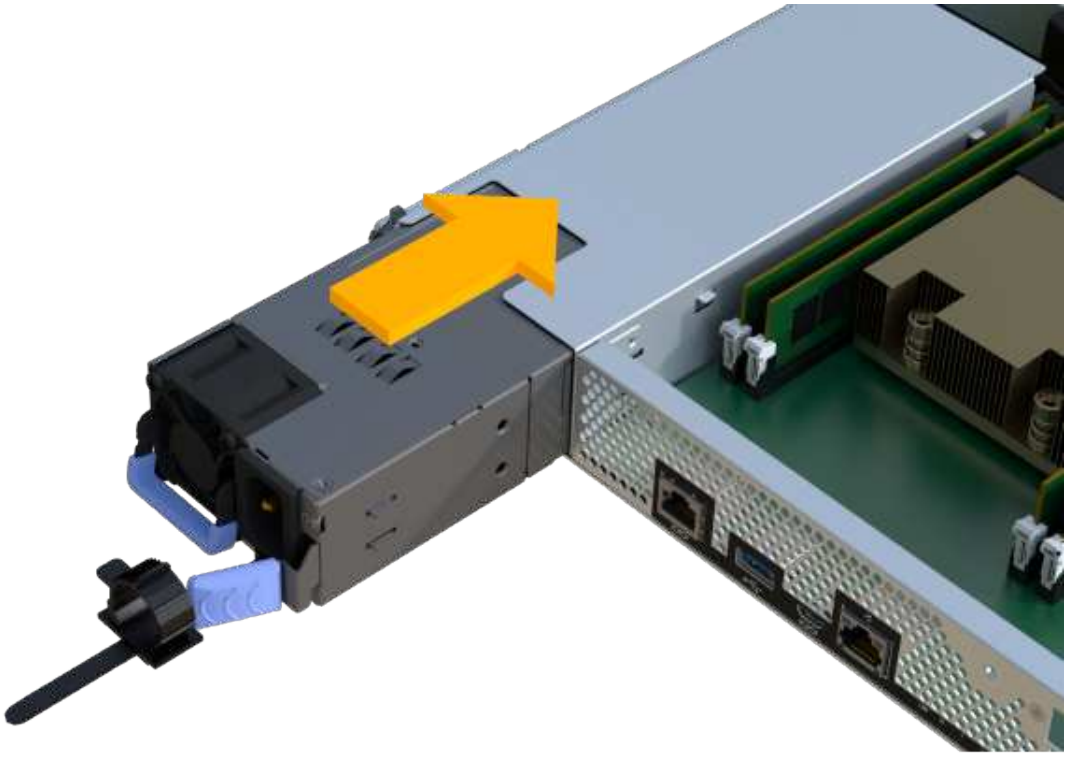

2. 確認其狀態為最佳狀態、並檢查控制器機櫃的注意LED。

   如果狀態不是最佳、或是有任何警示LED亮起、請確認所有纜線都已正確安裝、且控制器機箱已正確安裝。如有必要、請移除並重新安裝控制器容器。

   > 如果您無法解決問題、請聯絡技術支援部門。

3. 在「支援系統管理程式」中、按一下功能表：「支援[升級中心]以確保安裝最新版本的作業系統。SANtricity SANtricity

   視需要安裝最新版本。

您的電源供應器更換已完成。您可以恢復正常作業。

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.