クラスタの拡張後に監視ノードを削除します

HCI

amitha, Aksel Davis, Ann-Marie Grissino, Dave Bagwell
June 21, 2021

This PDF was generated from https://docs.netapp.com/ja-jp/hci/docs/task_hci_removewn.html on July 01, 2021. Always check docs.netapp.com for the latest.

目次

クラスタの拡張後に監視ノードを削除します 1
詳細については、こちらをご覧ください 2

クラスタの拡張後に監視ノードを削除します

2 ノードストレージクラスタを 4 つ以上のノードに拡張したら、監視ノードのペアを削除して、 NetApp HCI 環境のコンピューティングリソースを解放できます。以前ストレージクラスタで使用されていた監視ノードは、引き続き vSphere Web Client でスタンバイ仮想マシン（ VM ）として表示されます。

監視ノードは、ストレージノードが 5 つ以上あるクラスタでは必要ありません。2 ノードクラスタを 4 つ以上のノードに拡張したあとに CPU とメモリを解放する場合は、この手順はオプションです。

> クラスタの障害やエラーが報告されていないことを確認します。システムアラートに関する情報は、 vSphere の NetApp Element Management 拡張ポイントで、 * Reporting > Alerts * をクリックすると確認できます。

手順

1. vSphere から、 NetApp Element Management 拡張ポイントにアクセスするには、 * Shortcuts * タブまたはサイドパネルからアクセスします。
2. NetApp Element Management > Cluster > Nodes * の順に選択します。

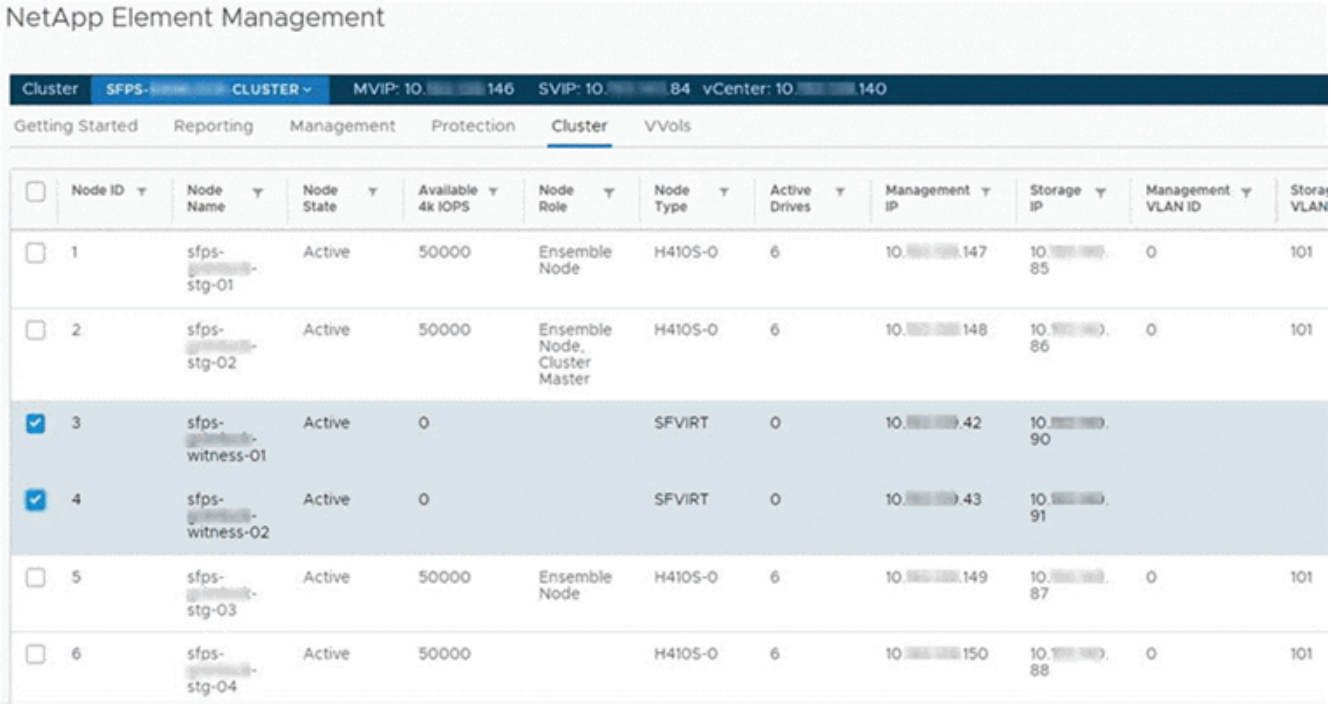

3. 削除する監視ノードのチェックボックスを選択し、 * Actions > Remove * をクリックします。
4. プロンプトで操作を確認します。
5. [**Hosts and Clusters**] をクリックします。
6. 削除した監視ノード VM に移動します。
7. VM を右クリックして電源をオフにします。
8. 電源をオフにした VM を右クリックし、 * ディスクから削除 * をクリックします。
9. プロンプトで操作を確認します。

詳細については、こちらをご覧ください

- "NetApp HCI 2 ノードストレージクラスタ | TR-4823"
- "vCenter Server 向け NetApp Element プラグイン"
- "NetApp HCI のリソースページ"
- "SolidFire と Element ソフトウェアドキュメントセンター"

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.