關閉和開啟網格中的所有節點
StorageGRID

NetApp
May 03, 2022

This PDF was generated from https://docs.netapp.com/zh-tw/storagegrid-116/maintain/stopping-services-and-shutting-down-grid-nodes.html on May 03, 2022. Always check docs.netapp.com for the latest.

目錄

關閉和開啟網格中的所有節點 1
停止服務並關閉網格節點 1
啟動網格節點 2

關閉和開啟網格中的所有節點

例如、如果您要搬移資料中心、可能需要關閉整個StorageGRID 的整套功能。這些步驟提供建議的執行管制關機和開機順序的高階概觀。

當您關閉站台或網格中的所有節點時、當儲存節點離線時、將無法存取擷取的物件。

停止服務並關閉網格節點

在您關閉StorageGRID 某個VMware系統之前、您必須先停止每個網格節點上執行的所有服務、然後關閉所有VMware虛擬機器、Container引擎和StorageGRID VMware應用程式。

先停止管理節點和API閘道節點上的服務、然後停止儲存節點上的服務。

此方法可讓您使用主要管理節點、盡可能長時間監控其他網格節點的狀態。

> 如果單一主機包含多個網格節點、則在停止該主機上的所有節點之前、請勿關閉主機。如果主機包含主要管理節點、請最後關閉該主機。

> 如有需要、您可以 將節點從一個Linux主機移轉至另一個主機 在不影響網格功能或可用度的情況下執行主機維護。

步驟

1. 停止所有用戶端應用程式存取網格。
2. [[log_in_to _GN]登入每個閘道節點：
   a. 輸入下列命令：「sh admin@*grid_node_ip*`」
   b. 輸入「passwords.txt」檔案中所列的密碼。
   c. 輸入下列命令以切換至root：「u -」
   d. 輸入「passwords.txt」檔案中所列的密碼。

      以root登入時、提示會從「$」變更為「#」。
3. [[stop _all_services）]停止節點上執行的所有服務：「服務伺服器管理程式停止」

   服務關機最多需要15分鐘、您可能想要從遠端登入系統、以監控關機程序。
4. 重複上述兩個步驟、即可停止所有儲存節點、歸檔節點和非主要管理節點上的服務。

   您可以依任何順序停止這些節點上的服務。

   > 如果您發出「服務伺服器管理程式停止」命令來停止應用裝置儲存節點上的服務、則必須重新啟動應用裝置、才能重新啟動節點。
5. 針對主要管理節點、重複執行的步驟 登入節點 和 停止節點上的所有服務。

6. 對於在Linux主機上執行的節點：
   a. 登入主機作業系統。
   b. 停止節點：StorageGRID 「不間斷節點」
   c. 關閉主機作業系統。
7. 對於在VMware虛擬機器和應用裝置儲存節點上執行的節點、請發出關機命令：「hutdown -h NOW」

   無論執行「服務伺服器管理程式停止」命令的結果為何、都要執行此步驟。

   對於應用裝置、此命令會關閉運算控制器、但應用裝置仍會開啟電源。您必須完成下一步。

8. 如果您有應用裝置節點：
   - 適用於SG100或SG1000服務應用裝置
     i. 關閉產品電源。
     ii. 等待藍色電源LED燈關閉。
   - 適用於SG6000應用裝置
     i. 等待儲存控制器背面的綠色快取作用中LED關閉。

        當需要將快取的資料寫入磁碟機時、此LED會亮起。您必須等待此LED燈關閉、才能關閉電源。

     ii. 關閉產品電源、然後等待藍色電源LED燈關閉。
   - 適用於SG5700應用裝置
     i. 等待儲存控制器背面的綠色快取作用中LED關閉。

        當需要將快取的資料寫入磁碟機時、此LED會亮起。您必須等待此LED燈關閉、才能關閉電源。

     ii. 關閉產品電源、並等待所有LED和七段顯示活動停止。
9. 如有必要、請登出命令Shell：「exit」

   此功能現已關閉。StorageGRID

SG100與SG1000服務應用裝置

SG6000儲存設備

SG5700儲存設備

啟動網格節點

完成關機後、請依照此順序啟動網格節點。

> 您需要的是 **#8217** ；需要的是什麼
>
> 如果整個網格已關閉超過15天、您必須在啟動任何網格節點之前聯絡技術支援部門。請勿嘗試重建Cassandra資料的還原程序。否則可能導致資料遺失。

如有可能、您應依下列順序開啟網格節點電源：

- 先將電力套用至管理節點。
- 最後將電力套用至閘道節點。

> 如果主機包含多個網格節點、則當您開啟主機電源時、節點會自動恢復連線。

步驟

1. 開啟主要管理節點和任何非主要管理節點的主機。

   > 在重新啟動儲存節點之前、您將無法登入管理節點。

2. 開啟所有歸檔節點和儲存節點的主機電源。

   您可以依任何順序開啟這些節點。

3. 開啟所有閘道節點的主機電源。
4. 登入Grid Manager。
5. 選取*節點*並監控網格節點的狀態。確認節點名稱旁沒有警示圖示。

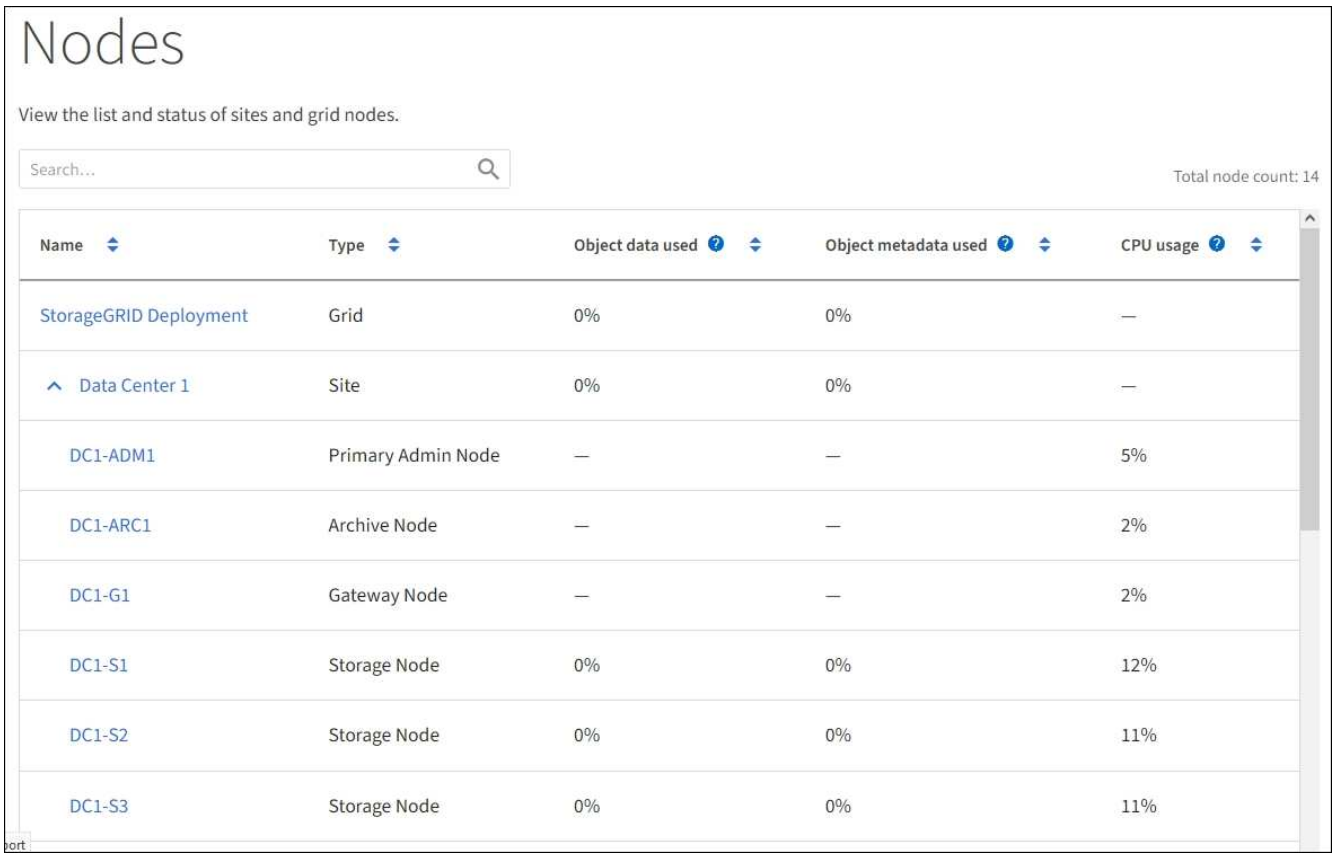

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at http://www.netapp.com/TM are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.