cashmatic web interface

EN

CASHMATIC
reshaping
the payment
process

WEB INTERFACE USER MANUAL
1.0

INDICE


1. ACCESSING THE WEB INTERFACE	**6**
2. BASIC NOTIONS ABOUT THE WEB SERVER	**7**
LOGGING IN TO THE WEB SERVER	7
3. LEVELS STATUS	**8**
4. STANDARD OPERATIONS	**9**
REFILL	9
WITHDRAWAL	10
CHANGE	11
EMPTYING TO THE FLOAT LEVEL	12
RESETTING THE CASHBOX LEVELS	13
5. EXTRAORDINARY OPERATIONS	**14**
TRANSACTION	14
TOTAL EMPTYING	15
WITHDRAWAL BY DENOMINATIONS	16
DEPOSIT	17
LEVELS CORRECTION	18
PARKING	19
6. REPORT	**20**
DOWNLOAD REPORT	21
7. SETTINGS	**22**
IP ADDRESS	22
WIFI	23
FLOAT LEVELS	24
MAX LEVELS	25
DENOMINATIONS	26
MAIL SERVER	27
PRINTER	28
8. LOGS DOWNLOAD	**29**
9. USERS MANAGEMENT	**30**
CREATION OF A NEW USER	30
PERMISSIONS	31
MANDATORY CAUSES	32
E-MAIL NOTIFICATIONS	32
EDIT USER	33
CHANGE PASSWORD	34
10. UPDATE	**35**
11. DEVICE INFO	**36**
12. LOGOUT	**37**
13. SHUTDOWN	**38**

1. ACCESSING THE WEB INTERFACE

To access the web panel, you need to know the IP address assigned to the automatic drawer by your router's DHCP server. To know the IP address, you must first log in via display.

See:
TOUCHSCREEN DISPLAY USER MANUAL

2. BASIC NOTIONS ABOUT THE WEB SERVER

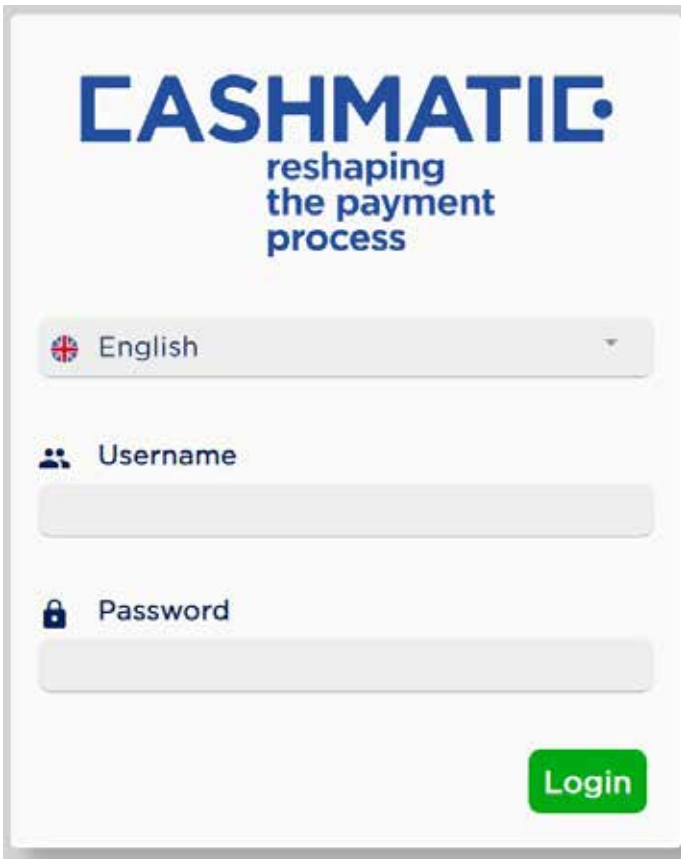

To access the web panel, enter your account information and press “Login.”

If you do not have a registered user, you will log in without being asked for credentials.

3. LEVELS STATUS

The main page of the web server provides a quick look at the levels in the Cashmatic drawer.

The number of pieces of each denomination (coins and bills) available for recycling or in the cashbox are noted.

The maximum coin recycling quantities will be automatically recalculated as the available space will vary with each movement.



4. STANDARD OPERATIONS



REFILL

To start a refill operation, click on "**Standard Operations", "Refill".**
For the correct usage of the automatic drawer, a refill to the float level is needed.


IMPORTANT

WHEN REFILLING COINS, INSERT MAXIMUM 15 AT A TIME.



NOTE

The acceptance rate is automatically decreased if the specified maximum threshold is exceeded to avoid excessive component stress.

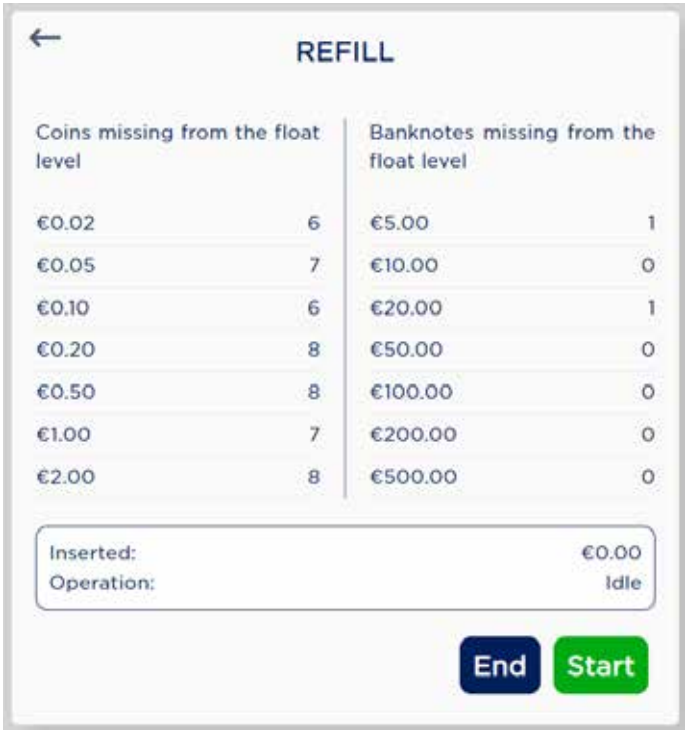

RECOMMENDED FLOAT LEVELS


2 CENT = 40 coins
5 CENT = 40 coins
10 CENT = 40 coins
20 CENT = 40 coins
50 CENT = 40 coins
100 CENT = 40 coins
200 CENT = 40 coins
5 EURO = 10 notes
10 EURO = 8 notes
20 EURO = 6 notes
50 EURO = 2 notes



WITHDRAWAL

To make a withdrawal, it is necessary to click on the “**Standard Operations**” menu item, “**Withdrawal**” enter the amount to be withdrawn, then press the “Start” button.



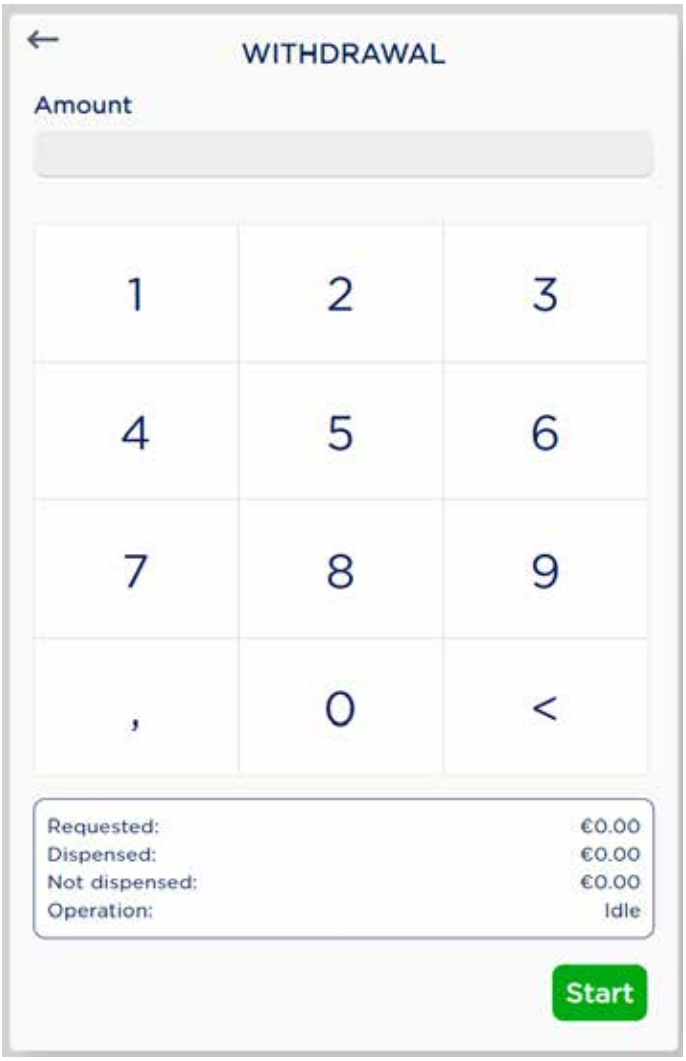




CHANGE

To make a change, you need to click on the "**Standard Operations**" menu item, "**Change**," choose the amounts you wish to receive in exchange, and then press "Start."

In case the amount of money entered is not equal to the amount requested, the drawer will return the money entered by the user.








EMPTYING TO THE FLOAT LEVEL

To perform coin or banknote emptying at the set cash float level, you need to click on the "**Standard Operations**" menu item; then click on "**Coin Alignment**" if you want to empty coins at the cash fund level, or on "**Banknote alignment**" if you want to empty banknotes and cash fund level.

The "**Total alignment**" function, will perform the alignment of both coins and banknotes at the same time.

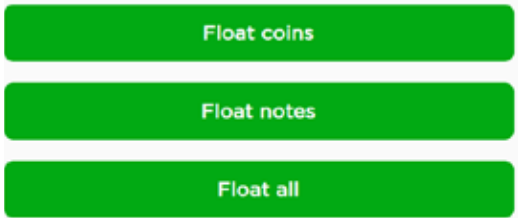









RESETTING THE CASHBOX LEVELS

To perform an emptying of the cashbox or stacker, so as to reset the levels of banknotes that were inside, click the "**Standard Operations**" menu item, "**Reset cashbox level**"





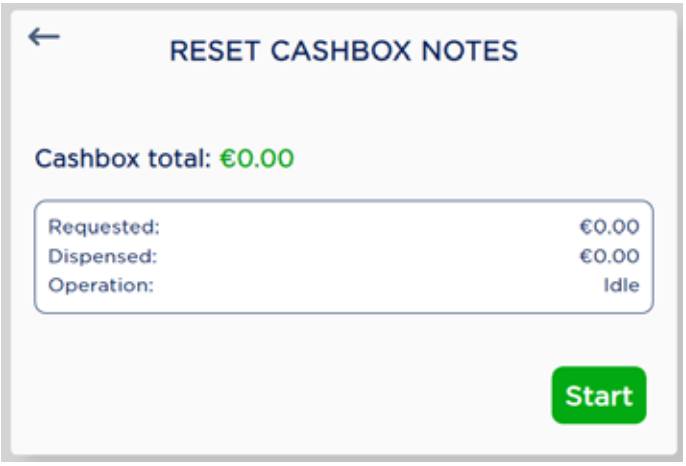


5. EXTRAORDINARY OPERATIONS



TRANSACTION

To make a transaction it is necessary to click on the menu item “**Extraordinary Operations**” “**Transaction**” type in the required amount and finally click on the “Start” button, the drawer will automatically start the transaction.



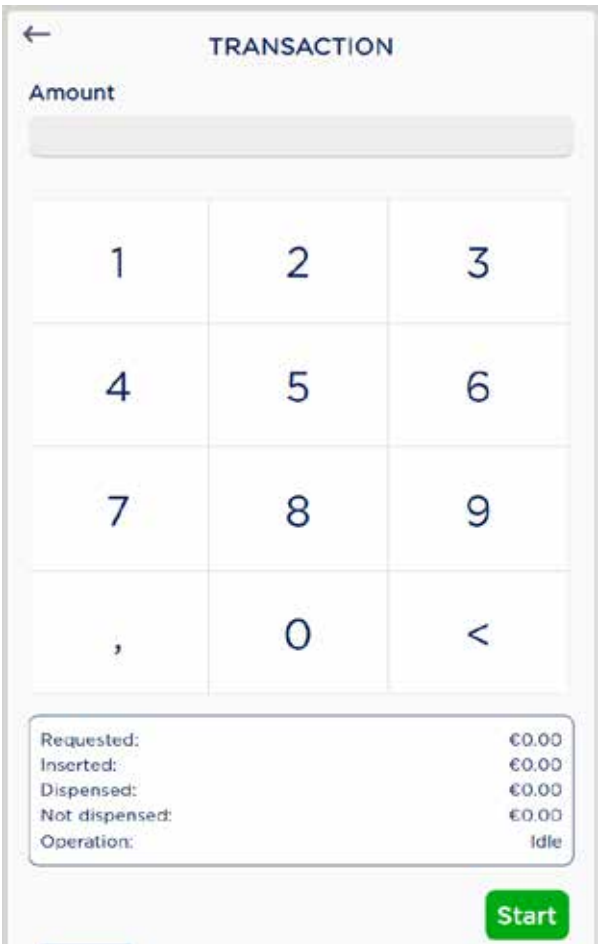



TOTAL EMPTYING

To perform an emptying of the cashbox or stacker so as to reset the levels of banknotes that were in it to zero, click the "**Extraordinary Operations**" menu item, "**Empty all coins**" to empty the coins into the tray or "**Empty all banknotes**" to move all the banknotes into the cashbox.

The "**Empty all**" operation will empty both coins and banknotes at the same time.














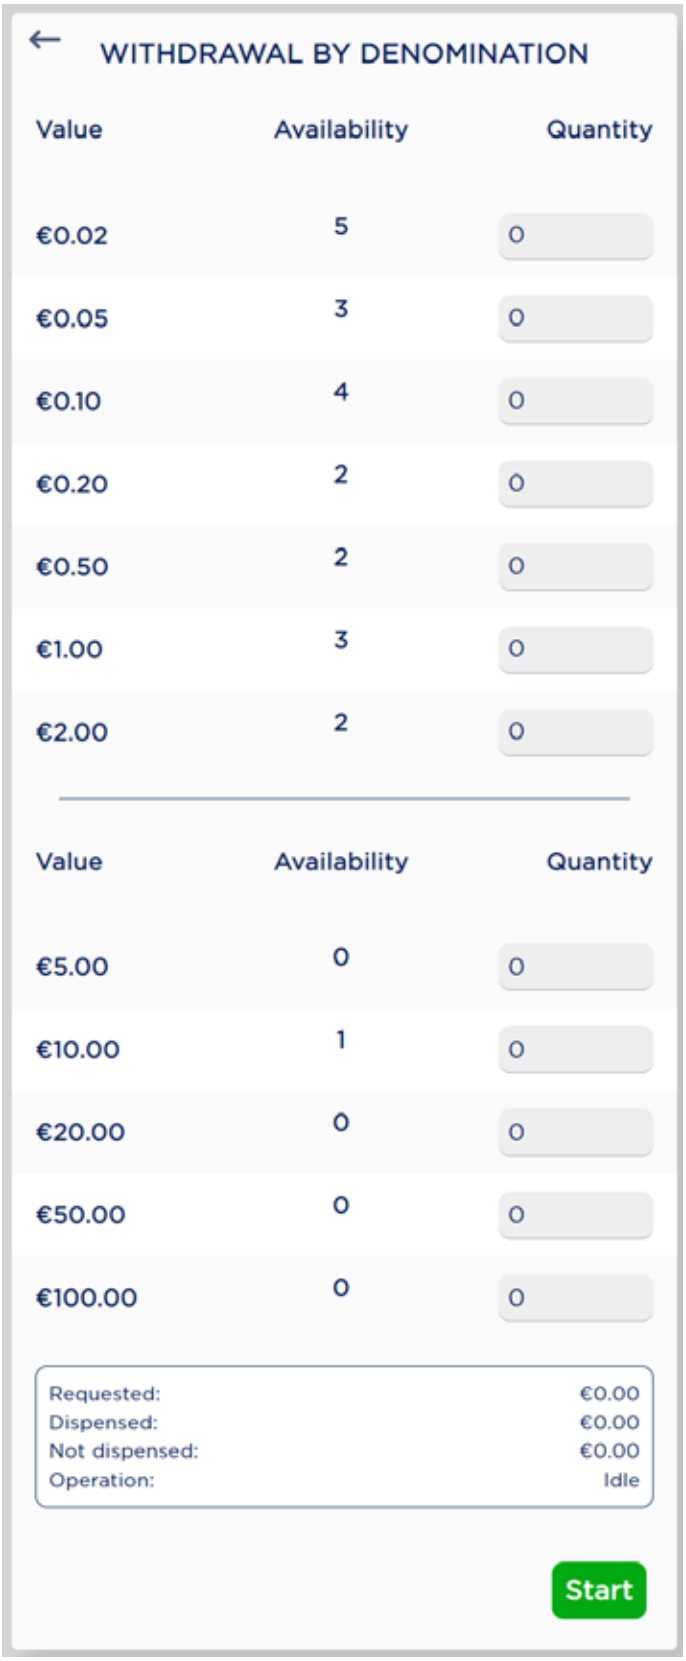

WITHDRAWAL BY DENOMINATION

Withdrawal by denomination allows you to withdraw coins or banknotes according to the denominations needed. To make a withdrawal by denomination, click on the menu item "**Extraordinary Operations**" "**Withdrawal by Denomination**" following which select the quantities needed and click on "Start."


*On some models, in case the chosen banknotes are in a position too far away and cannot be dispensed, re-execute the operation with a different denomination or a simple withdrawal



DEPOSIT

The deposit funciton allows the user to refill coins and banknotes, ignoring the cash-float limit.
To start a deposit, it is necessary to click on the "**Extraordinary Operations**" menu item, "**Deposit**", and press on "Start" to begin the operation.



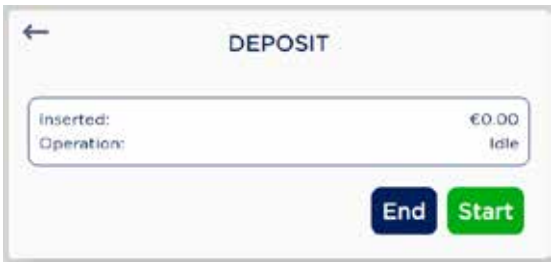







LEVELS CORRECTION

Through the "**Level Correction**" function, it is possible to retify the level of coins within the device after manually adding or removing an amount of money.
To retify, it is then necessary to click on the "**Extraordinary Operations**" menu item, "**Levels correction**" indicating the new actual quantities, and finally press "Confirm."

Note
Pay close attention to the quantities entered, as an error in setting the levels may not ensure proper operation.

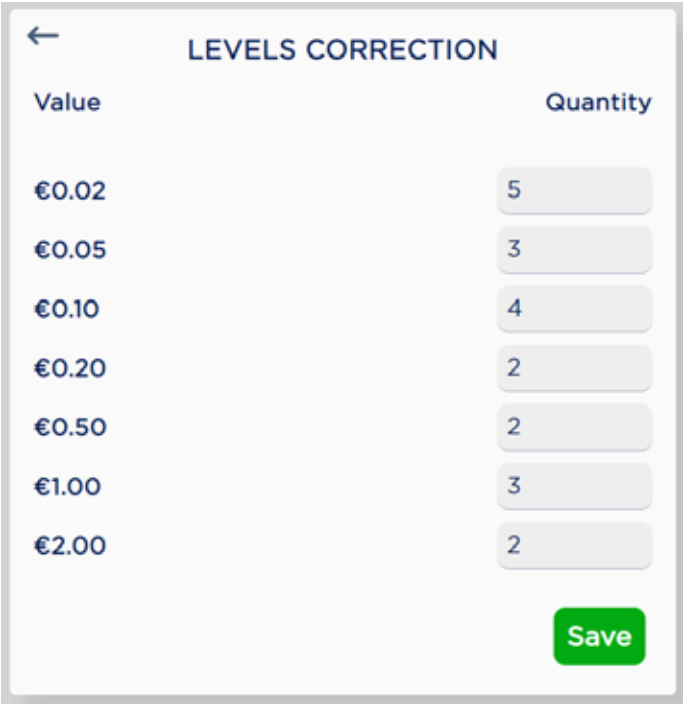







PARKING


The parking function, prepares the automatic drawer for transport.
To carry out drawer parking, it is necessary to click on the "**Extraordinary Operations**" menu item, "**Parking**", and press on "Start" to begin the operation.

6. REPORT

The report section, shows a simplified accounting function on the first page.
The accounting starts from the first power on of the device and ends at the last reset of it.
To reset the accounting calculation period, just click on "**Reset**", to view the last reset, click on "**Previous**".

The report section allows you to view, by indicating the start and end date, all transactions made from the drawer, or you can search for only a specific transaction (payments, reloads, withdrawals, alignments, and exchanges).


To use this function, click on the "**Reports**" menu item, fill in the required data and click on "**Search**."

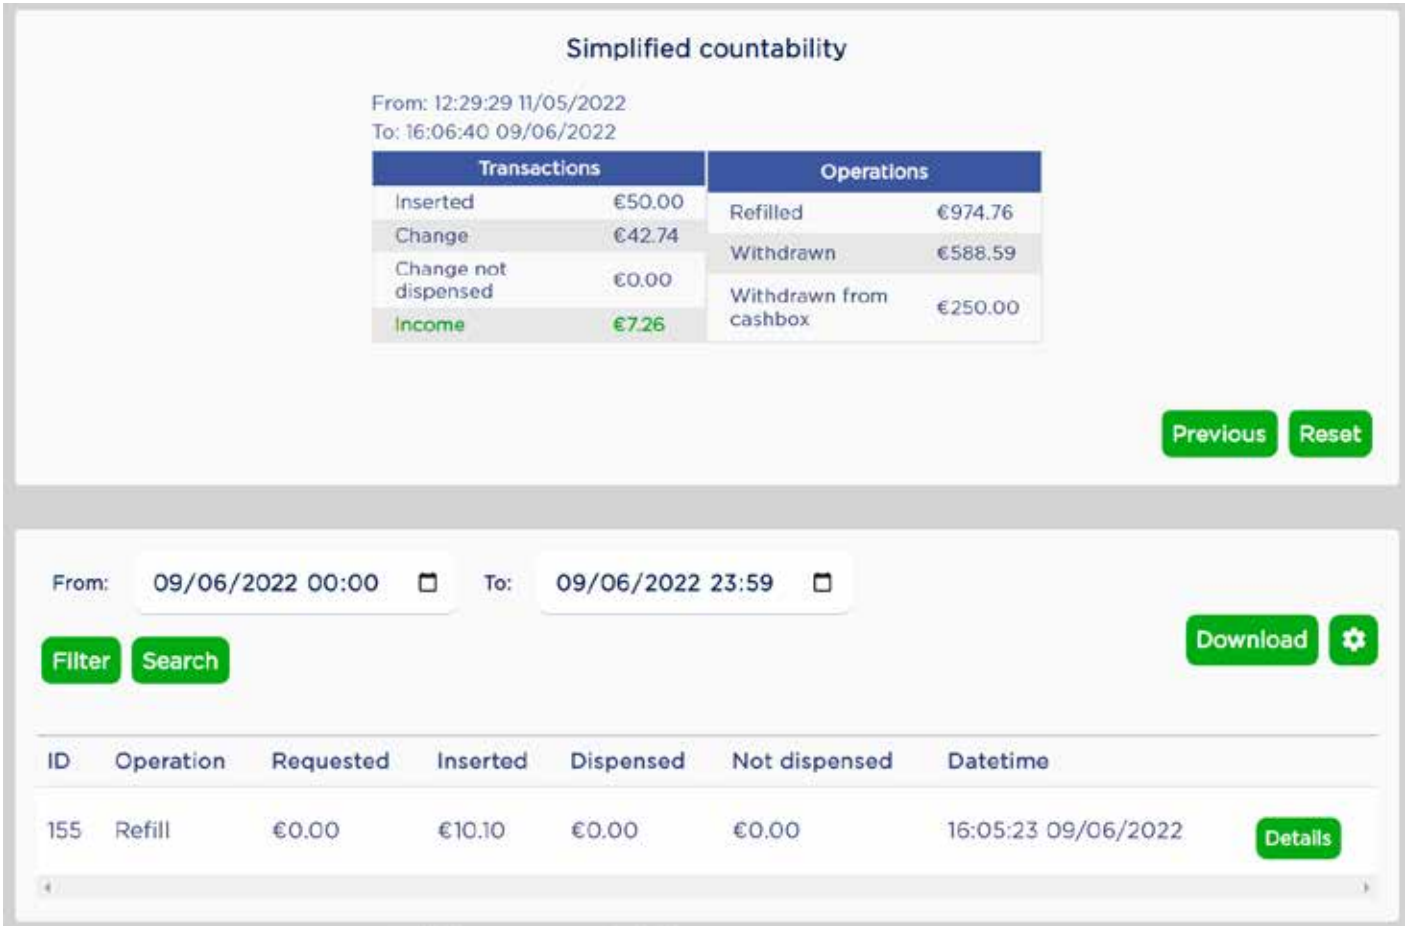




Operation	Change
Requested	€4.00
Inserted	€0.00
Dispensed	€0.00
Not dispensed	€0.00
User ID	1
Username	a
Name	a
Surname	a
Operation start	14:24:35 21/02/2022
Operation end	14:24:37 21/02/2022
Causal	
Reference	
Operation outcome	canceled
Source IP	192.168.233.1

To see the details of an operation click on the "**Details**" button located at the bottom of the table row.

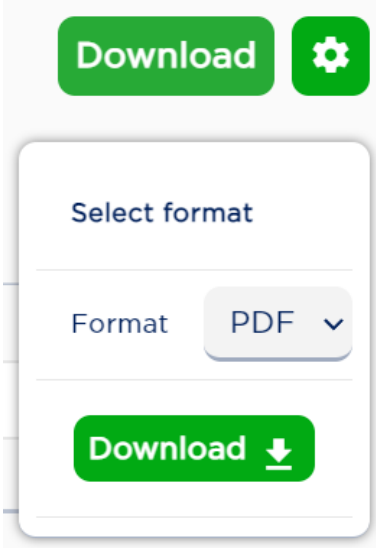

It is possible to download the uploaded table via the "**Download**" button.
You can decide to download a file in PDF format or in CSV (Excel) format.

To change the configuration of the PDF file, you need to click on the cog icon.

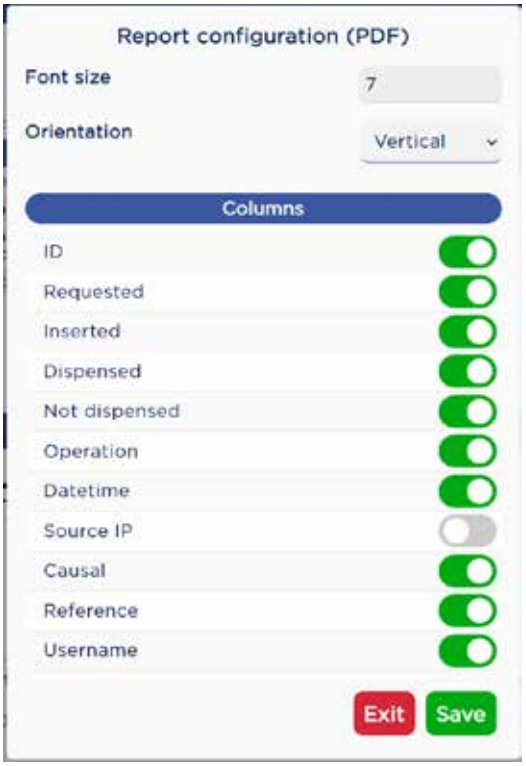

7. SETTINGS






IP ADDRESS

In the management panel you can view and set the IP address of the drawer. For this function, it is necessary to click on the "**Settings**" menu item, "**IP Address**".

Note

In order to set the IP address of the drawer, it must already be physically connected via Ethernet cable.




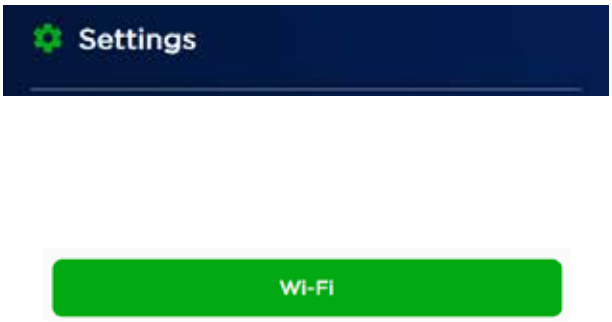


WI-FI

In the management panel, you can enable the Wi-Fi function.
For this function, you need to click on the "**Settings**" menu item, "**Wi-Fi.**"

Once enabled, the drawer will automatically perform a search for available networks, to perform a new search click on "**Scan**".

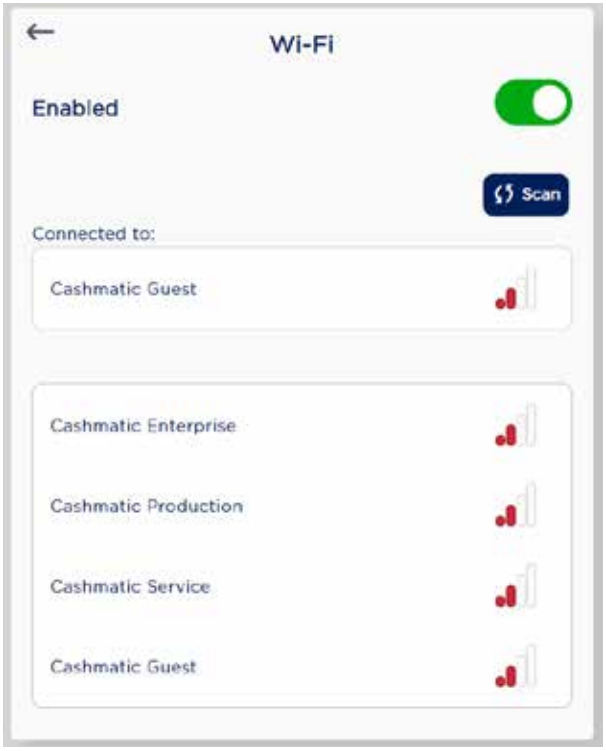






FLOAT LEVELS

Through the management panel it is possible to set the cash fund levels of the automatic drawer. For this function, it is necessary to click on the "**Settings**" menu item, "**Cash fund levels**"

The cash float level indicates the number of coins and banknotes that the drawer will use to give change and must hold when emptying at the cash fund level.

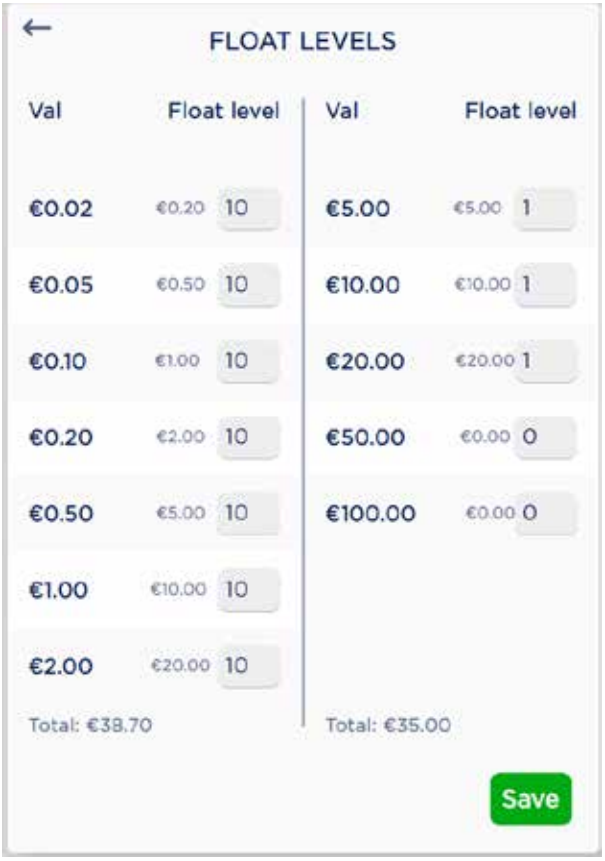






MAX LEVELS

Through the management panel, it is possible to set the maximum levels of auto drawer recycling. For this function, it is necessary to click on the "**Settings**" menu item, "**Max Levels**"

The maximum recycling level indicates the maximum amount of coins and/or banknotes that will be stored in the recyclers.

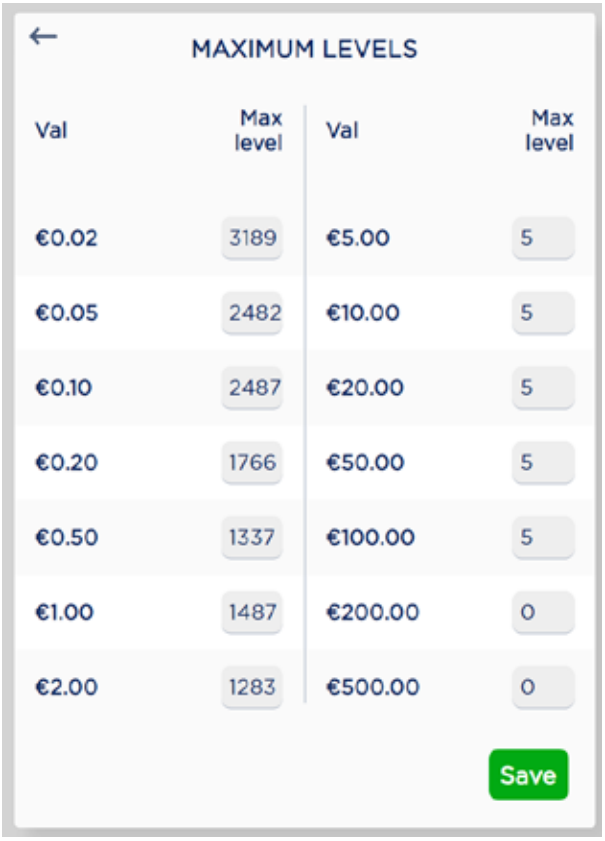






DENOMINATIONS

Through the panel it is possible to enable/disable the acceptance of coin/banknote denominations.

In order to use the service, it is necessary to click on the menu item “**Settings**” “**Denominations**” and finally click “Save”



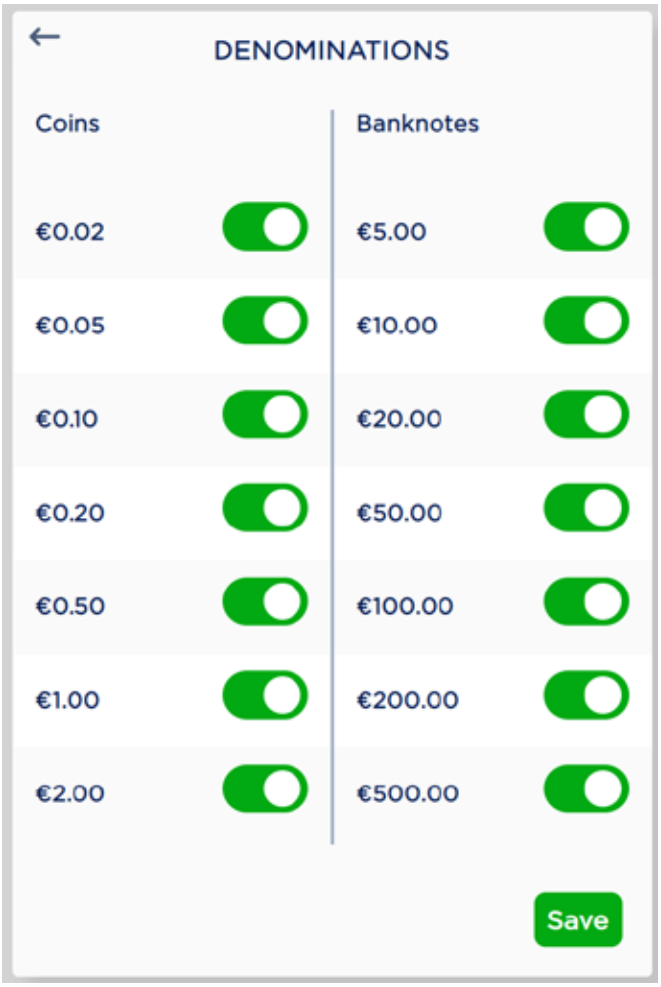


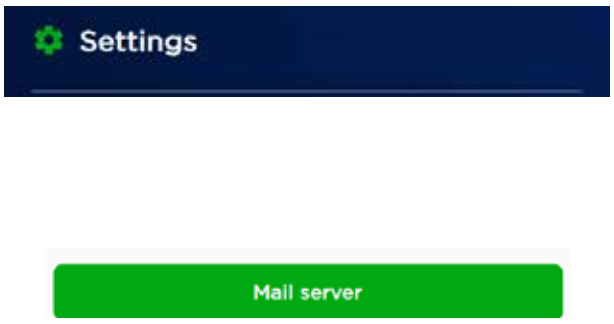

MAIL SERVER

The mail server allows you to receive mails to all users enabled on the drawer status to use this service you need a server (example gmail).

In order to use "**Mail Server**", you need to click on the menu item "**Settings**", "**Mail Server**", enter the required information to use the service and finally click "Set".

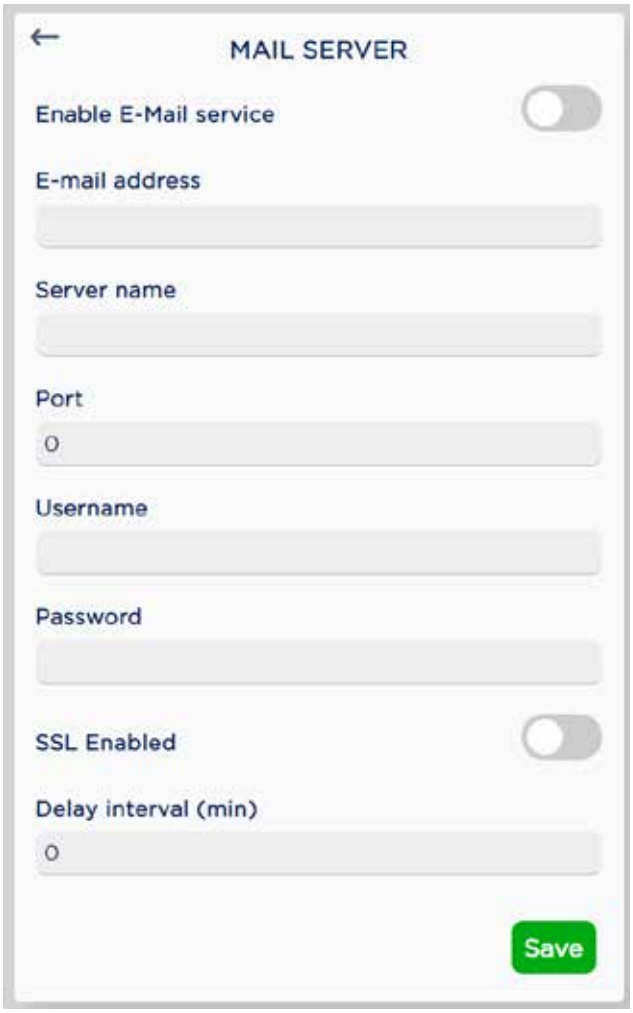




PRINTER

The service allows you to print notices related to notifications.

In order to use "**Printer**" it is necessary to click on the menu item "**Settings**" "**Printer**" enter the information required to use the service, and finally click "Set".



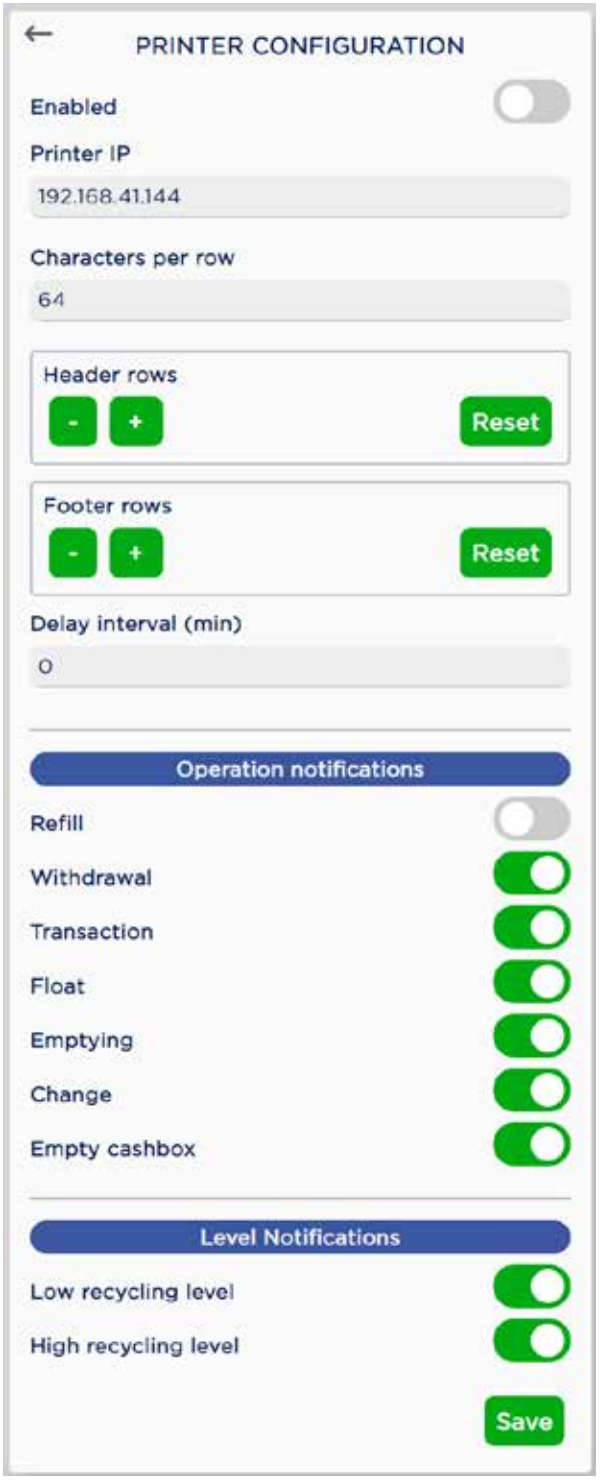

Characters per line
The number of characters that occupy the width of a line on the receipt.

Header lines
The lines printed as the header of the receipt.
To add a line, click on the "+" button.
To remove a row, click on the "-" button.

Rows will be printed in the same order as they appear on the screen.

Footer rows.
The rows printed at the bottom of the receipt.
To add a row, click on the "+" button.
To remove a row, click on the "-" button.

Rows will be printed in the same order as they appear on the screen.

Waiting interval
Interval of time in minutes for which the machine will avoid printing notification receipts (low recycle, high recycle).

Instead, receipts regarding operations will ignore the waiting interval.


8. LOGS DOWNLOAD



To download the log files, it is necessary to click on the "**Log**" menu item.


Select the date for which you want to download the files and click on "**Download**."


9. USERS MANAGEMENT

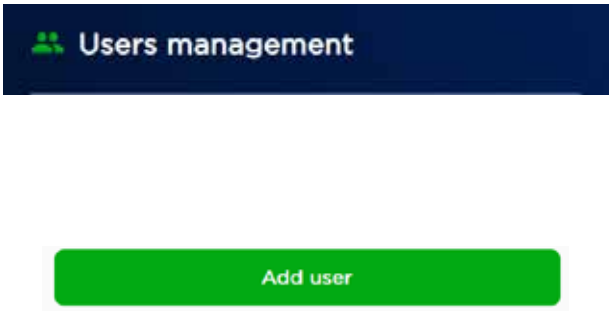

CREATION OF A NEW USER


Users can be created to make the management of the auto drawer more flexible. Only users with permission enabled can create or edit user accounts.
To create a new user account click the “User Management” menu item, “Add User,” filling in the spaces with the new account information.

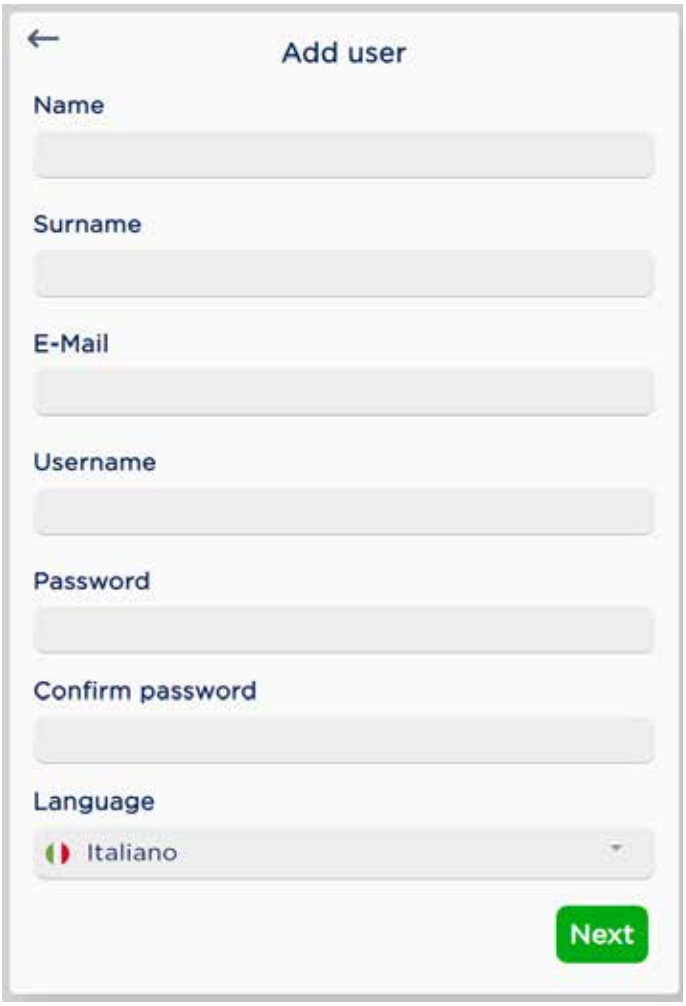

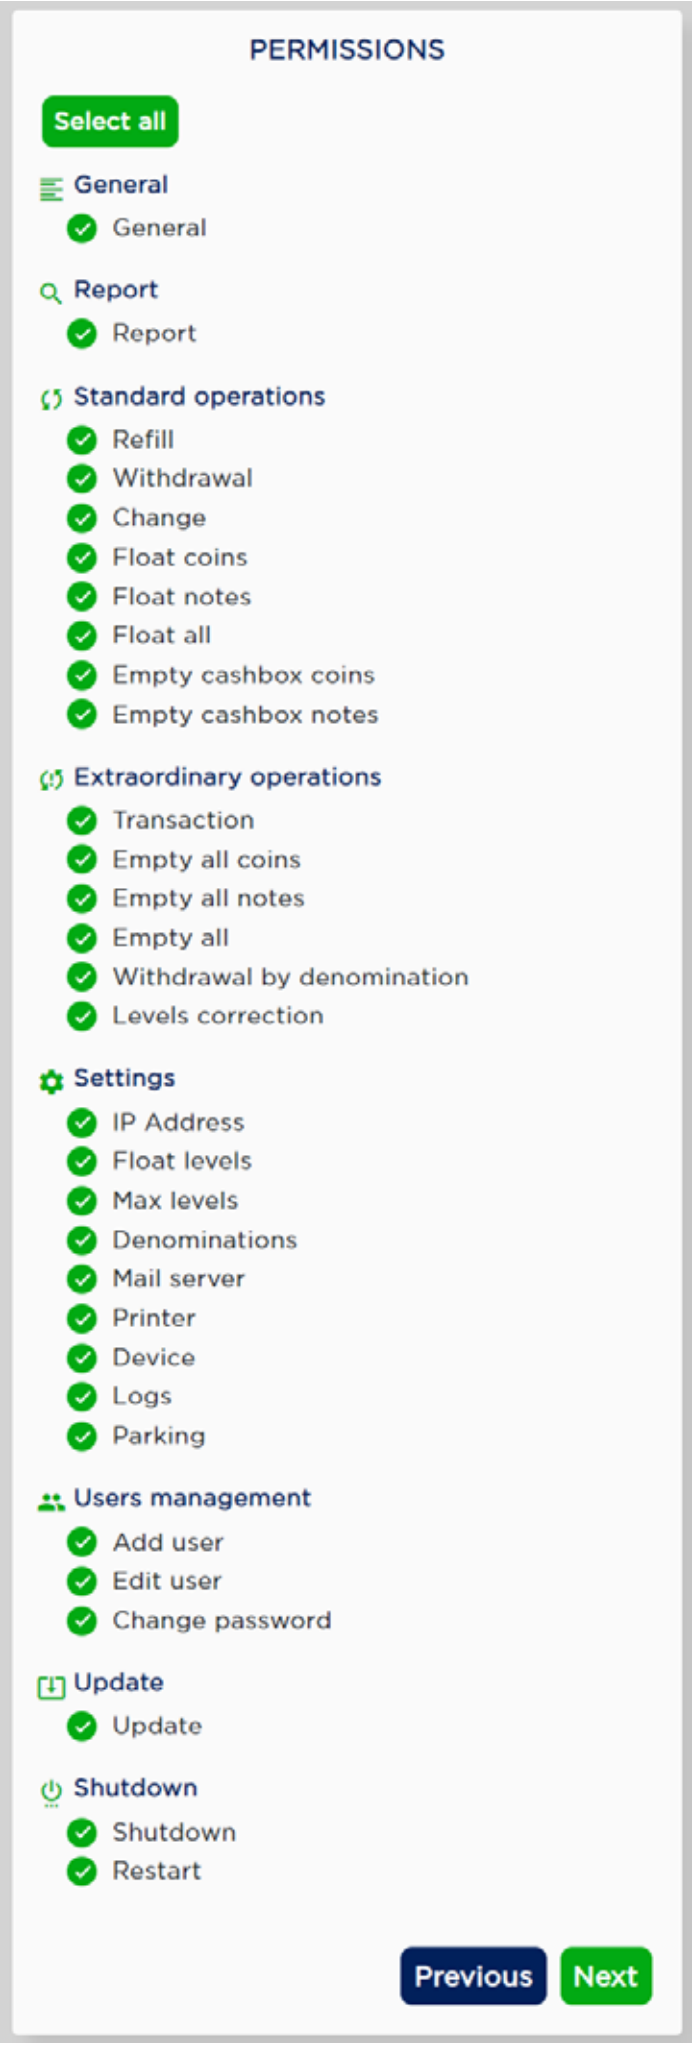


You can in addition assign certain permissions to each user.


Note
Permissions given to a user on the web interface are also valid on the touchscreen display menu.

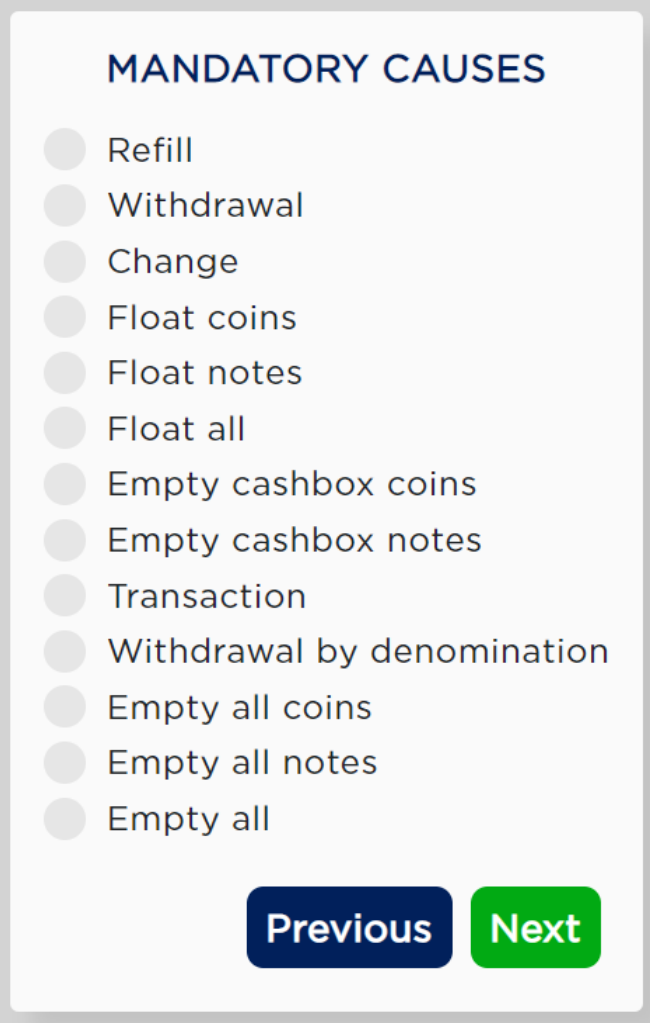

It is also possible to determine obligatory causalities that the user must enter to launch certain operations

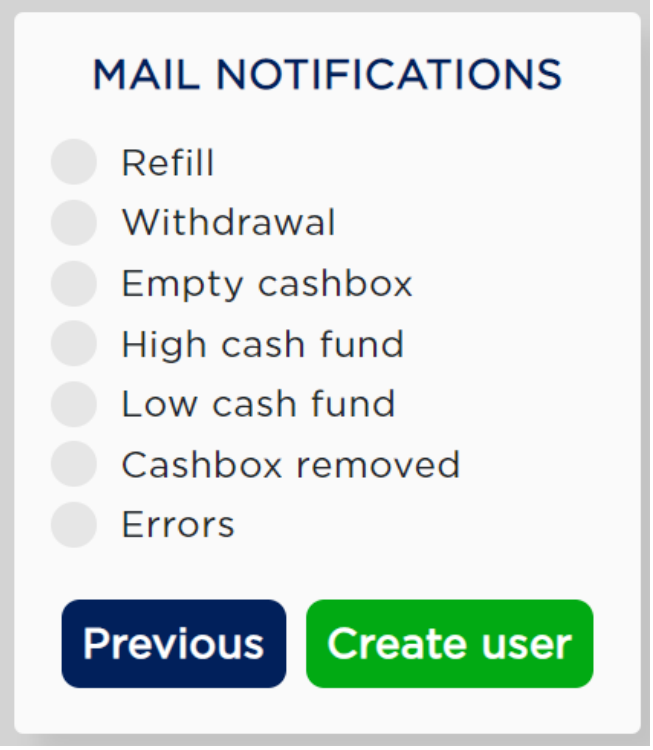

Each operator will be able to receive notifications on their e-mail by setting the operations for which they would like to be notified.

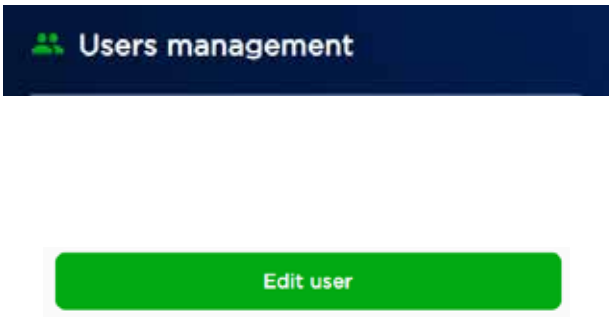

EDIT USER

The “**Edit**” function, allows, even after creating an account, to change its information and permissions at any time.
To use this function, you must click the “**User Management**” menu item, “**Edit**.”

It is also possible to deactivate a user.






CHANGE PASSWORD

To change the password click the menu item, “**User Management**” “**Change Password**” enter the current password and twice the password you want to enter as the new one, then click “Next”

If you have the necessary permissions, you will also be able to change the password to another user.

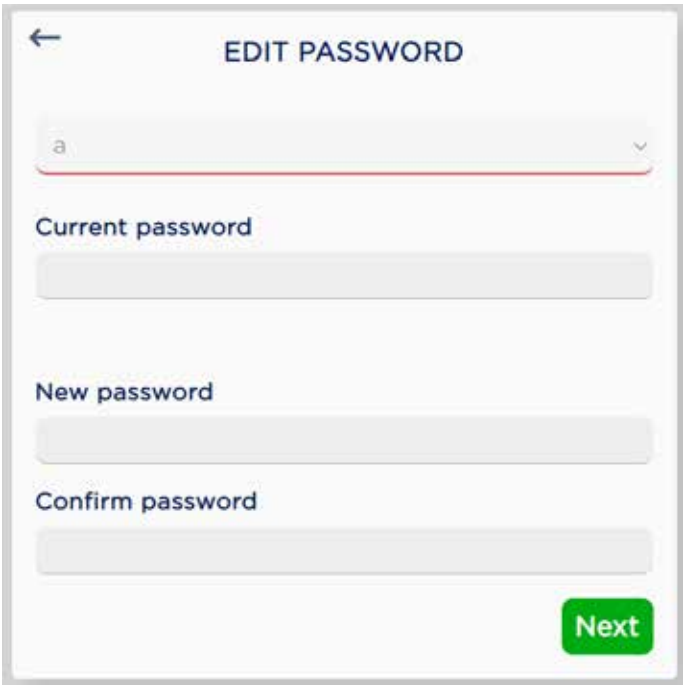



10. UPDATE





UPDATE

To perform the web management panel update click on the "**Update**" menu item.


Click on "**Check**" to check for updates.
If the device has found available updates, you can download them via the "Download" button.

11. DEVICE INFO



INFO

To view various information about the device, click on the "**About**" menu item.
Through this screen you can also view the status of the components.

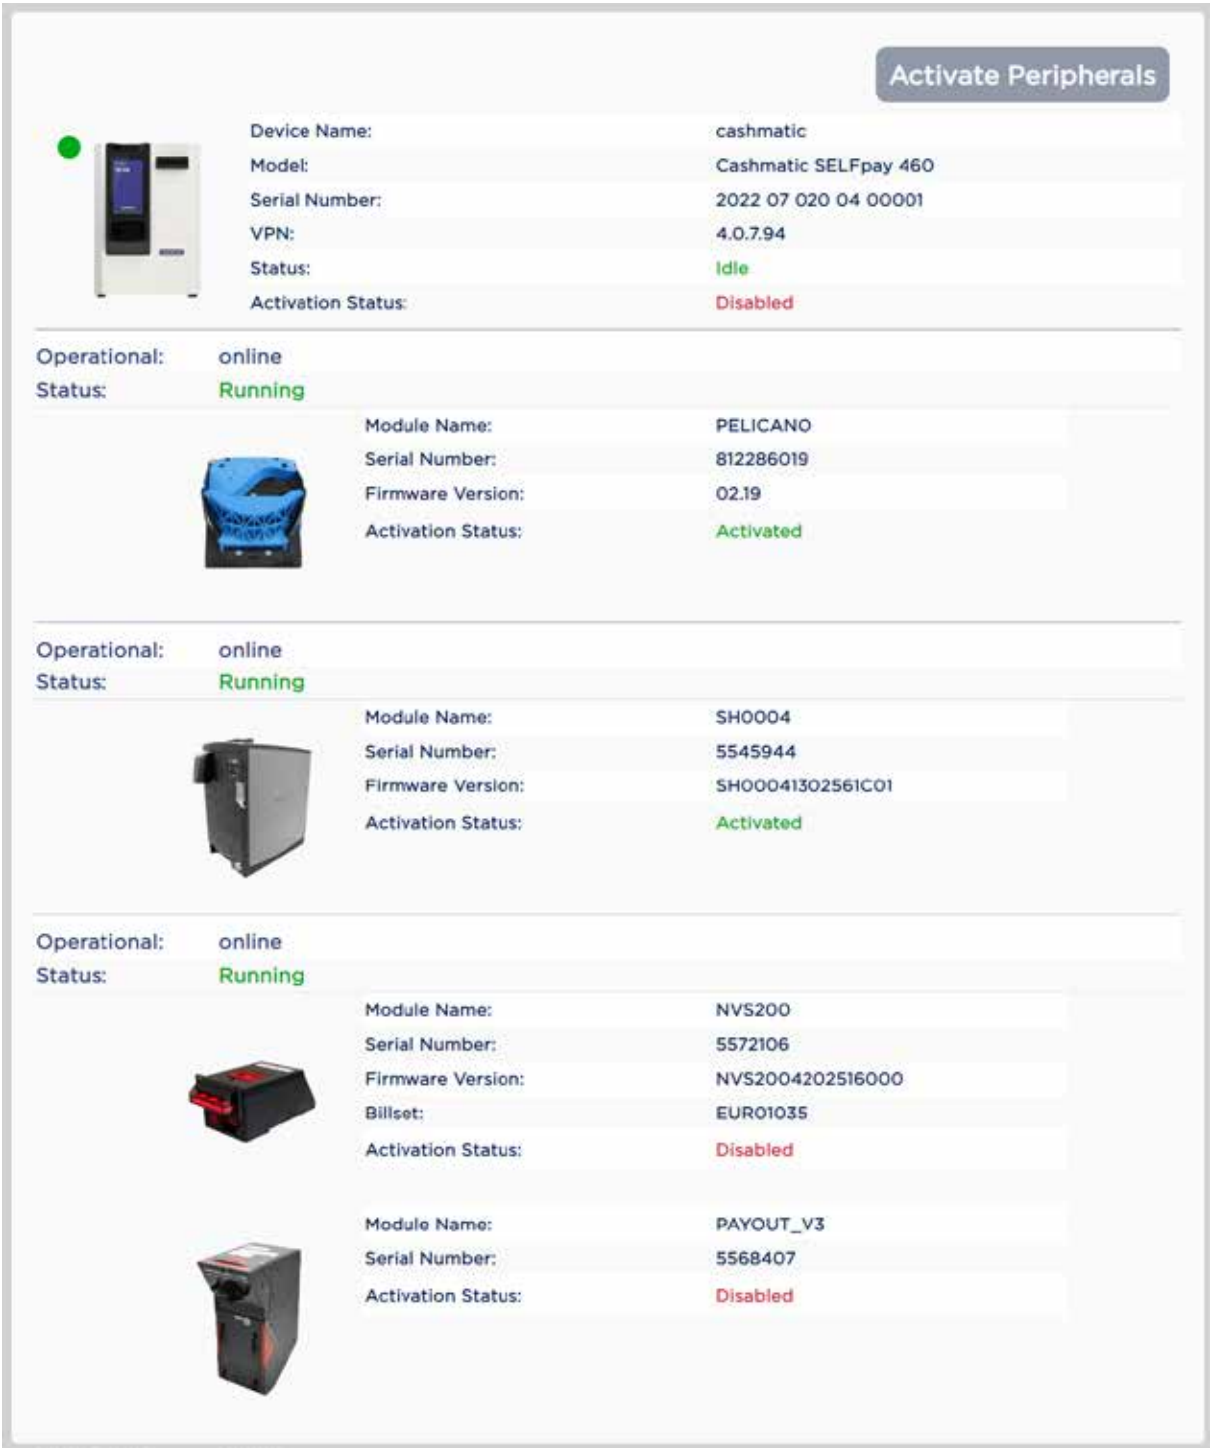

12. LOGOUT



To disconnect an account from the web server, click on the "**Logout**" menu item, and the account will automatically log out.

13. SHUTDOWN



To turn off the automatic drawer, it is necessary to click on the “**Shutdown**” menu item.

It is also possible to restart the device.

N.B.
For proper shutdown of the machine, it is forbidden to operate the ON/OFF switch without first requesting software shutdown.