cashmatic selfpay 460

EN

CASHMATIC
reshaping
the payment
process

USER MANUAL 1.3

TABLE OF CONTENTS

1. PACKAGE CONTENT 5
2. CONDITIONS AND TERMS OF USE OF THIS DOCUMENTATION 6
3. WARNINGS 7
4. USE AND STORAGE OF THE MANUAL 8
5. MACHINE OPERATORS 10
6. PRECAUTIONS FOR USE 12
7. OPERATING CONDITIONS 13
8. WARNINGS FOR USE 14
9. WARNINGS FOR MAINTENANCE 15
10. DISPOSAL PRECAUTIONS 16
11. FEATURES OF AUTOMATED CASH HANDLING MACHINE 17
12. SUPPORTED OPERATING SYSTEMS 20
13. DEVICE INSTALLATION 21
14. DEVICE OPENING 22
15. ASSISTANCE 25
16. BANKNOTE MODULE 26
17. COIN VALIDATOR 30
18. COIN DISPENSER 34
19. ELECTRONIC LOCK 38
20. WARRANTY CONDITIONS 39
21. TECHNICAL DATA SHEET 40
22. CONFORMITY STATEMENT 41

1. PACKAGE CONTENT

With mechanical lock:

- 4 Keys for door opening
- 2 Keys for unlocking cash-box
- 1 Ethernet cable
- 1 Power cable with VDE plug
- 1 Digital user manual

With electronic lock:

- 2 Keys for door opening
- 2 Keys for unlocking cash-box
- 1 Ethernet cable
- 1 Power cable with VDE plug
- 1 Digital user manual

2. CONDITIONS AND TERMS OF USE OF THIS DOCUMENTATION

This document consists of 41 pages; this one included, and must always accompany the appliance in order to be exhibited at any inspection request. The original is kept at the headquarters of Cashmatic S.r.l. The copies are considered valid only if they are identical to the original in every part and the handwritten signature of the legal representative of Cashmatic S.r.l. is present.

READ BEFORE INSTALLATION AND USE-CONVENTIONS

1

From this point forward, later in this manual, we will use the terms “machine” and “device” to designate in a simpler and more readily understandable way, the artefact produced by Cashmatic S.r.l., which is the subject of this user’s manual and whose trade name also appears on the cover or title page of this manual.

2

From this point forward, later in this manual, we will use the term “manufacturer” to designate, in a simpler and more readily understandable way, the operators of the Company.

CASHMATIC S.r.l. Via Fondo Ausa, 28 - 47891 Dogana Rep. San Marino
Telefono (+39) 0541 17.96.791 Fax. (+39) 0541 17.94.301
C.O.E. SM27525
Email. info@cashmatic.it Web. www.cashmatic.it

www.massarie.com +18446277274 info@massarie.com Massarie Solutions inc.

3. WARNINGS

ATTENZIONE!

Any operation not explicitly described or not expressly admitted by this manual is :
STRICTLY FORBIDDEN.

ATTENTION!

Who uses or gives in use this machine, explicitly and irrevocably recognizes that no responsibility can be attributed to the manufacturer of the same (neither civil nor criminal, nor of any other type) in the event of an accident that occurs IN PRESENCE (and not necessarily "as a consequence") of violation of one or more (none excluded) instructions of this user manual

ATTENTION!

Who purchases and/or gives and/or receives in use this machine without recognizing the validity of the two previous clauses, must immediately abandon the use of this machine, otherwise the two previous clauses will be considered explicitly and irrevocably accepted by simply turning on and using the machine.

ATTENTION!

The power line at 230V must be:

- Stabilized;
- Decoupled;
- Dedicated.*

*Dedicated means an exclusive power line dimensioned and sectioned for the electrical load to be supported; linking the electrical system board directly to the Smart Cash Drawer.

4. USE AND STORAGE OF THE MANUAL

Carefully read and understand this manual before using the machine. Always keep it in a readily accessible place in order to allow an easy and quick consultation to people who are entrusted with the daily management “on the field” of the device. All attachments that describe any of the machine component are considered as an integral part of this manual and therefore must be carefully read, understood and adequately memorized before using the device for the first time.

To ensure the usability of this manual over time it must be kept in a dry, dust-free place, and protected against the action of insects or other animals that could damage it. If you need to purchase additional copies of the manual, the manufacturer must be contacted.

This manual provides the information and instructions to carry out, in safe conditions, the machine-related activities, from its delivery until dismantling at the end of its life cycle. The information here contained is the condition of use provided by the manufacturer. Therefore, before using the machine, it is essential to carefully read and understand this entire manual, to know exactly how the device works and all the necessary manouvres.

This machine is not designed for nonprofessional environments. All activities related to the maintenance, repair and final disposal must therefore be carried out by qualified and suitably trained personnel.

The manufacturer declines all responsibility for any damage (direct and/or indirect damages to people and/or things) caused by incorrect maintenance of the machine

ATTENTION!

Do not neglect, and do not underestimate, the reading, understanding and memorisation of any of the parts that form this user’s manual; as well as of any instruction and/or any pictogram placed on the machine; and also of any future “addenda et corrigenda” (additions and corrections) and any other information, instruction, explanation that in any way the manufacturer of this machine and its technical and commercial network will provide you.

CONSCIOUS USAGE

Do not use this machine before having entirely read and understood the contents of this manual, as well as all the warnings and all the symbols on the machine.

PROHIBITION OF IMPROPER USE

Do not use this machine in any way that differs from what is indicated in this manual and in the warnings and/or pictograms placed on the machine as this could represent a risk for the safety of people and their goods. The manufacturer and the retailer of this machine are not responsible in any way for any of the consequences of behaviours that do not comply with those indicated in this user manual and/or in the warnings and/or in the pictograms placed on the machine. Remember that failure to comply with the instructions contained in this manual and/or in the warnings and/or in the pictograms placed on the machine constitutes a violation of current safety legislation and that in the event of an accident this aspect can also acquire criminal relevance for the person in charge of the machine supervision. Failure to comply with the instructions indicated in this manual and/or in the warnings and/or in the pictograms placed on the machine will invalidate any form of explicit and/or implicit warranty.

PROHIBITED NOTIFICATIONS

Do not modify in any way the machine delivered to you by our technicians and/or our sales network. The manufacturer and the retailer of the machine are not responsible in any way for any of the direct and/or indirect consequences of modifications made to the machine delivered to you by our technicians and/or our sales network.

Remember that modifying the machine constitutes a violation of the current legislation and in the event of an accident this aspect may also acquire a heavy penal relevance for you. Any type of modification made to the machine delivered to you by our technicians and/or our sales network will invalidate any form of explicit and/or implicit warranty

TAMPERING PROHIBITED

Never attempt to tamper with any of the security devices as they have been installed for your own safety.
This machine is supplied complete with protections and it is absolutely forbidden to remove them

DOCUMENTS

The documents attached to this user manual that technically describe the electrical system and any other groups (electrical, electromechanical, pneumatic, hydraulic, magnetic, etc.), are an integral part of this manual, but their reading is necessary especially for installation, extraordinary maintenance, repair, disposal and/or moving of the machine, it is not essential for normal use. For normal use the present volume - easier to understand and to consult - is sufficient.

The manufacturer reserves the right to apply, in any moment, changes that are considered appropriate to the production, without any obligation to update the machines already supplied or the manuals already issued, exception made for the cases explicitly provided for by current legislation

5. MACHINE OPERATORS

Machine operators and maintenance personnel must:

- Be adult and in any case not younger than eighteen years of age;
- Be in normal possession of all the common mental and physical conditions;
- Be persons with a height close to the national or European average;
- Perfectly know the English language (this user's manual and the instructions in pictograms placed on the machine are in English);
- Have knowledge of the most common English words that are normally used in mechanics and electromechanics (non-exhaustive example: start, stop, danger, voltage, high, low, attention, on, off, left, right, speed, etc.);
- Be qualified for the maintenance and repair of electrical and/or electronic and/ or electromechanical machines by attending and passing professional courses officially recognized by competent administrative authorities (State or Regions or Provinces or Municipalities) or by the employing company itself.
- Have been hired for at least three months in the company where the machine, which is the subject of this manual, is used; and have at least a forty days' work experience (at least 280 actual hours which equals to eight working weeks of 35 hours each) with electromechanical machines of any type;
- The hours of work with office machines or tools for cleaning, or with forklifts and/or load lifters, are not qualified for the experience required in the previous point;
- If the user/operator is inexperienced, the presence of qualified personnel who exercises the function of instructor and supervisor is required;
- Be informed that, when they are in charge of the maintenance and/or repair of the machine, which is the subject of this manual, being also responsible of the control and/ or use, even if only occasionally and/or temporarily, of other equipments and/or devices (also personal, such as cell phones) may cause unsafe situations due to the overlapping of tasks, noise, and due to the possible presence of other people;
- NOTE: in addition to the usual limitations of use provided for by local legislation, access to this machine must be forbidden to persons with epilepsy and/or other similar disorders as stroboscopic or similar effects due to lights and noise cannot be excluded;
- Similarly, use must be prohibited to all persons with temporary and/or permanent handicaps and/or disabilities, since the machine has been designed for use byoperators in normal possession of all the common mental and physical conditions;
- Particular states of fatigue and/or debilitation, even if not related to work activities or to declared and/or certified diseases, must be considered and treated as lack of possession of all the common mental and physical conditions;
- Especially must be prohibited even the simple approach to the device to people under the influence of alcohol, psychotropic drugs, drugs (both soft and hard);
- A particular recommendation must be made on the dangers related to loading and/or unloading operations in public areas where strangers, children, old people, distracted people and even animals could approach the machine inadvertently or out of curiosity;
- The employer must make explicit warning of all these circumstances, not depending on the manufacturer, to his employees and/or service

providers, reminding to everyone involved in the professional use of the machine that diligence and prudence during the use of the machine preserve from accidents and increase safety at work.

6. PRECAUTIONS FOR USE

- This device is intended exclusively for INDOOR USE
- Any operation must be carried out solely by qualified and authorized technical personnel.
- Before operating inside the device, unplug the power cord from the electricity network.
- The device is not intended for use by persons (including children) whose physical, sensory or mental capabilities are reduced, who lack experience or knowledge, unless they have been given supervision or instructions regarding the use of the device through the intermediation of a person responsible for their safety
- Avoid knocking over the device or violent shocks as glass and screens are present.
- The keys for lock opening of device's access doors to internal compartments must be kept by the appliance's operator only.

ATTENTION!

Any other use of the device and operation not expressly permitted in this user manual is strictly forbidden. If the safety precautions are not observed, there is danger of death.

7. OPERATING CONDITIONS

This machine must be installed indoor, away from water squirts and heat sources.
In any case the place where the device is installed must have the following characteristics:

Relative humidity: 20% 75%
Temperature: 10°C - 35°C
Altitude: <2000m

WARNING SIGNS

230V 50Hz	**Indicates the presence of voltage (230V 50 Hz). It is therefore necessary to pay the utmost attention when working near parts having this type of sign, as the operator's contact with this voltage can cause serious injuries or death.**
	**Indicates the presence of dangerous or lethal voltages. It is therefore necessary to pay the utmost attention when working near parts having this type of sign.**
	**Indicates an earthing terminal. For this protection to work, the machine must be connected to an earthed electrical system. This sign also indicates which parts should be earthed in case the earthing system has been disconnected for assistance.**

8. WARNINGS FOR USE

A This electronic device is intended to be used exclusively as a machine that provides a service (automatic cash handling machine); any other use will be considered illegitimate

B Any modification to the device that is not madeby the manufacturer, in addition to making the brand invalid and creating hazardous situations, implies the manufacturer's declination of responsibility and is also considered as an action in conflict with the existing law.

C Before cleaning, unplug the device from the power socket (pull on the plug and not on the cable).

D Do not commit any action that could cause the device to fall. The device must be installed on a fixed, horizontal base and must not be put in conditions that can cause it to fall.

E In case of fall, immediately unplug the device from the power socket (pulling on the plug and not on the cable); but first make sure that the cable and the plug have not been damaged. In such case cut out the electricity from the main power supply system to which the device is connected. If any faults are detected, immediately unplug the device from the power socket (pulling on the plug and not on the cable) and ask for repair by qualified personnel only.

F When cleaning the electronic device turn it off and unplug it from the power socket by pulling on the plug. Do not use gasoline or flammable solvents as detergents; always use authorized commercial, non-flammable and non-toxic detergents only. Do not directly spray liquids (water, solvents etc.) that could dampen live parts.

G For a correct cleaning, dampen a cloth with the previously listed products and at the end wipe off with a dry cloth in order to eliminate humidity that could damage the device.

Be careful never to leave any wet parts after cleaning. In case of doubt do not plug the device to the power socket for at least 24 hours. If the device has been exposed to an excessive amount of liquid, do not plug it to the power socket and contact your dealer.

H Never use liquids near the power socket where the device is plugged.

I Never use liquids near the power point of the power supply system of the premises where the device is installed.

L Make sure that the electrical safety labels (see "Safety Precautions") and device's data label on the rear of the device are not removed.

9. WARNINGS FOR MAINTENANCE

NOMENCLATURE:

PRODUCER
Can perform any necessary maintenance in order to restore the functioning of the device. Registration of the maintenance carried out is necessary.

AUTHORIZED SUBJECT
Can perform all maintenance operations that do not concern the device. Can restore and/or replace peripheral devices and/or repair any faults on the peripheral devices. Each operation listed above must be accompanied by the registration of the corresponding maintenance

OPERATOR
Ordinary technical assistance operations can be carried out by the operator of the device in the parts allowed to him. If the coin/banknote acceptor and dispenser, or any compatible element needs technical assistance, the operator of the device must contact the producer of the device who will perform maintenance on the peripheral device in the parts allowed to him.

THE OPERATOR MUST NOT PERFORM ANY OPERATION ON THE PARTS OF THE DEVICE TO WHICH HE HAS NO AUTHORIZED ACCESS

All extraordinary maintenance operations (repair, replacement of parts, etc.) can be performed exclusively by qualified personnel.

Before operating inside the device, in order to avoid shocks caused by contact with live parts, make sure that the electronic device's main power switch is in the OFF (0) position.

If it is necessary to operate with the electronic device switched on (ON = 1) in order to carry out calibration, voltage control or other operations, the following prescriptions must absolutely be respected:

- Pay attention to warning signs placed on the inside and outside;
- Wear insulating gloves, wear rubber-soled shoes;
- When operating close to electrical components, be very careful not to touch anything other than the adjustment points (using a screwdriver or pliers with insulated handles) or measuring points (using leads with insulated handles) of the electronic device

10. DISPOSAL PRECAUTIONS

MANDATORY INFORMATION FOR USERS

- According to the WEEE Directive, the appliance must be disposed of separately from the municipal waste. Therefore, separate WEEE collection systems must be used, or the device can be returned to the distributor when purchasing a new one.

- Illegal or improper disposal of the device, or of parts of the device, may have potentially harmful effects on the environment and on human health
.
- The symbol below is placed on the device toindicate that disposal must follow the WEEE separate collection system, and that sanctions will be applied in case of illegal disposal.

INFORMATION FOR USERS

Pursuant to Directive 2002/95/CE, 2002/96/CE and 2003/108/CE, “on the restriction of the use of certain hazardous substances in electrical and electronic equipment and on waste electrical and electronic equipment”:

The crossed-out wheelie bin symbol on the equipment or on its packaging indicates that this product at the end of its working life must be collected separately from other waste.
An adequate separate collection of the discarded appliance and the subsequent start of the recycling, treatment and environmentally compatible disposal processes help to avoid possible negative effects on the environment and on health and promotes the reuse and/or recycling of the materials of which the equipment is composed. The abusive disposal of the product by the holder involves the application of administrative sanctions provided for by current legislation.

This symbol applied on the device indicates that:

- This electrical or electronic equipment must not be disposed of as solid municipal waste;
- A separate collection must be made;
- It can be returned to distributor when purchasing a new appliance;
- Improper disposal of the device may cause environmental pollution and have harmful effects on human health;
- Non-compliance with the above mentioned indications is sanctioned in accordance with the current regulations

In particular:

- The outer casing and mechanical components are made of plastic and/or metallic materials;
- Inside the casing there are printed circuit boards with electronic components;
- There may be Ni-Cd or Lithium batteries on the cards;
- The electrical connections are made with insulated copper conductors;

11. FEATURES OF AUTOMATED CASH HANDLING MACHINE

TRADE NAME OF THE MODEL
CASHMATIC SELFPAY 460


MANUFACTURER IDENTIFICATION
Producer
CASHMATIC S.R.L.

Via Fondo Ausa, 28 – 47891
Dogana (Rep. San Marino)
Tel. (+39) 0541 17.96.791 Fax.
(+39) 0541 17.94.301
C.O.E. SM27525


GENERAL FEATURES
Size and weight


Height 48,4 cm
Width 33,4 cm
Depth 42,1 cm
Weight 30,8 kg

Front view (with mechanical locks)

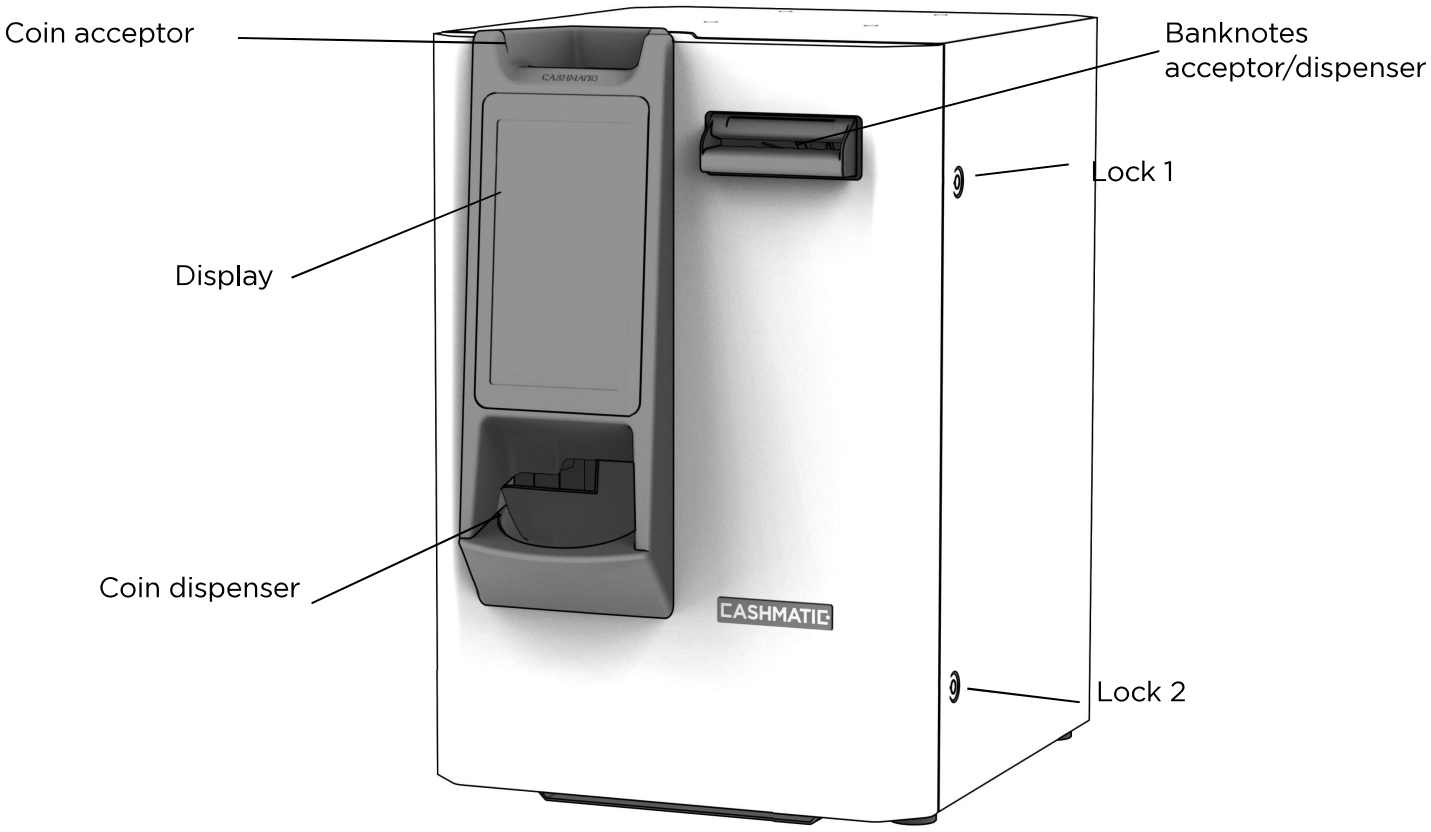


Front view (with electronic lock)

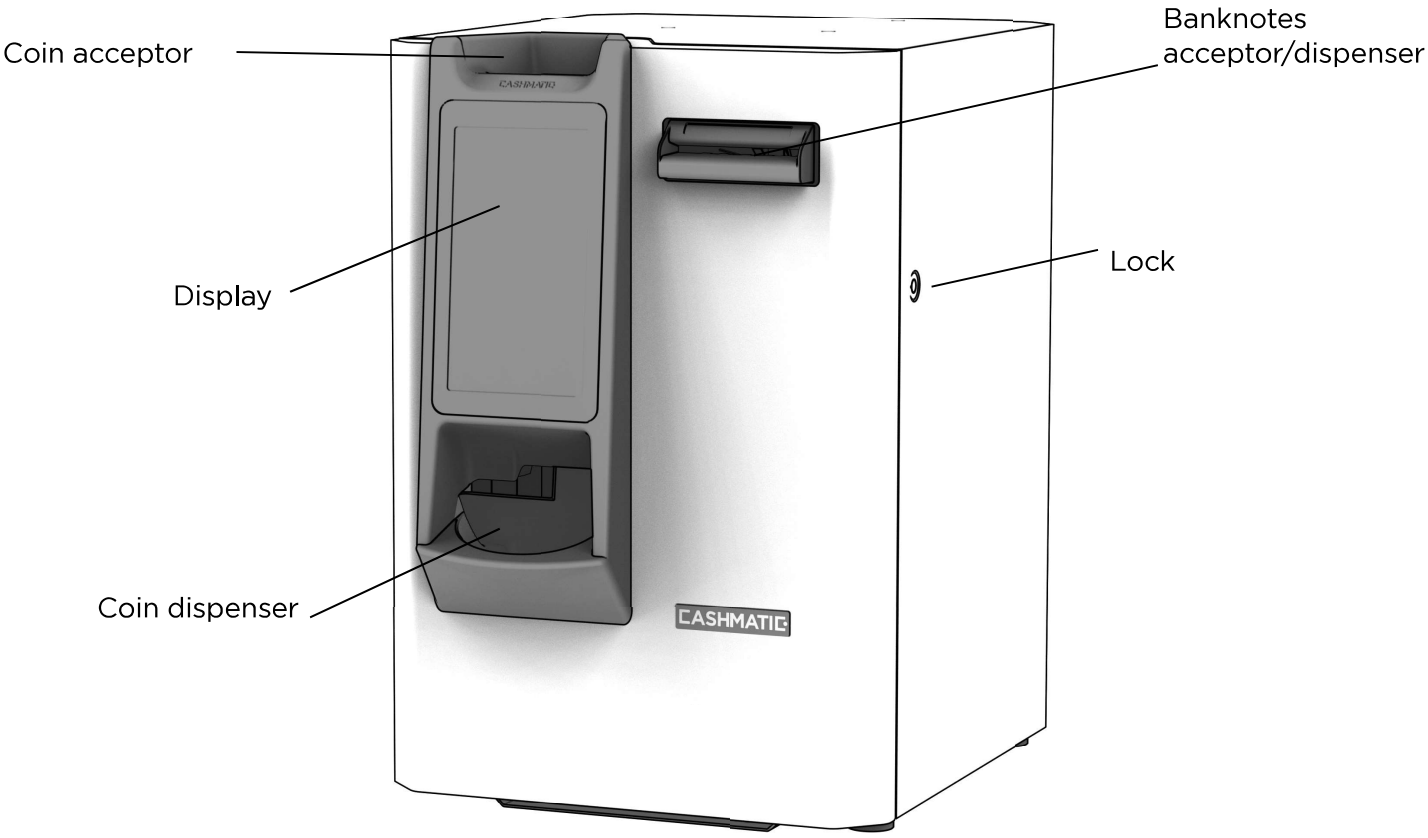


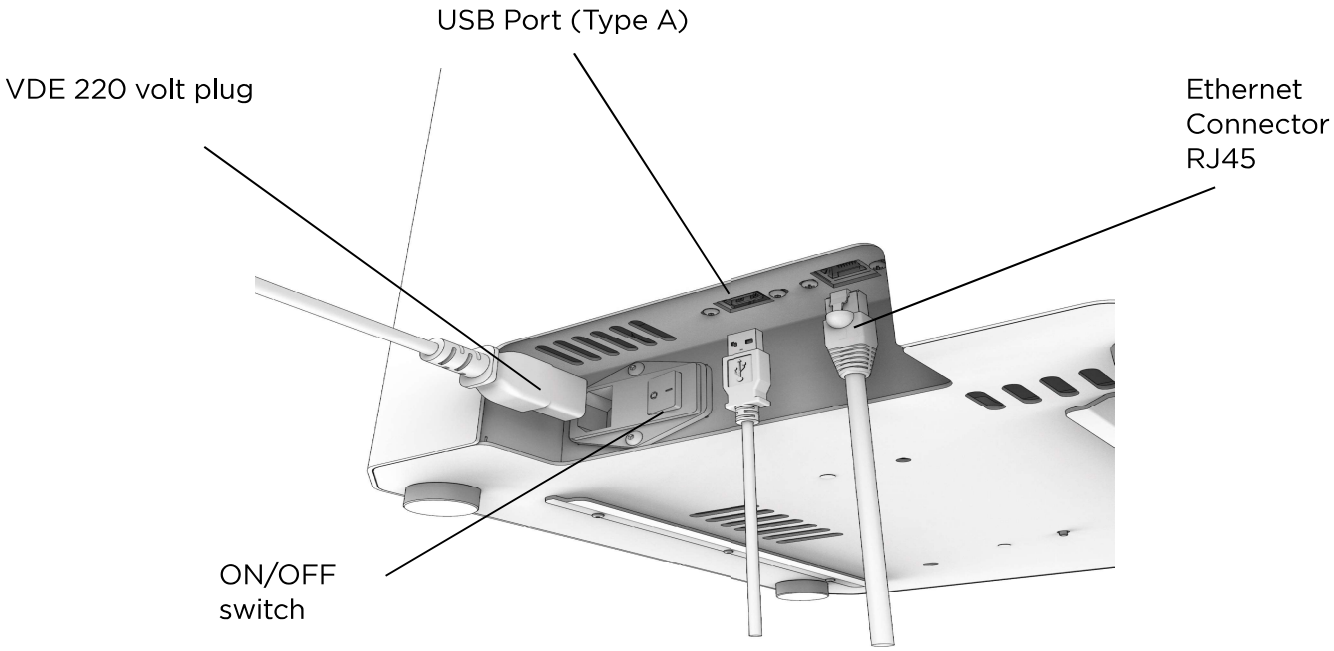

Rear view

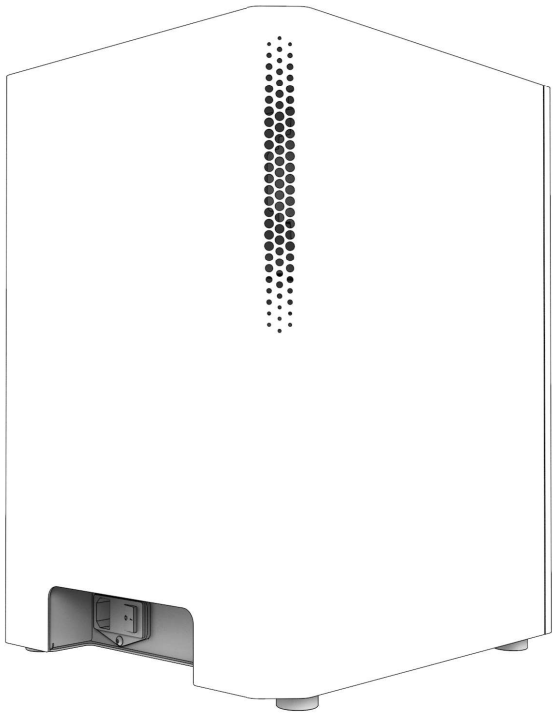

Inside view

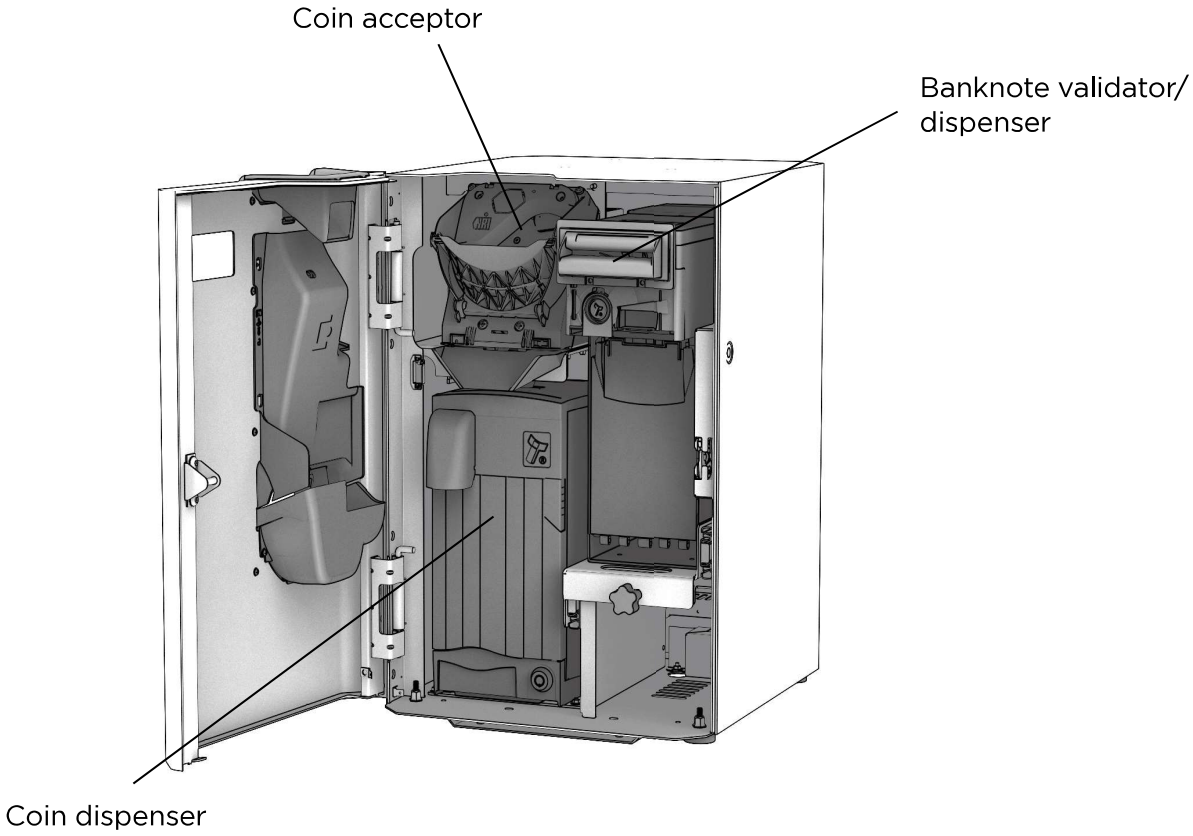

12. SUPPORTED OPERATING SYSTEMS


Cashmatic Selfpay 460 is able to communicate through Ethernet with the cash point management software for data exchange.

ATTENTION!
You need to verify that the cash point management software is compatible with the automatic drawer. (Contact your management software vendor for information on how to activate it.)

Most management programs on the market can integrate management of the automatic drawer through at least one of the types of connections listed above.

The automatic drawer can be operated via its own touchscreen display or from Smartphone, Tablet and PC by accessing the integrated web server without the need for tertiary software.

13. DEVICE INSTALLATION

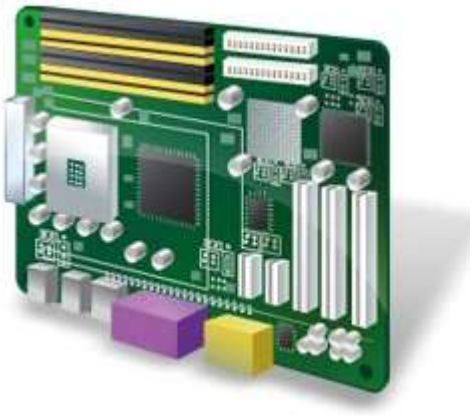


HARDWARE REQUIREMENTS

CPU: Pentium 1.0 GHz or higher RAM: 512 MB or more
Disk Space: at least 850 MB (SO x86) | at least 2 GB (SO x64) UPS Earthed electrical system



SOFTWARE REQUIREMENTS:

Windows Installer 3.1 or later versions
Internet Explorer 5.01 Browser or later versions
NET Framework 4.0

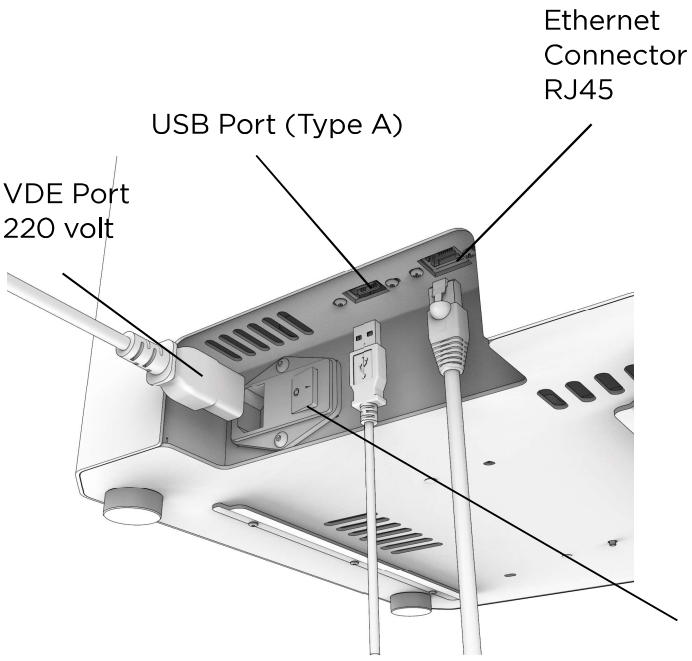

- Plug in the power cable into the VDE jack of the smart cash drawer and then plug it into the stabilized UPS (not included in the package).
- Connect the network cable to your Cashmatic device and to your router with DHCP server.
- Turn on the device by moving the switch to ON (I) position.


14. DEVICE OPENING

For devices manufactured before May 2024, the door is opened using the two blue keys supplied with the device.

Devices manufactured after May 2024, are equipped with an electronic lock.

Users must use the dedicated software accessible through the touchscreen display or web panel to open the door.
This software requires authentication via username and password to ensure that only authorized personnel can make changes or maintenance.

The lock is also operable by key, which can be inserted on the side of the device.

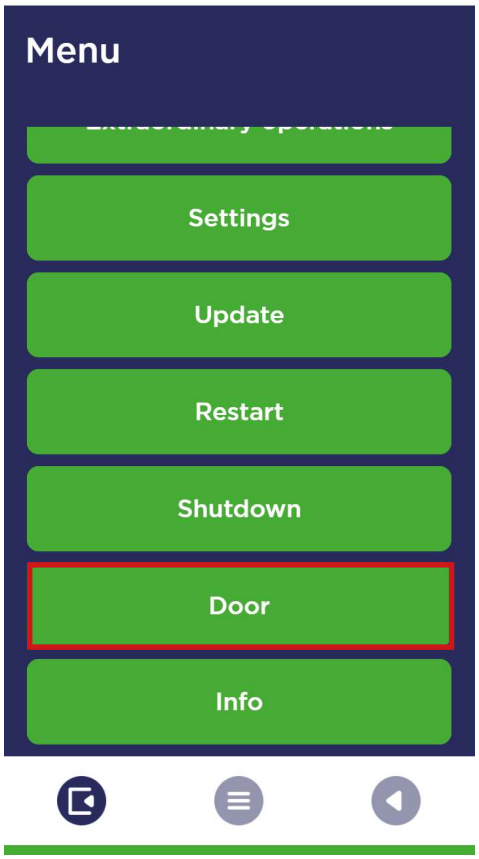


DOOR OPENING VIA TOUCHSCREEN DISPLAY

To open the device door via the touchscreen display, follow these steps:


Log in to the menu via the touchscreen display by holding down on the word “CASHMATIC.”

Enter login credentials and navigate to the “Door” section within the main menu.

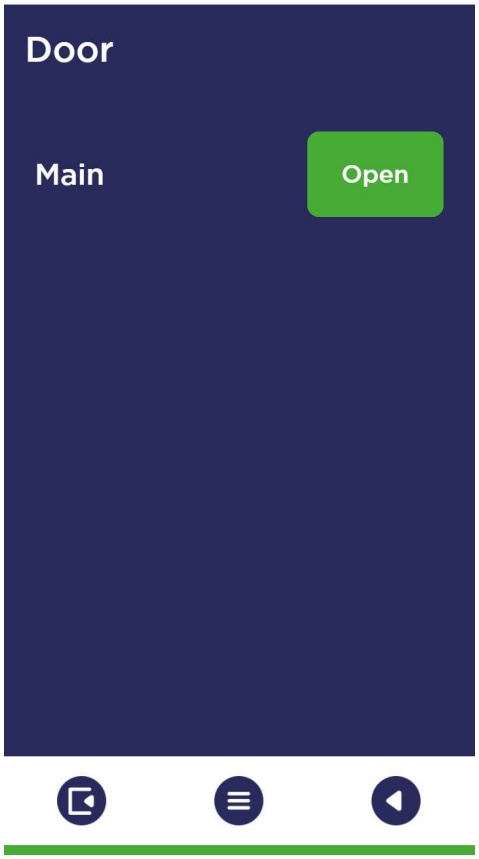

Once in the “Door” section, click “Open.”

Pressing the “Open” button will unlock the electronic lock, opening the door.

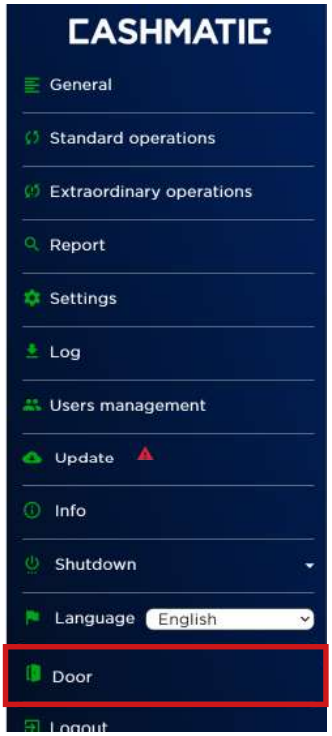


DOOR OPENING VIA WEB PANEL

To open the device door via the touchscreen display, follow these steps:

Log in to the web panel via the browser by typing the IP address of the drawer in the search bar.

Enter the login credentials and navigate to the “Door” section within the side menu.

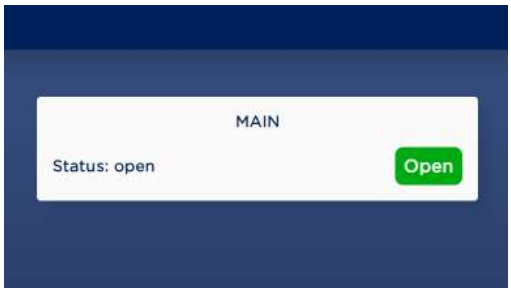

Once in the “Door” section, click “Open.”


Pressing the “Open” button will unlock the electronic lock, opening the door.

15. ASSISTANCE

In order to assist in the best way the Cashmatic cash handling device it is important to understand how it works and to know the names of the components that make up the smart cash drawer.

The following image shows the 3 most important components:

- **Banknote module (Spectral payout)**
- **Coin validation module (Pelicano)**
- **Coin dispenser module (SmartHopper)**

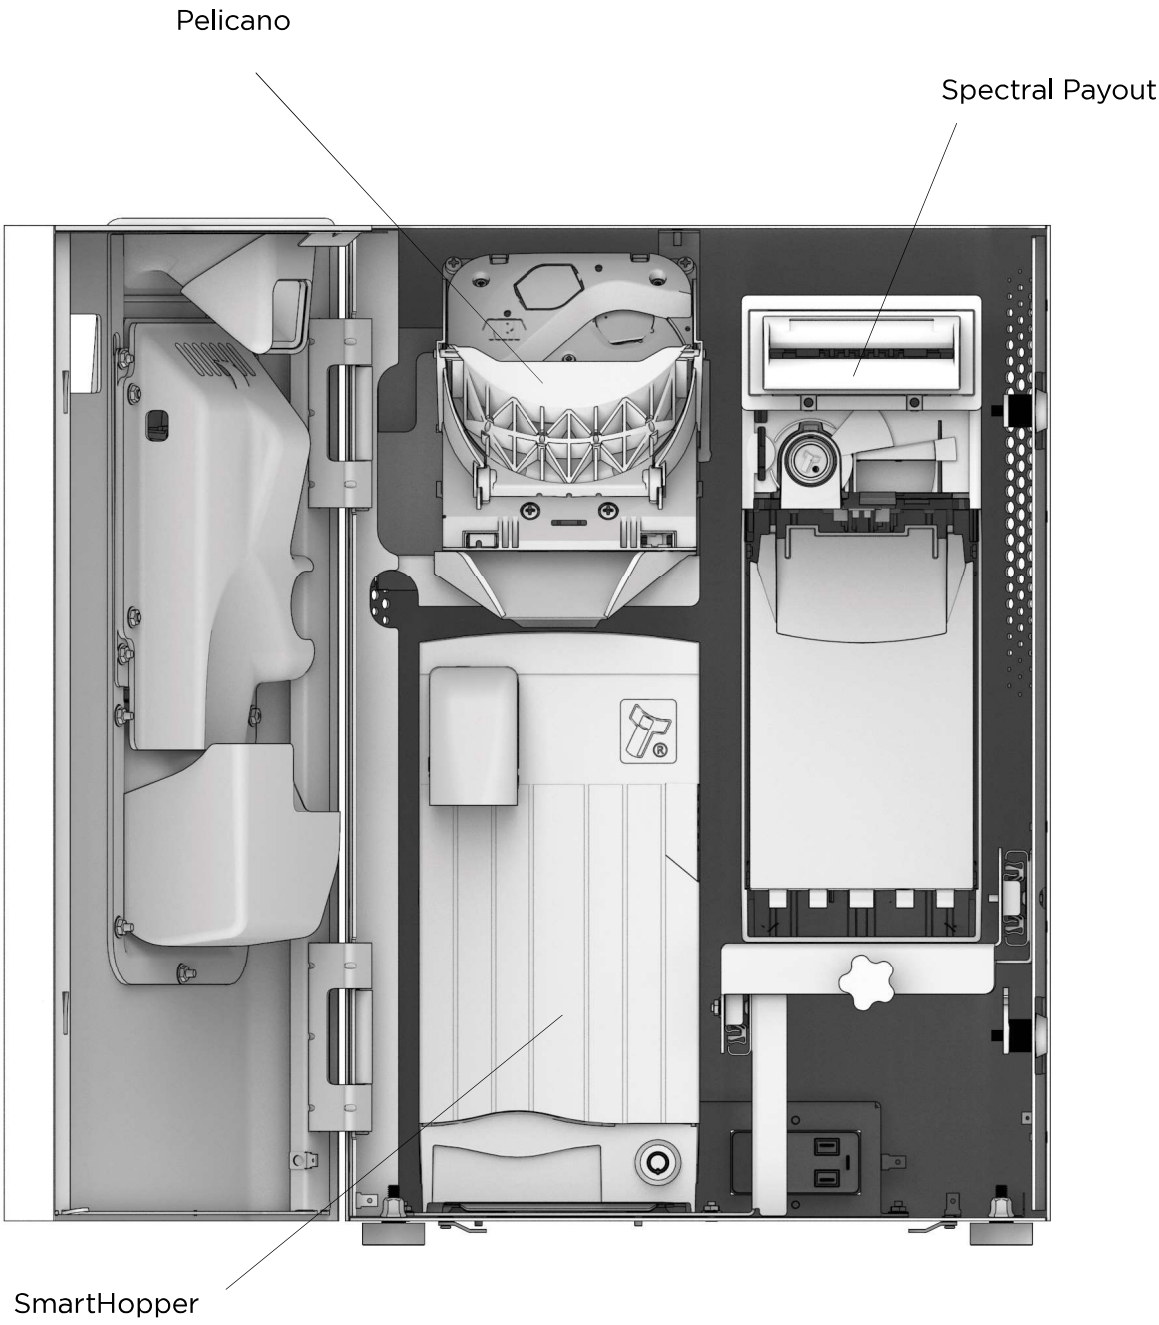

16. BANKNOTE MODULE

VALIDATION MODULE (NVS200)

Includes the front plate for banknotes accepting and dispensing.



RECYCLER (PAYOUT V3)

In this module are stored the banknotes that will be later used for change return.



STACKER AND CHASSIS

Module for the excess banknotes storage



FAULT DETECTION

The banknote dispenser is able to perform selfdiagnostic in order to identify malfunctions. If there is a configuration error or another kind of error, the LED lights of the Payout unit will flash in sequence. (The LED lights are located on the front part as shown in the following picture).




Nr. of blinks		Description	Action
Red	Blue		
0	0	No error	
1	1	Banknotes path open	Close the banknotes path
	2	Banknote jammed inside the path	Remove the banknote and clean the component
	3	Peripheral device not initialized	Return the peripheral for technical assistance
2	1	Stacker removed	Reinsert the stacker
	2	Stacker jammed	Remove the obstruction inside the stacker
3	1	Firmware checksum error	Download new firmware
	2	Interface checksum error	
	3	EEPROM checksum error	Downlaod new firmware
	4	dataset checksum error	
4	1	Powering voltage too low	Check the power supply voltage
	2	Powering voltage too high	
	3	Programming card format error	Reprogram the formatting card
	4	Payout unit reset	Turn the payout unit off and on again
5	1	Non complying firmware	Reprogram the device
	2	Banknote jammed in the recycler	Remove the obstruction inside the recycler
	4	Trying to self-solve jammed banknote inside the recycler	Wait for the procedure to finish

MAINTENANCE AND OBSTRUCTION REMOVAL

In order to remove a jammed banknote and to clean the banknote path it is necessary to disconnect the NV200 module from the rest of the Payout unit.

Note: It is not possible to open the banknote path cover while the NV200 module is still connected to the recycler.

In order to remove the NV200 module, lift the release latch (silver colour) on the SPO's rear part and slide the unit forward while lifting it from the frame.

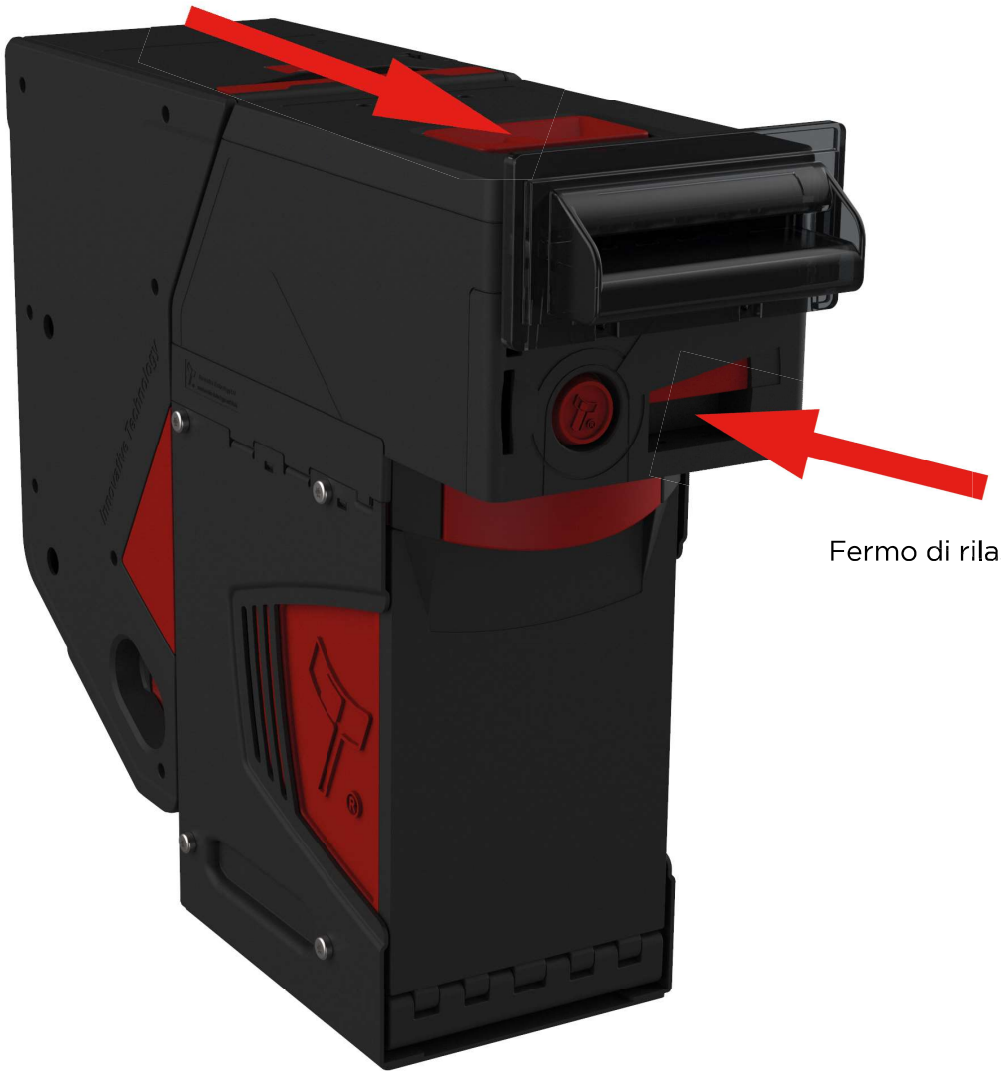

Fermo di rilascio

After having removed the NV200 module, open the banknote path cover by pulling forward the cover's release latch. Lift the cover as indicated in the following picture.

Note: It is recommended to remove the front plate as well in order to allow a correct cleaning of the banknote path.



The banknote path is now visible. Remove the jammed banknote if there is any and clean the banknote path.

ATTENTION
Do not use detergents that have as base solvents such as alcohol, gasoline, white spirit. The use of such solvents may cause permanent damages to the unit. Use only mild detergents as indicated below.

Clean carefully the surfaces with a soft cloth dampened with a solution of water and neutral detergent: pay attention when cleaning around lenses and sensors and make sure they are clean and dry before closing the cover and restarting the unit.

Pay special attention to the condition of the 10 [plastic] + 10 [rubber] wheels. Check that the wheels have no layers of dirt accumulated on them. The layers of dirt are the main cause of the banknote jamming because it prevents friction between the banknote and the dragging mechanism.

17. COIN VALIDATOR



When transported, coins may leave residues on sensitive parts of module's validation unit. These residues must be removed each time in order to allow an optimal functioning of the component.
It is necessary to keep the internal and external surfaces of the unit clean. For this operation it is recommended to use a compressed air spray, LCD solvent, antistatic cloth, a set of cotton swabs and gloves. Do not use aggressive chemical gasoline-based or trichloroethylene-based solvents, detergents or abrasive sponges that could damage the device. Do not immerse or expose the device directly to water or to liquids of any kind.

Periodically check the condition of the unit's surfaces paying particular attention to areas which, under normal conditions of use, may present a danger to the user.
The optimal frequency of cleaning would be every 50 thousand coins or every 3 months in a normal working environment.

FAULT DETECTION

PROBLEM	POSSIBLE CAUSE	SOLUTION
Acceptor does not work	The power supply unit might not be connected	Make sure all connections are secure
Poort acceptance	The optical sensors could be dirty	Clean the sensors with compressed air
Coins jam inside the acceptor path	Dir accumulated or mechanical damage caused with intent	Check by openning the door and then proceed with ordinary maintenance
Coins not identified	Dirt is accumulated on the recognition sensor or sensor is broken	Proceed with ordinary maintenance


MAINTENANCE

How to perform maintenance on the different parts of the acceptor


The parts to be cleaned could be the following:

- Payment disc
- Module's tray
- Validating sensor
- Output sensor

The cleaning procedure is described in the same order in which the components are listed above.

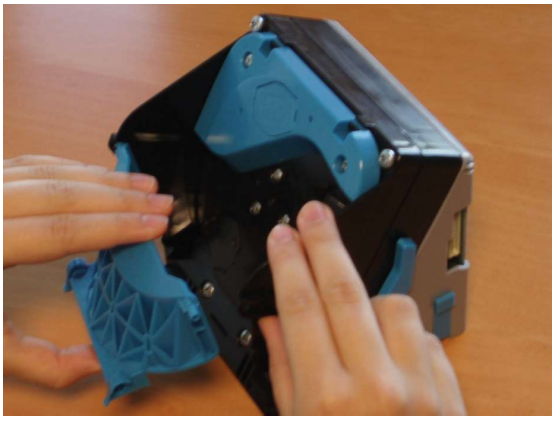

Payment disk
Remove the front flap of the component, and then gently open the support brackets.

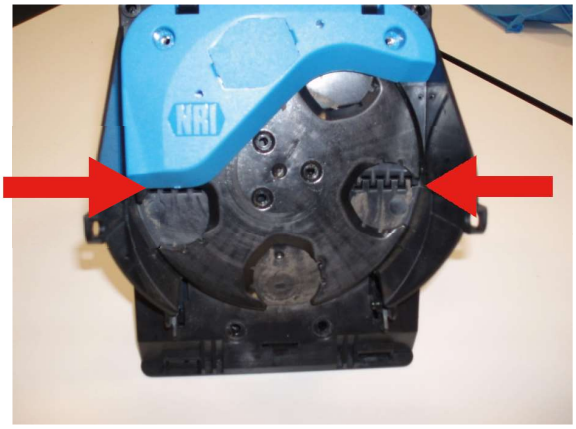


Remove the screws on the sensor bracket and then rotate it upwards.




Remove the 3 screws of the disc and pull it out of its place.




Clean the payment disk with a cloth.

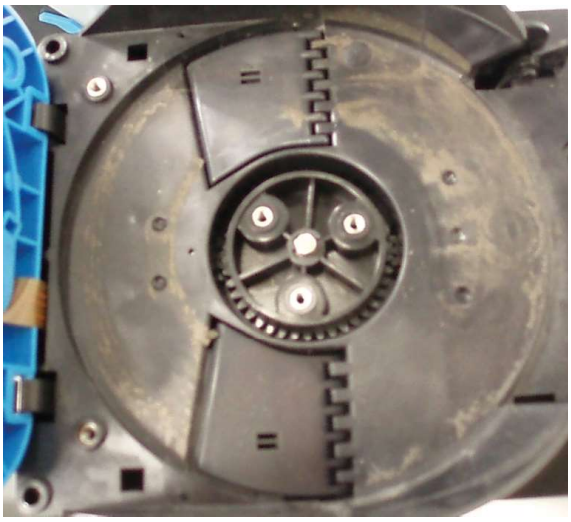

Module's tray and validating sensor cleaning
Lift the blue bracket to clean inside the tray.

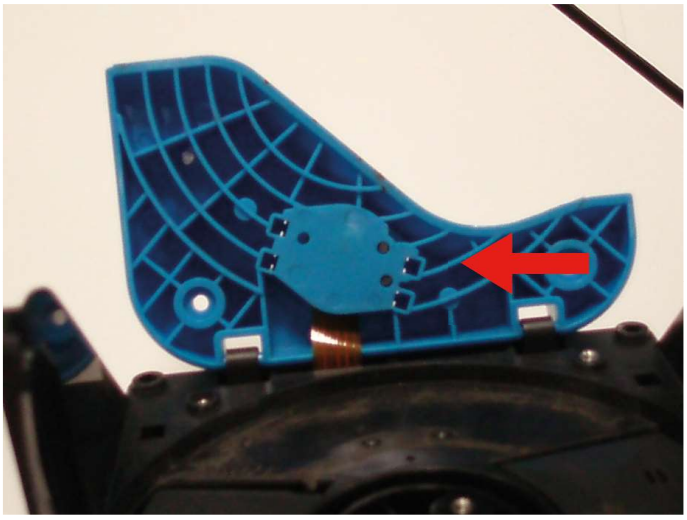


Clean the validating sensor with a cotton swab.

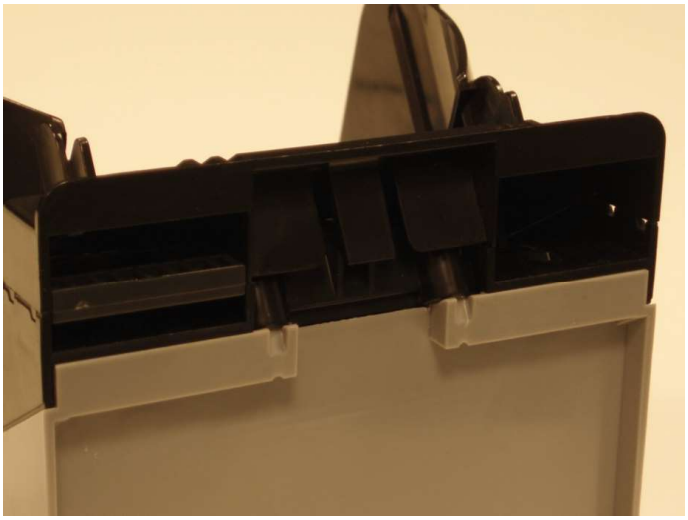

Output sensor cleaning
Blow compressed air on the optical sensor.

18. COIN DISPENSER

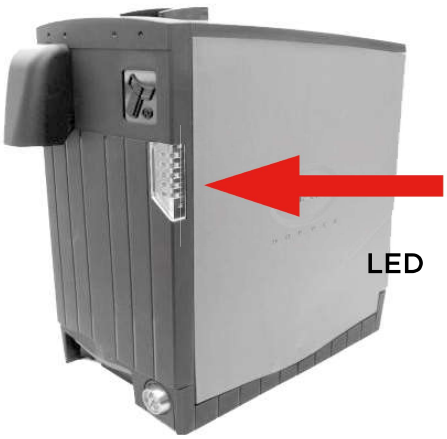

Functioning
The Hopper or coin dispenser can contain up to 1500 coins of different denominations (from the 2 cent coin to the 2 euro coin). They must be correctly set and aligned in order to allow the coin dispenser to function in the most effective way possible.

Fault detection
The coin dispenser is able to perform selfdiagnostic in order to identify malfunctions. If there is a configuration error or another kind of error, the LED lights on the Hopper will flash in sequence. The LED lights are located on the front of the Hopper in the position shown here.


FAULT DETECTION

LED	NR. OF BLINK.	DESCRIPTION	ACTION
Green	1	Peripheral device enabled and ready to dispense	
Red	1	Peripheral disabled	
Red	2	Calibration fail	Dirty optical sensor. See “Optical sensor cleaning”
Red	3	Encryption key not set	Set the encryption key
Red	4	Coin jammed	See “Jammed coin removal”
Red	5	Fraud attempt detected	The photocell on the coin dispenser has been screened. Turn the device off and on again
Red	6	Peripheral device is empty	
Red	7	Checksum error	Return the peripheral device for technical assistance
Red	8	Sensor not initialized	Return the peripheral device for technical assistance


Jammed coin removal
In case of a jammed coin inside the Hopper, followthe below procedure:

- Turn the smart cash drawer off, see “Turn off” section; unplug the machine from the power socket
- Remove the Hopper from the mounting plate


Lift the release latch

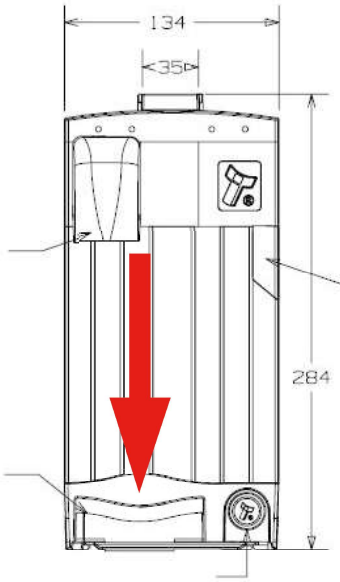

Slide the hopper forward

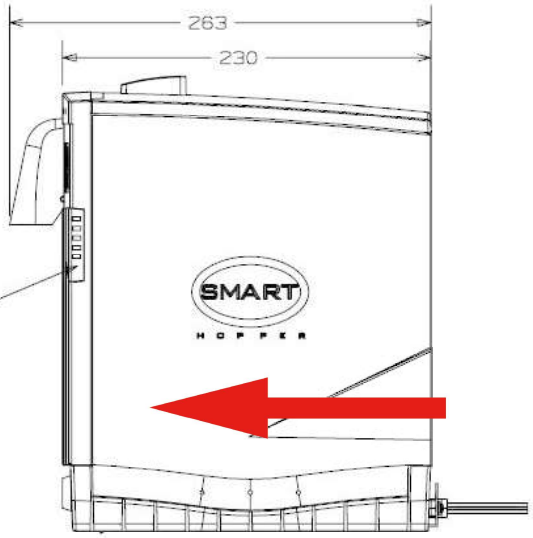


- Remove all the coins inside the Hopper

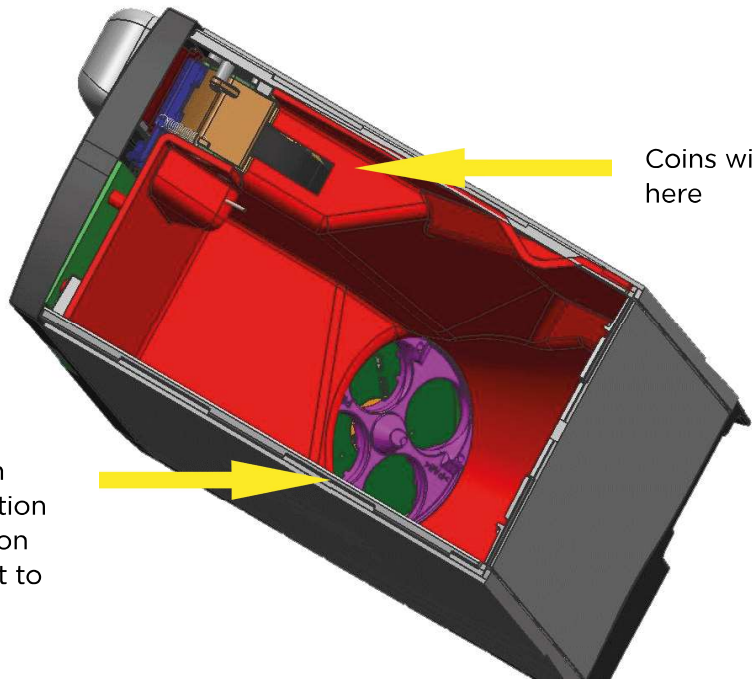


Coins will come out from here

Carefully turn the disc in counter clockwise direction to remove any coin left on the tape, taking care not to damage the device

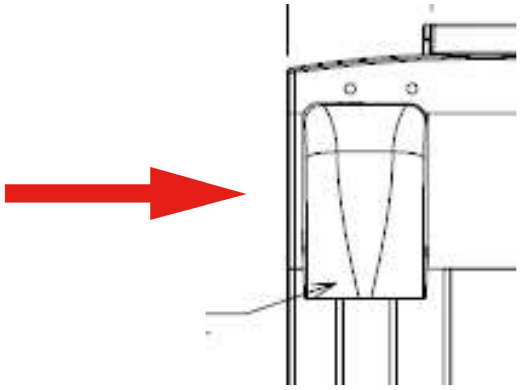

Optical sensor cleaning
Remove the coin output cover

Removing the front panel
After having removed the cover, check if sensors are clean. Remove dust with compressed air as shown in the below picture.

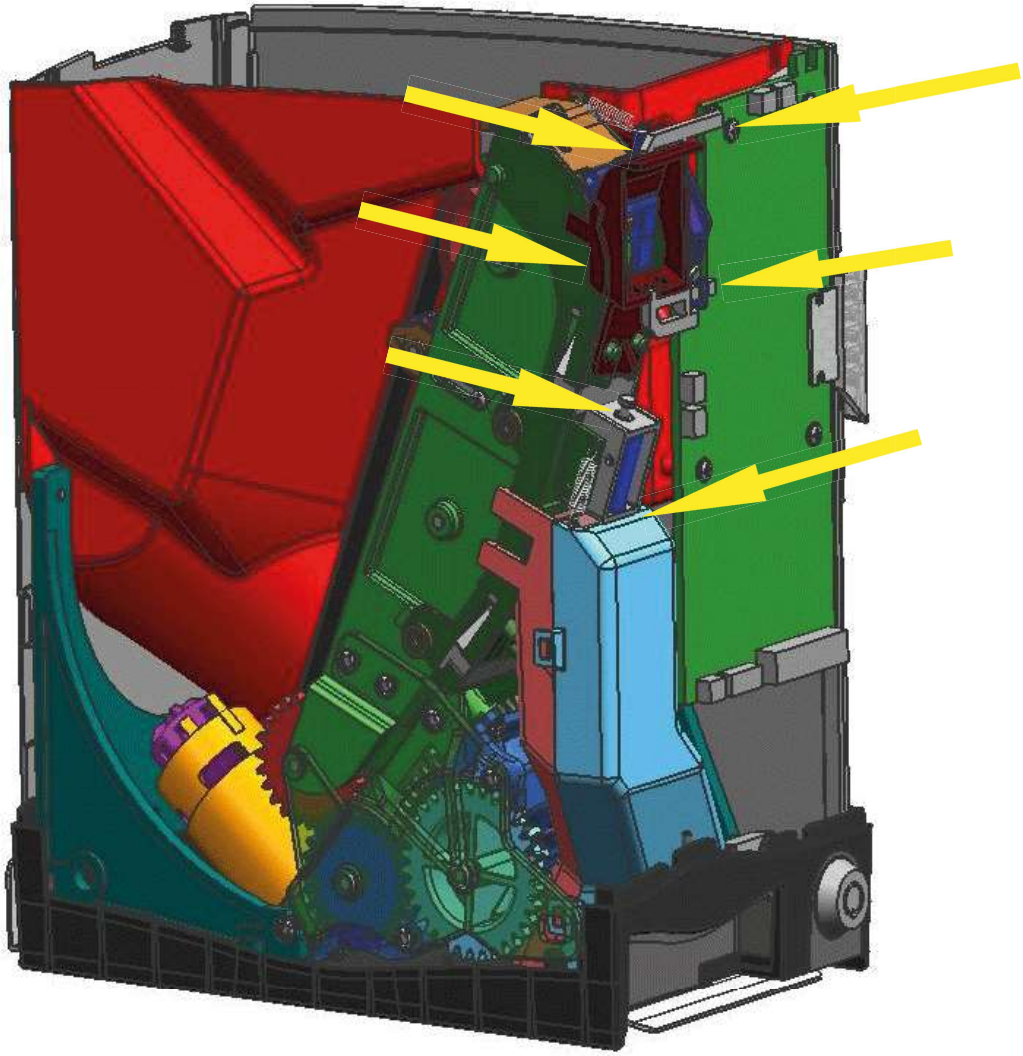

- Reassemble all previously removed parts
- Reinsert exactly the same quantity of coins previously removed
- Connect the Hopper to the mounting plate
- Perform the device dispensing tests

N.B.
Perform the ordinary maintenance every 3 months or when reaching 50 thousand cycles.
Use a mild detergent with a damp cloth.
The use of spray solvents is not recommended.


19. ELECTRONIC LOCK

ELECTRONIC LOCK TROUBLESHOOTING

In the rare case that a problem occurs when opening or closing the door, refer table below to locate and fix the component failure.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The door does not open via the software command	The power connector may not be connected	Make sure the device is powered, if necessary use the mechanical key supplied with the device, insert it on the machine side and rotate until the door is unlocked.
The door does not close	The key may still be inserted in the side lock	Remove the key from the side lock and close the door.
	Error in the locking mechanism	Unscrew the pin behind the lock and use the manual lock, as shown in the pictures (a, b).
The door will not open using the mechanical side lock	Failure in the release mechanism	Return the peripheral device for service

(a)

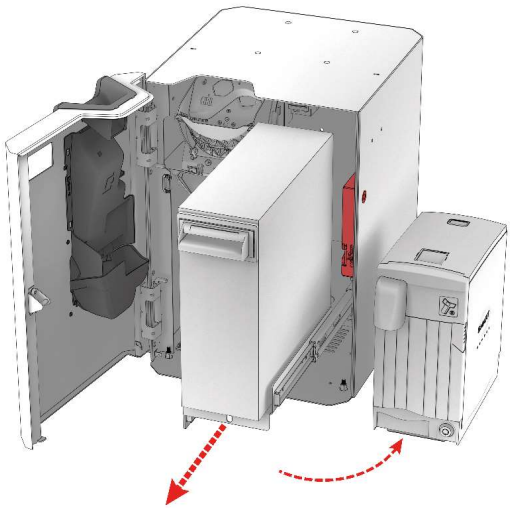

(b)



20. WARRANTY CONDITIONS

- The warranty covers all manufacturing defects to first user for a period of 12 months from the date of purchase;
- The warranty commitment is limited to the execution of repair works on the component parts of the device recognized as faulty due to manufacturing defects. Therefore it does not include transport costs;
- A manufacturing defect is a defect recognized as such at the sole discretion of the CASHMATIC S.r.l authorized Service Centre;
- Failure to present this certificate and the document proving the date of purchase, will result in charging the buyer with all repair and/or replacement costs;
- Warranty does not cover the following units:
    - Aesthetic parts and all parts that are defective due to negligence or careless use;
    - That underwent incorrect installation or maintenance procedures; That underwent maintenance performed by unauthorised personnel;
    - That were transported without the due care;
    - That have been damaged by third parties during use or as consequence of circumstances that in any case cannot be linked to manufacturing defects of the device;
    - Defects resulting from normal wear and tear, abnormal or improper use;

Are also excluded from the warranty all services related to installation, connection to power supply systems or to telecommunication network;

- The manufacturer is not responsible for the loss of the purchase certificate and cannot issue duplicates;
- The manufacturer declines all responsibility for any direct or indirect damage to persons or things that are a result of failure to comply with all the prescriptions indicated in the explanatory sheet, especially the warnings regarding installation, use and maintenance of the appliance;
- The device can be repaired in one of the laboratories authorized by the manufacturer;
- The card can be repaired in the card manufacturer's laboratories. In this case the warranty conditions are at their sole discretion;
- This warranty is limited to those defects or malfunctions that occur within one year from the delivery of the device and provided that the device is still in production at the time the warranty claim is made;
- In any case, the warranty intervention request must be made within 3 days from the moment when the defect arises, through appropriate communication which proves the nature of the defect, otherwise it will be considered invalid.

21. TECHNICAL DATA SHEET

RECYCLED COINS
2 cent - 5 cent - 10 cent - 20 cent - 50 cent - 1 euro - 2 euro, for a maximum of 1500 units (considering the volume of the 1 euro coin)

ACCEPTED COINS
2 cent - 5 cent - 10 cent - 20 cent - 50 cent - 1 euro - 2 euro

COIN DISPENSING SPEED
Up to 12 coins per second

COIN ACCEPTING SPEED
Up to 3 coins per second

RECYCLED BANKNOTES
All denominations, for a maximum of 70 pieces

ACCEPTED BANKNOTES
5 euro - 10 euro - 20 euro - 50 euro - 100 euro - 200 euro - 500 euro

BANKNOTE CASH-BOX CAPACITY
500 pz

BANKONOTE ACCEPTING SPEED
From 2,1 seconds

BANKONOTE DISPENSING SPEED
From 3,24 seconds

DIMENSIONS
Height: 48,4 cm – Width: 33,4 cm – Depth: 42,1 cm – Weight: 30,8 Kg.

CONNECTIONS
RJ45 [ETHERNET]

DISPLAY
7 inches colour capacitive touch screen

HARDWARE REQUIREMENTS
UPS

SOFTWARE PREREQUISITES
- Browser Internet [Google Chrome - Mozilla Firefox – Safari - Internet Explorer – Opera]
- Compatible management software

POWER SUPPLY
100-240V AC 3.68A
50/60 Hz

OPERATING TEMPERATURE
10°C - 35°C

22. CONFORMITY STATEMENT

DECLARATION CE OF CONFORMITY

THE MANUFACTURER: **Cashmatic S.r.l.**

ADDRESS : **Via Fondo Ausa 28, 47891, Dogana (Rep. San Marino)**

HEREBY DECLARES that the product :

TYPE : AUTOMATIC DRAWER FOR CASH MANAGEMENT
BRAND: **CASHMATIC**
MODEL **: SELFpay 460**

- It complies with the provisions of the following EU Directives, including the latest amendments, and with relevant national transposing legislation:


  2014/30/CE
  2014/35/CE

and that

- the following harmonised standards have been applied

  CEI EN 55024:2013/A1:2015
  CEI EN 55032:2015
  CEI EN 61000-3-2:2015
  CEI EN 61000-3-3:2014/EC:2016
  CEI EN 61000-4-2:2010
  CEI EN 61000-4-3:2007/A1:2009/A2:2011/IS1:2010
  CEI EN 61000-4-4:2013
  CEI EN 61000-4-5:2007
  CEI EN 61000-4-6:2011
  CEI EN 61000-4-11:2006

Dogana, 25/11/2021

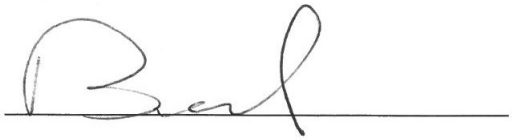

S. Berardi, Sole Director Cashmatic S.r.l.