MyCashmatic app
user manual



CASHMATIC

ENG - REV.0

APP INTERFACE USER MANUAL 1.1

Tel. +39 0541 17.96.791 | **Fax**. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | **cashmatic.it**

TABLE OF CONTENTS

1. ABOUT THE APP **3**

2. LEVELS STATUS **5**

3. STANDARD OPERATIONS **6**

REFILL 6
WITHDRAWAL 7
WITHDRAWAL BY DENOMINATION 8
CHANGE 9
CASHBOX FLOAT 10
RESET CASHBOX 13
REGISTER CLOSURE 14
PAYMENT 15
EMPTY ALL 16
DEPOSIT 19

4. SPECIAL OPERATIONS **20**

LEVEL CORRECTION <?>
PARKING 21

5. MOVEMENTS **22**

MOVEMENT CHART 22
LIST OF MOVEMENTS 23
DETAILS 24
FORMAT 25
CONFIGURE PDF 26

6. SETTINGS **27**

GENERAL <?>
ACCESSORIES 28
DENOMINATIONS 29
TIPS 30
NETWORK 31
CASH FUNDS <?>
MAXIMUM LEVELS <?>
E-MAIL SERVER 35
PRINTER 36
RESET PAYMENT TRANSACTIONS 37
PRIVACY POLICY 38

7. LOG DOWNLOAD **39**

8. DOOR **40**

9. MANAGE USERS **41**

USER MANAGEMENT 41
CREATING A NEW USER 42
MANAGING PERMISSIONS 43
MANDATORY REASONS 44
NOTIFICATIONS 45
CHANGE PASSWORD 46

10. UPDATE **47**

11. DEVICE INFO **48**


12. ACCOUNT DISCONNECTION **49**

13. LANGUAGE **50**

14. TURN OFF **51**

Tel. +39 0541 17.96.791 | **Fax.** +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | **cashmatic.it**


1. ABOUT THE APP

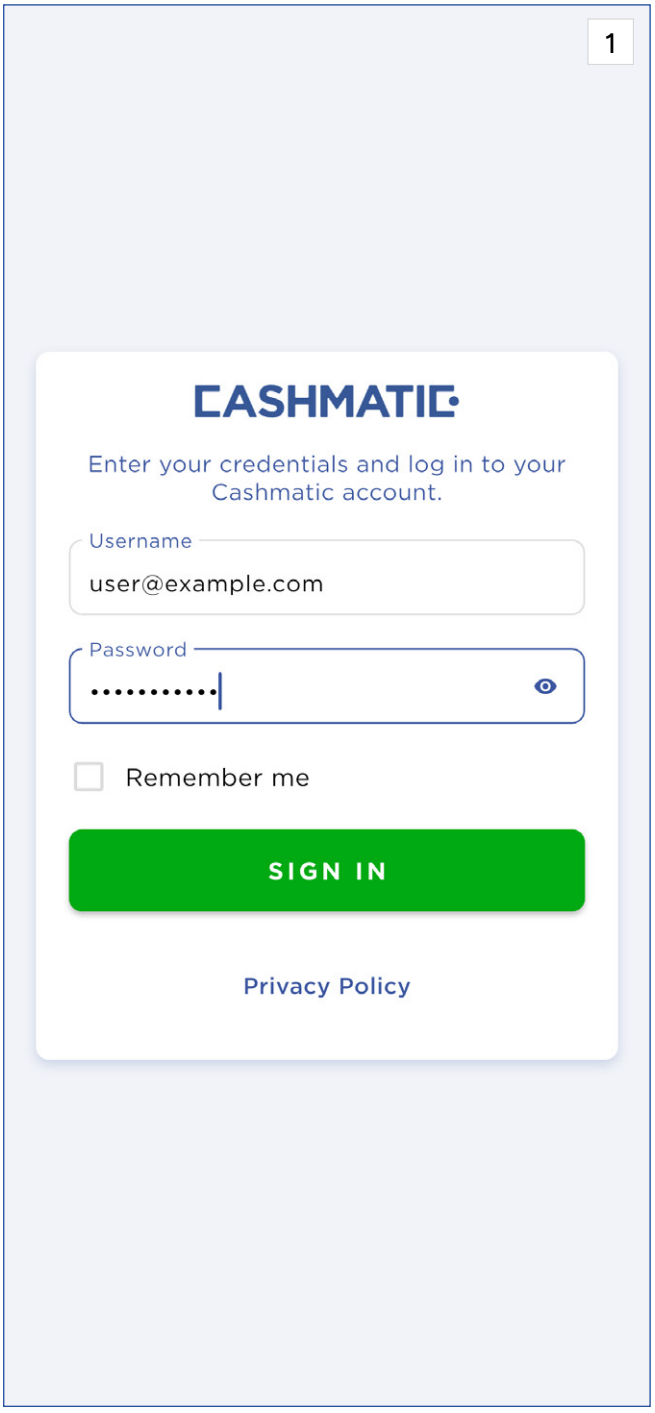

To access the app, enter your account credentials for the reserved area and press “Sign in” (Fig. 1).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

2. LEVELS STATUS

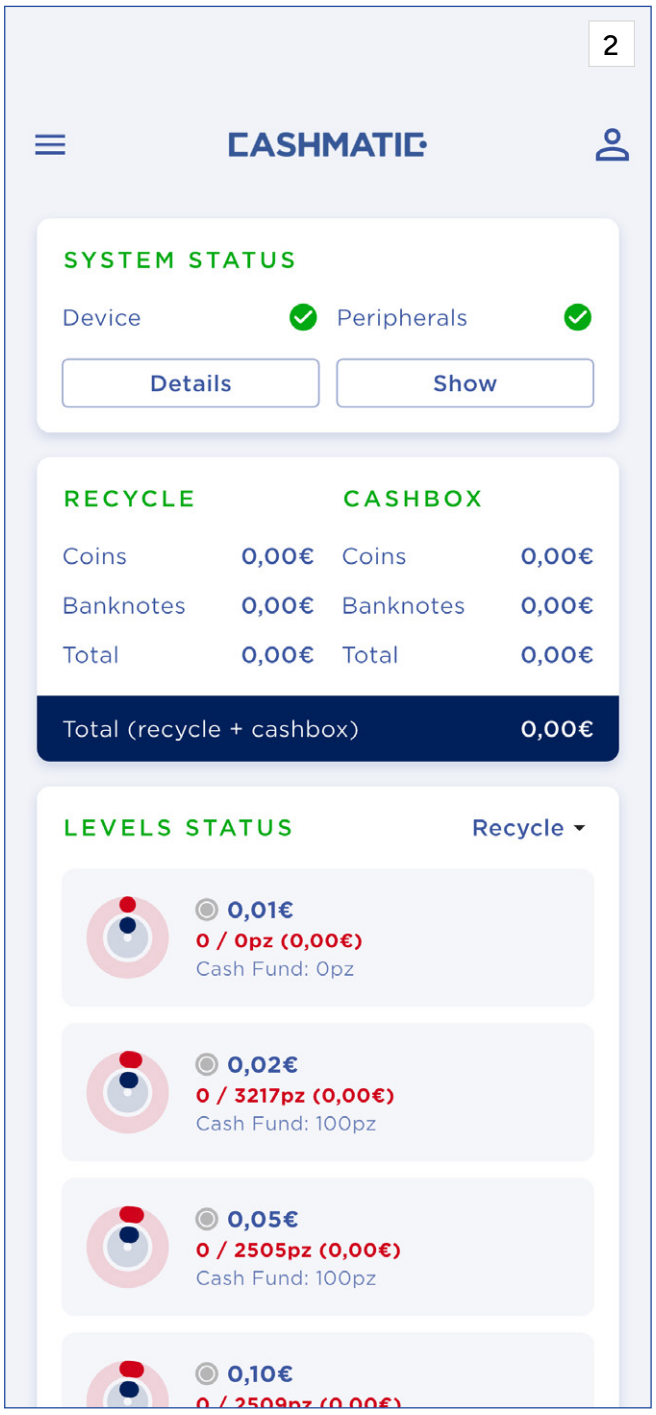


The main screen of the app lets you quickly check the levels in the Cashmatic drawer.

By tapping on “Recycle”, you can select between “Recycle”, “Cashbox” and “Missing money” to view the relevant levels (Fig. 2).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


3. STANDARD OPERATIONS

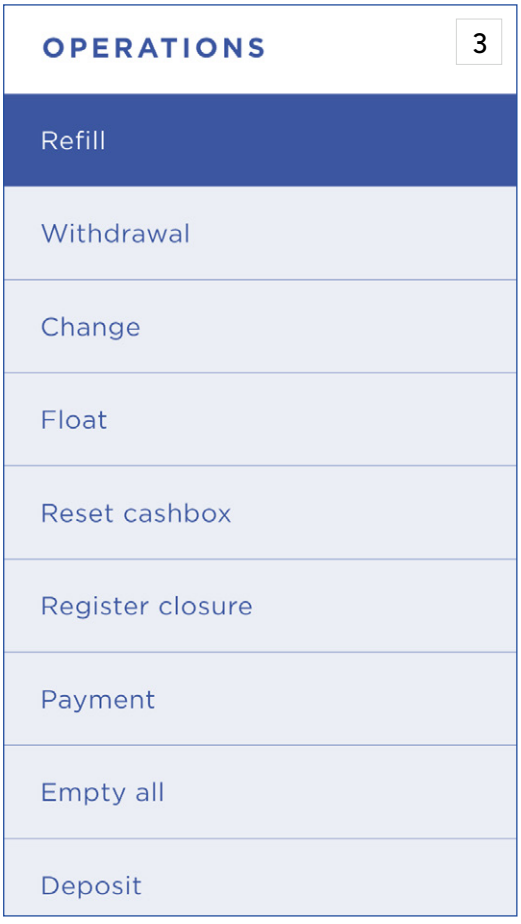

To refill, click on “Operations” in the menu, then “Refill” (Fig. 3).
To use the device, you must refill the cash funds (Fig. 4).

IMPORTANT
TO REFILL COINS, INSERT UP TO 15 AT A TIME.


0.02 € = 40 coins
0.05 € = 40 coins
0.10 € = 40 coins
0.20 € = 40 coins
0.50 € = 40 coins
1.00 € = 40 coins
2.00 € = 40 coins
5 € = 10 banknotes
10 € = 8 banknotes
20 € = 6 banknotes
50 € = 2 banknotes

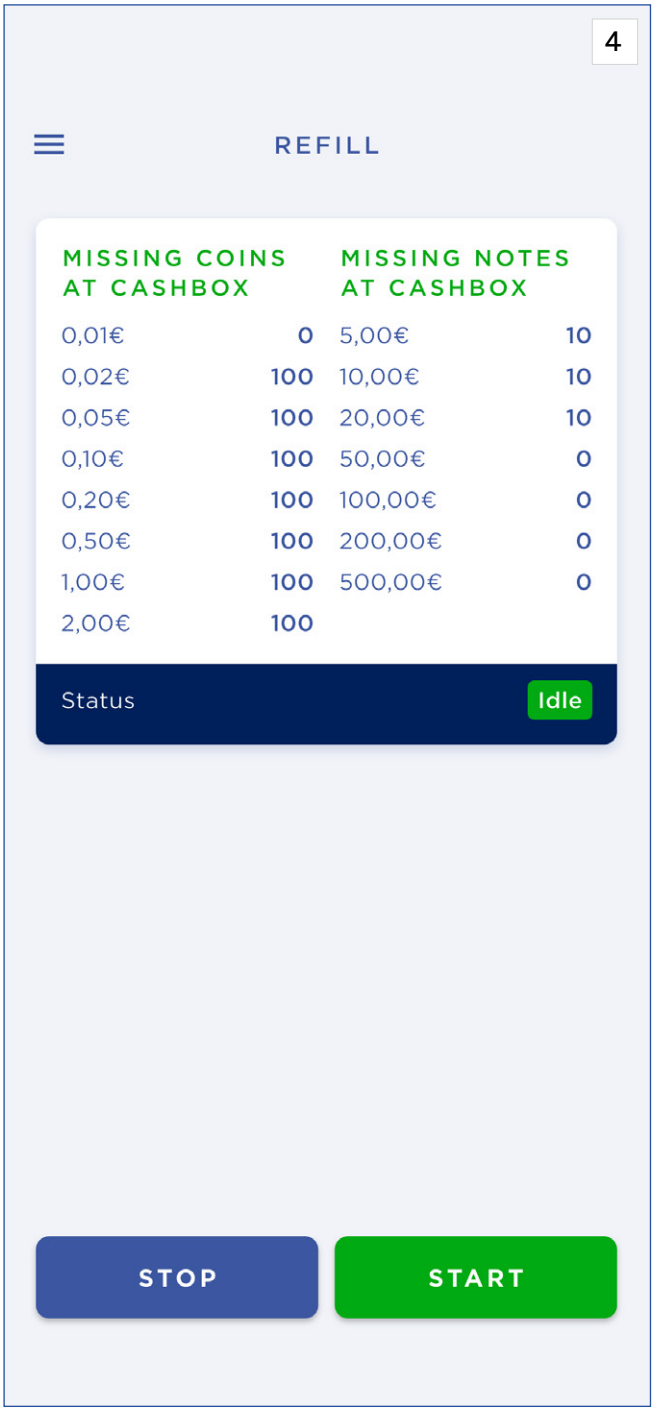


Note: The acceptance speed is automatically reduced if the maximum threshold is exceeded to prevent excessive stress on the components.

Tel. +39 0541 17.96.791 | **Fax.** +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | **cashmatic.it**

WITHDRAWAL

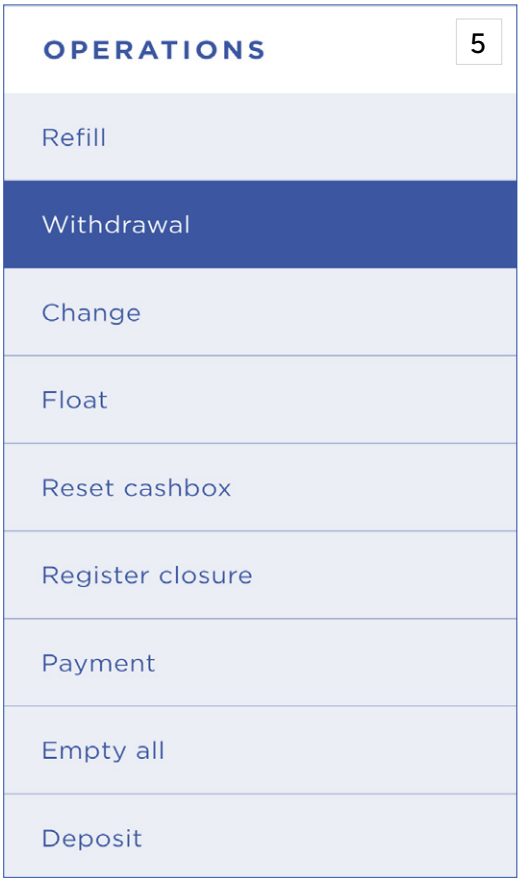


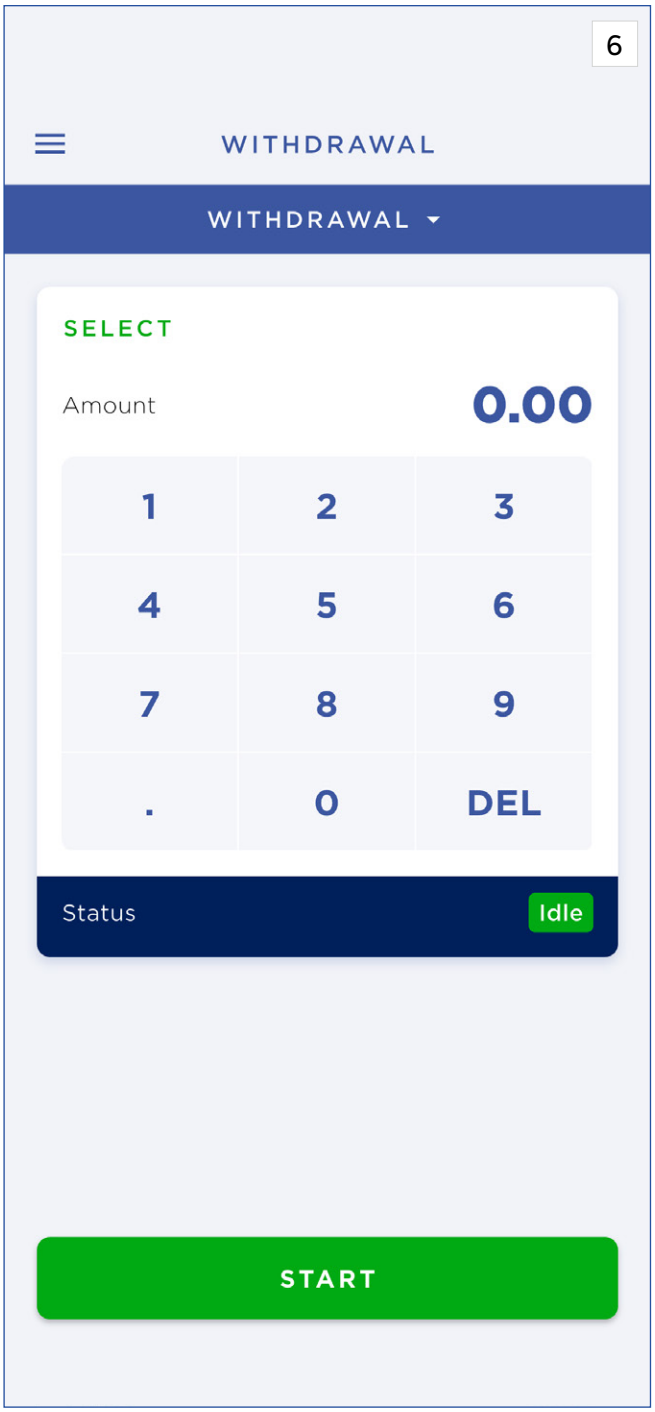

To make a withdrawal, click on "Operations" in the menu, then "Withdrawal" (Fig. 5), enter the amount to be withdrawn, then press the "Start" button
(Fig. 6).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

WITHDRAWAL BY DENOMINATION

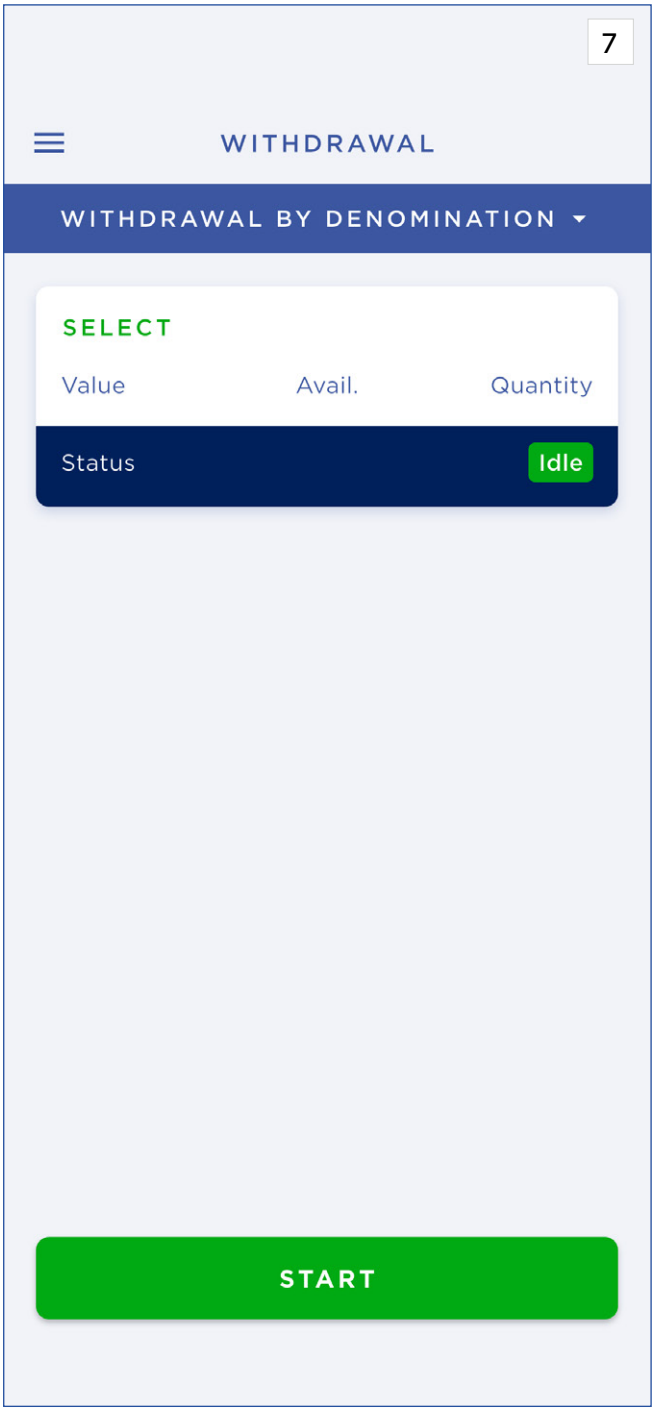



Withdrawal by denomination allows you to withdraw coins or banknotes based on the denominations you need. To make a withdrawal by denomination, click on the menu item “Operations”, “Withdrawal”, “Withdrawal by Denomination” (in the drop-down menu), then select the quantities you need and click on “Start” (Fig. 7).

*On some models, if the selected banknotes are too far away and cannot be dispensed, repeat the operation with a different denomination or a simple withdrawal.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

CHANGE

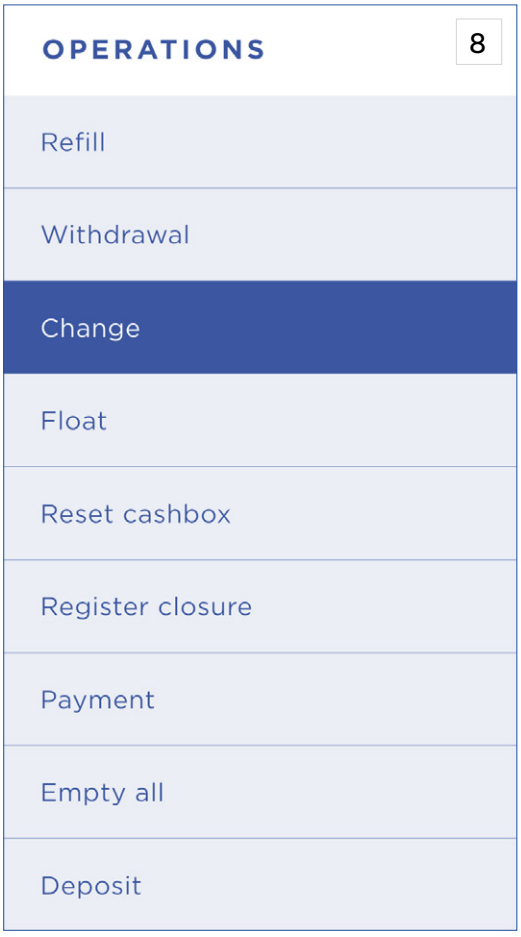

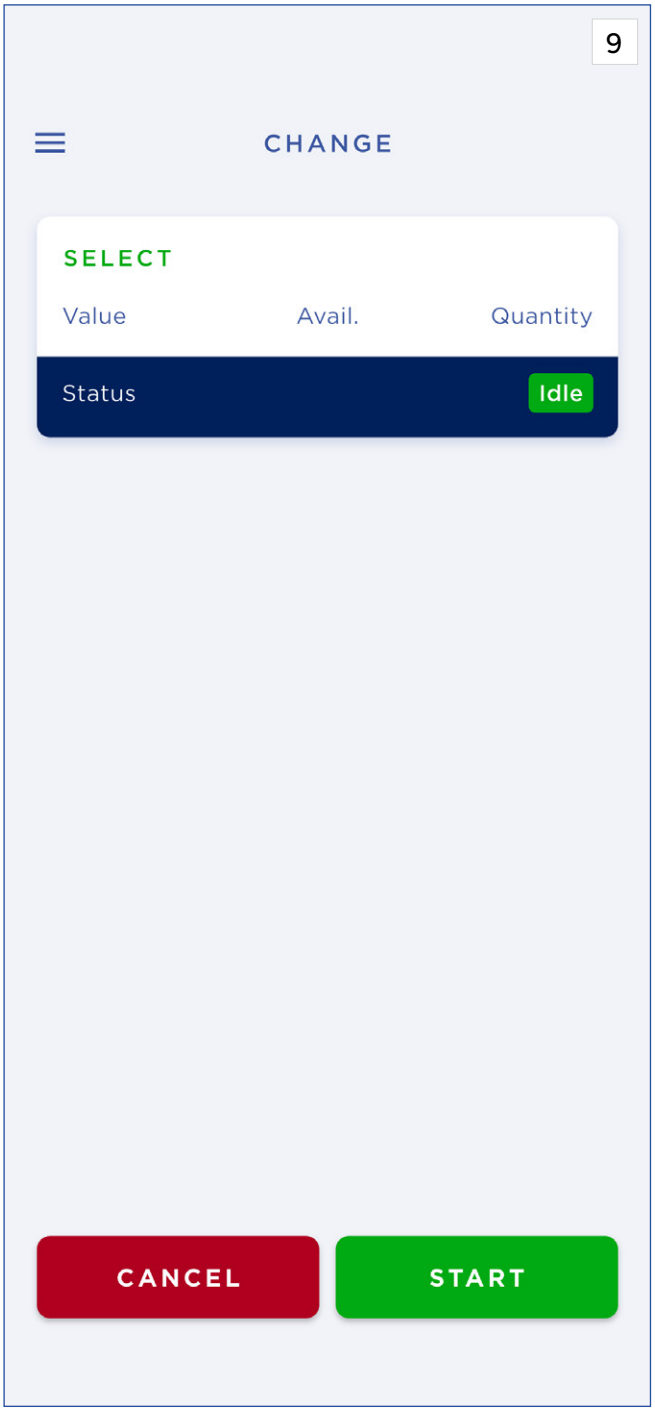



To make change, click on “Operations” in the menu, then “Change” (Fig. 8), select the quantities you wish to receive in change, then press “Start” (Fig. 9).

If the amount of money inserted is not equal to the amount requested, the drawer will return the money inserted by the user.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

CASH FUND FLOAT

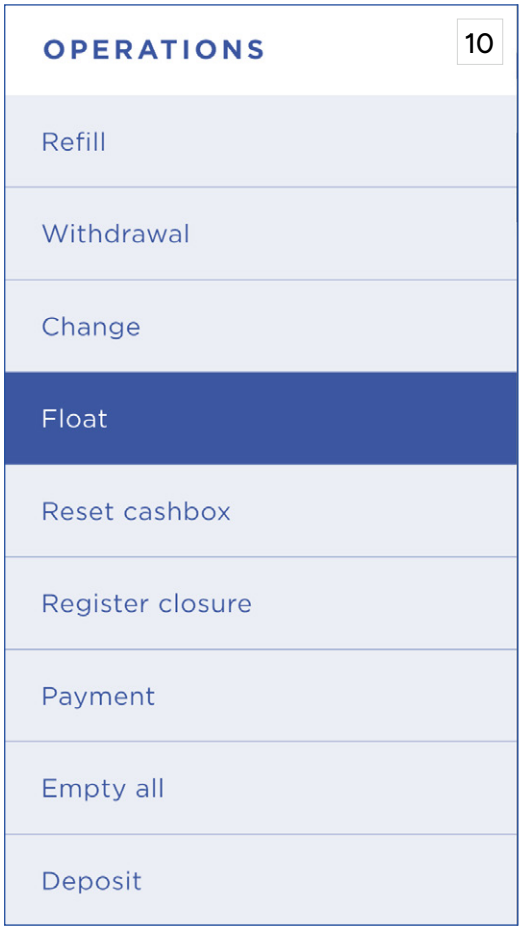


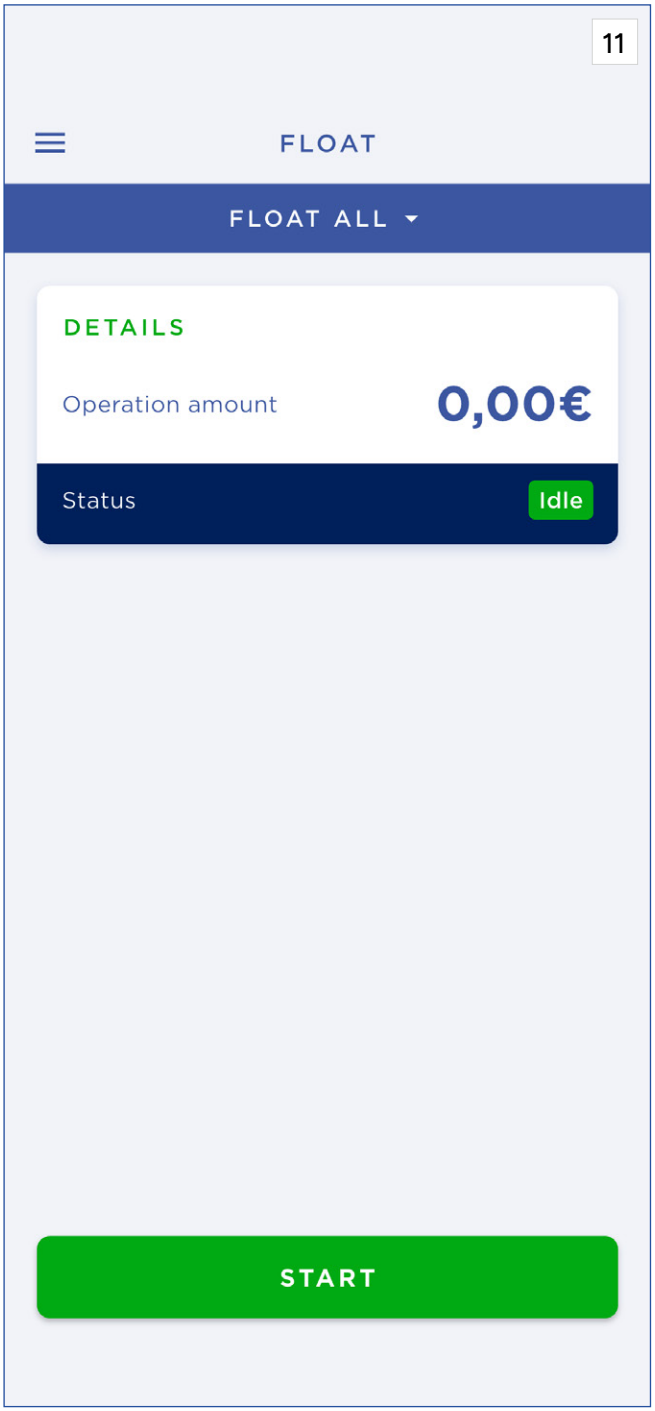

To align coins or banknotes to the set cash funds, click on the “Operations” menu item (Fig. 10);


The “Float all” function (Fig. 11) will align both coins and banknotes simultaneously.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

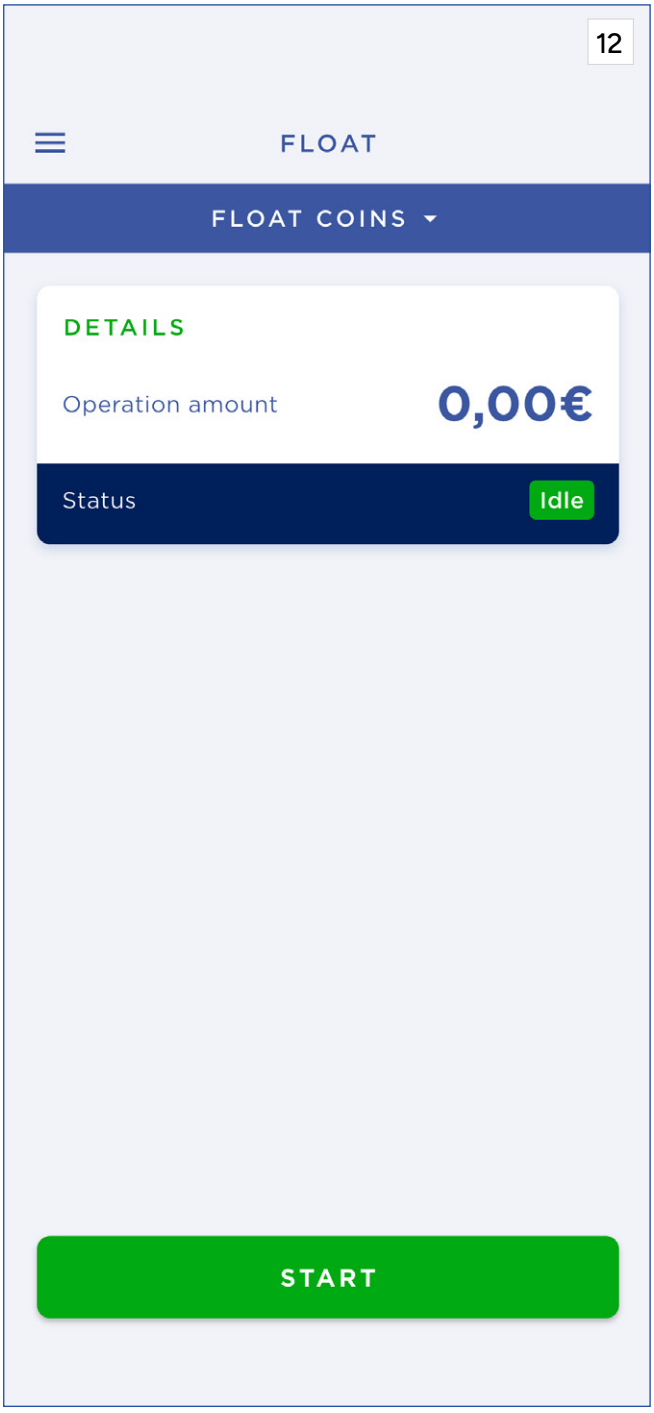

The “Float coins” (from the drop-down menu) allows coins to be emptied from the cash funds (Fig. 12).


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

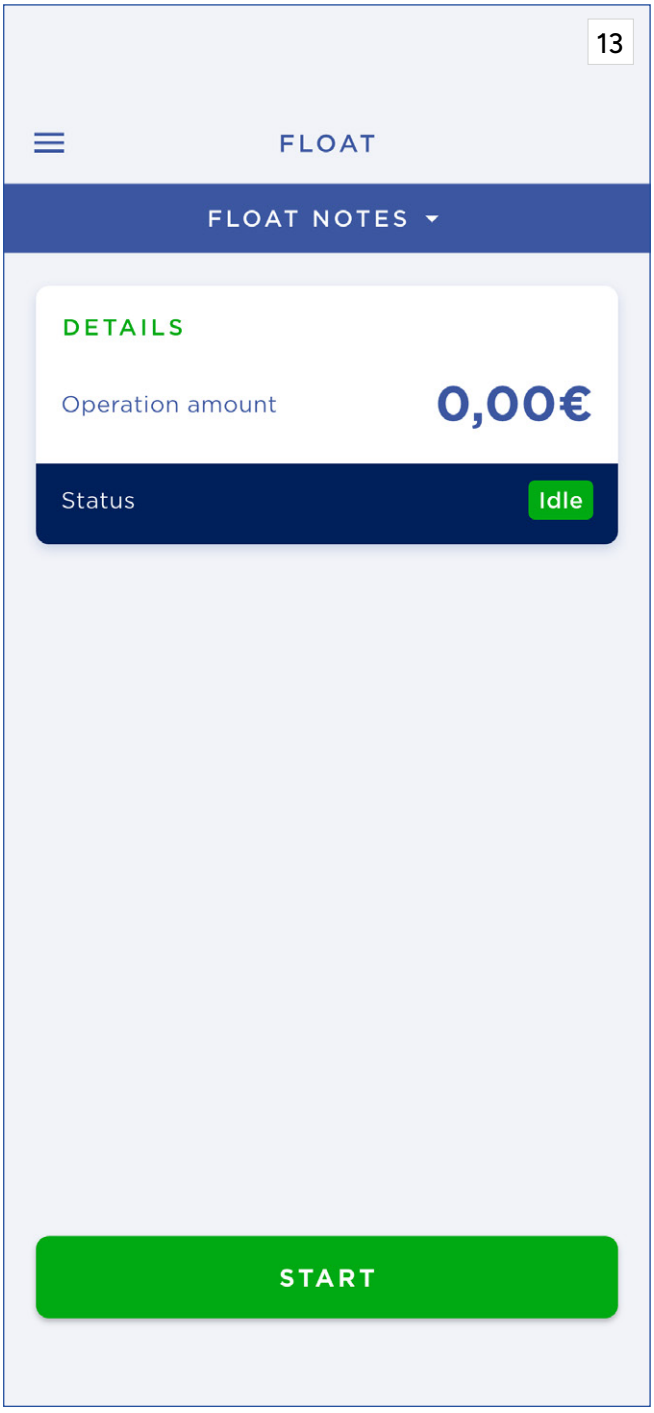


The “Float notes” (from the drop-down menu) allows banknotes to be emptied from the cash funds (Fig. 13).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

RESET CASHBOX

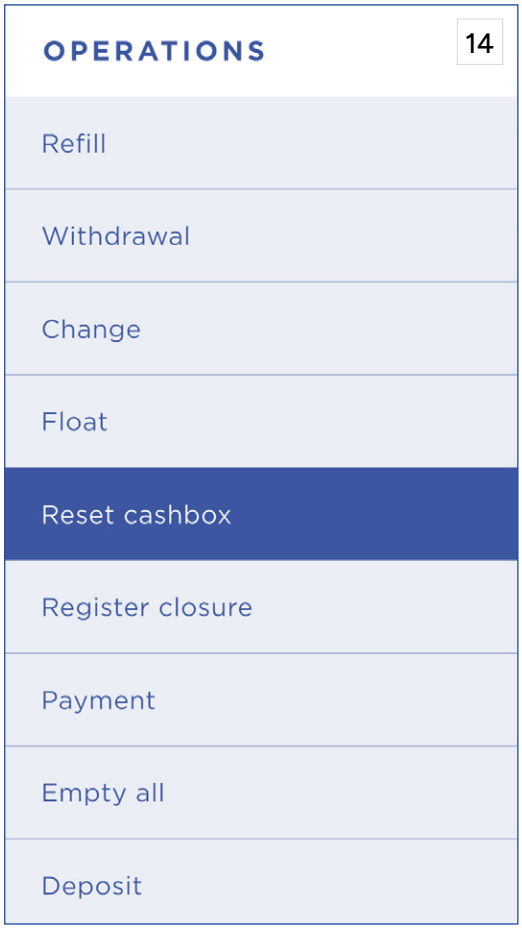


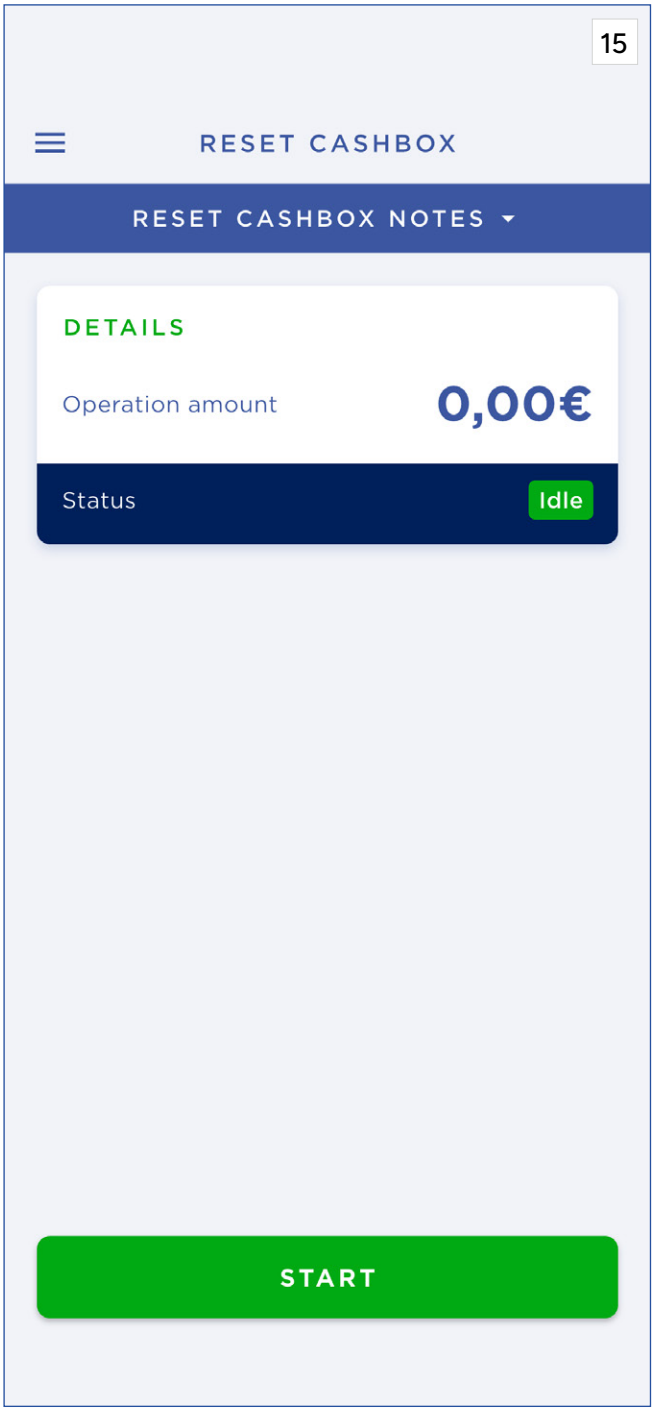


To empty the cashbox and reset the banknote levels (Fig. 15), click on the "Operations" menu item, then "Reset Cashbox".
(Fig. 14).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

REGISTER CLOSURE

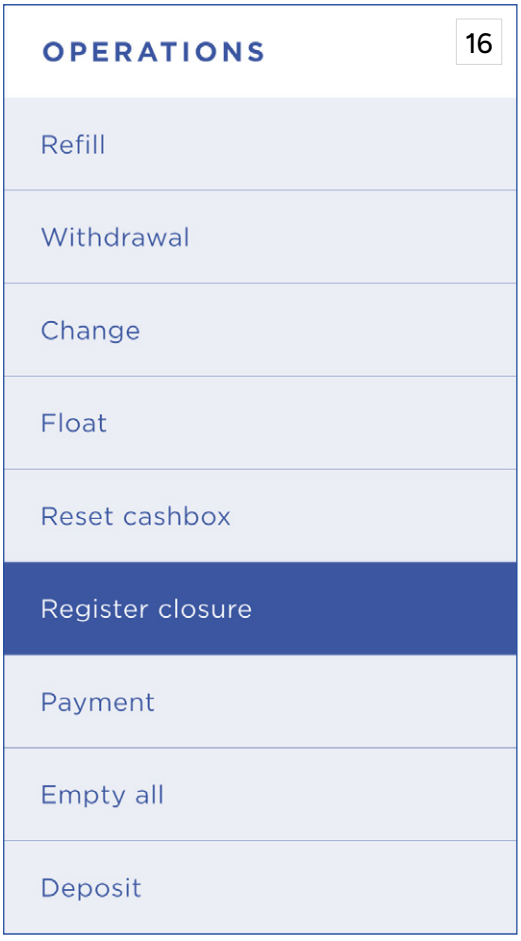

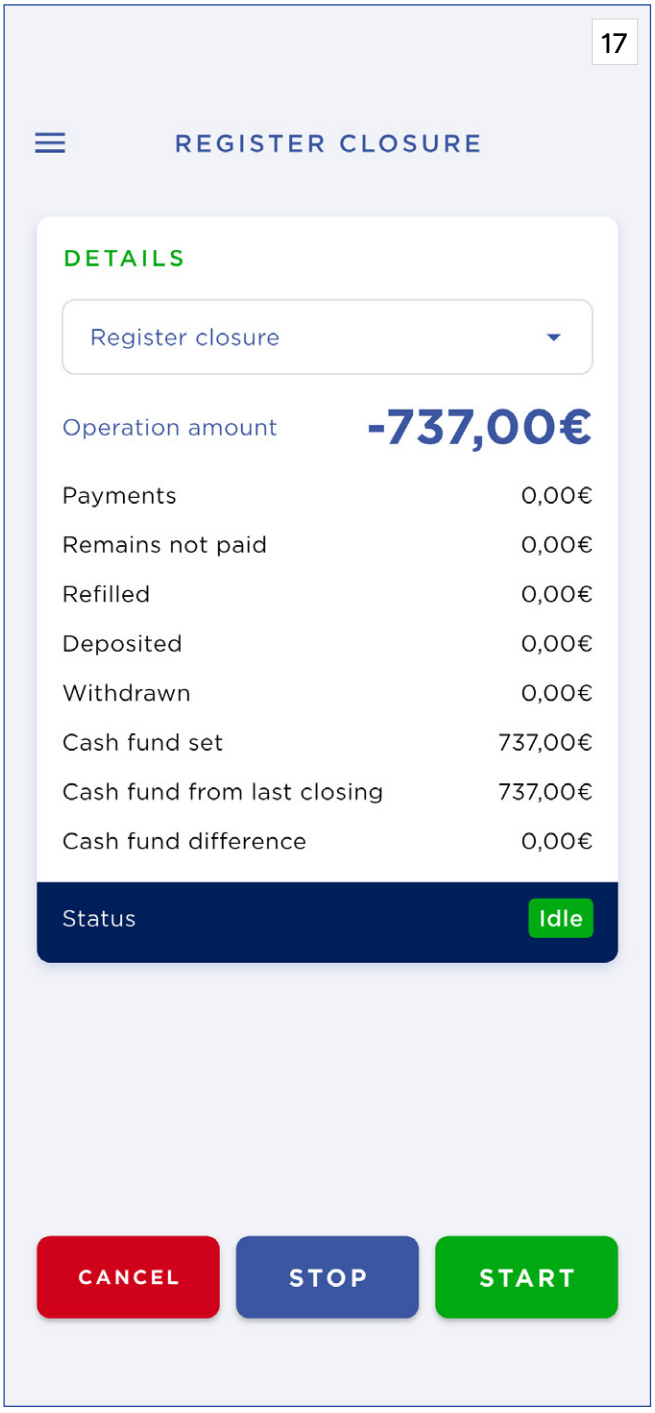



To close checkout so that the amount of money in the drawer matches the total cash fund value set, click on the "Operations" menu item, then "Register closure" (Fig. 16).

Register closure has a refilling mode that can be selected from the drop-down menu under "Details" (Fig. 17). This type of refilling only looks at the total amount and not the individual denominations.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

PAYMENT

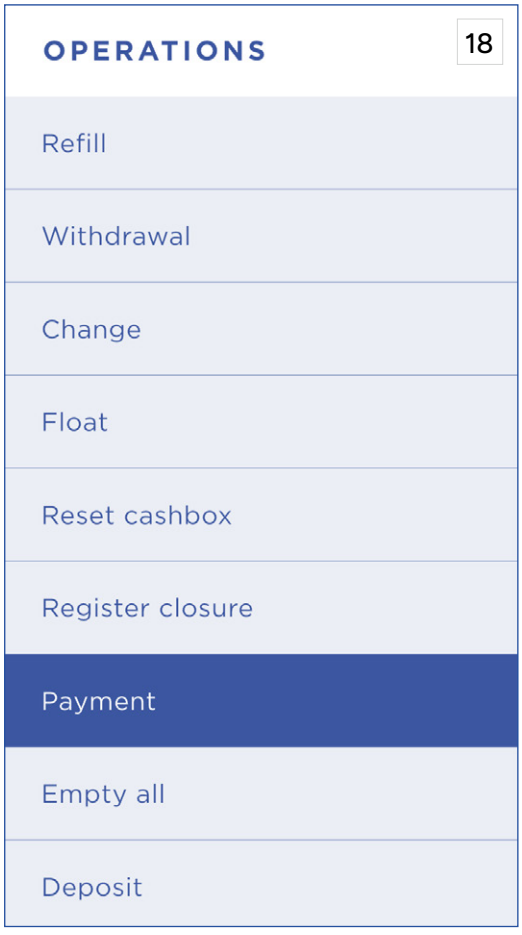


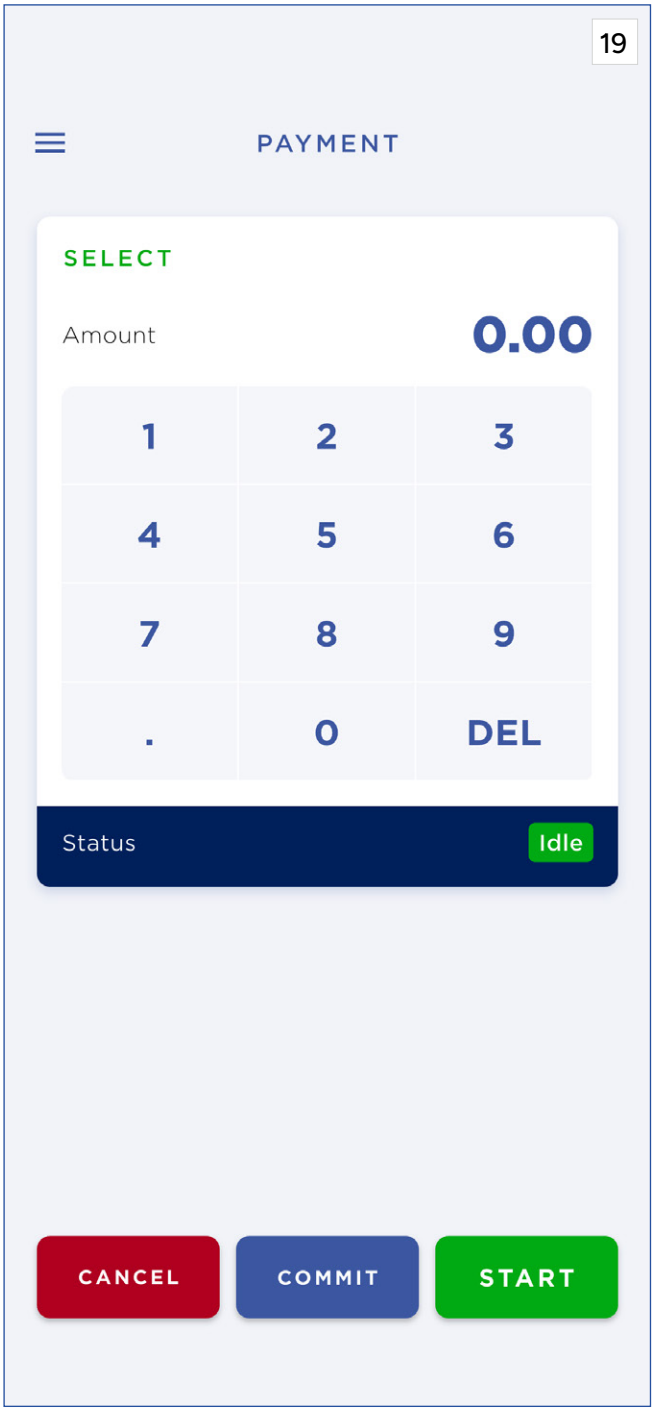


To make a transaction, click on "Operations" in the menu, then "Payment" (Fig. 18), enter the amount you want and then click on the "Start" button (Fig. 19). The transaction will start automatically.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

EMPTY ALL

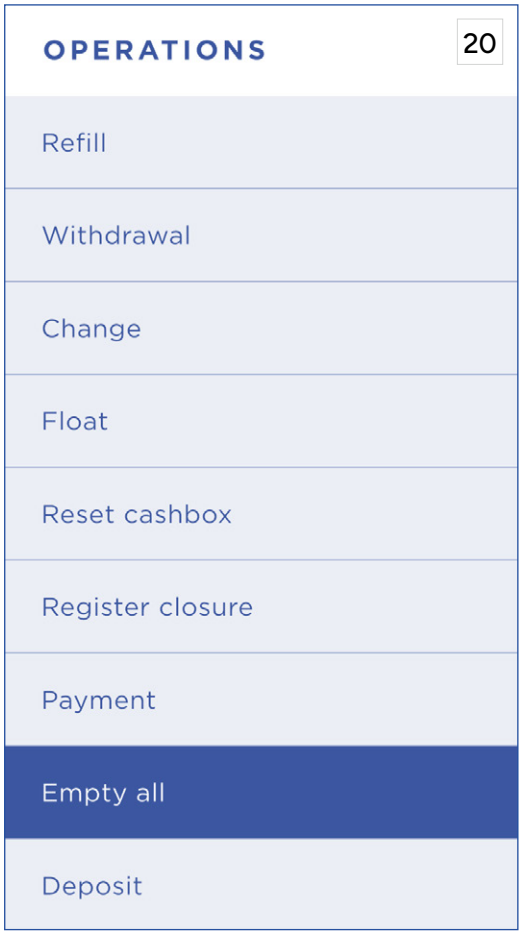

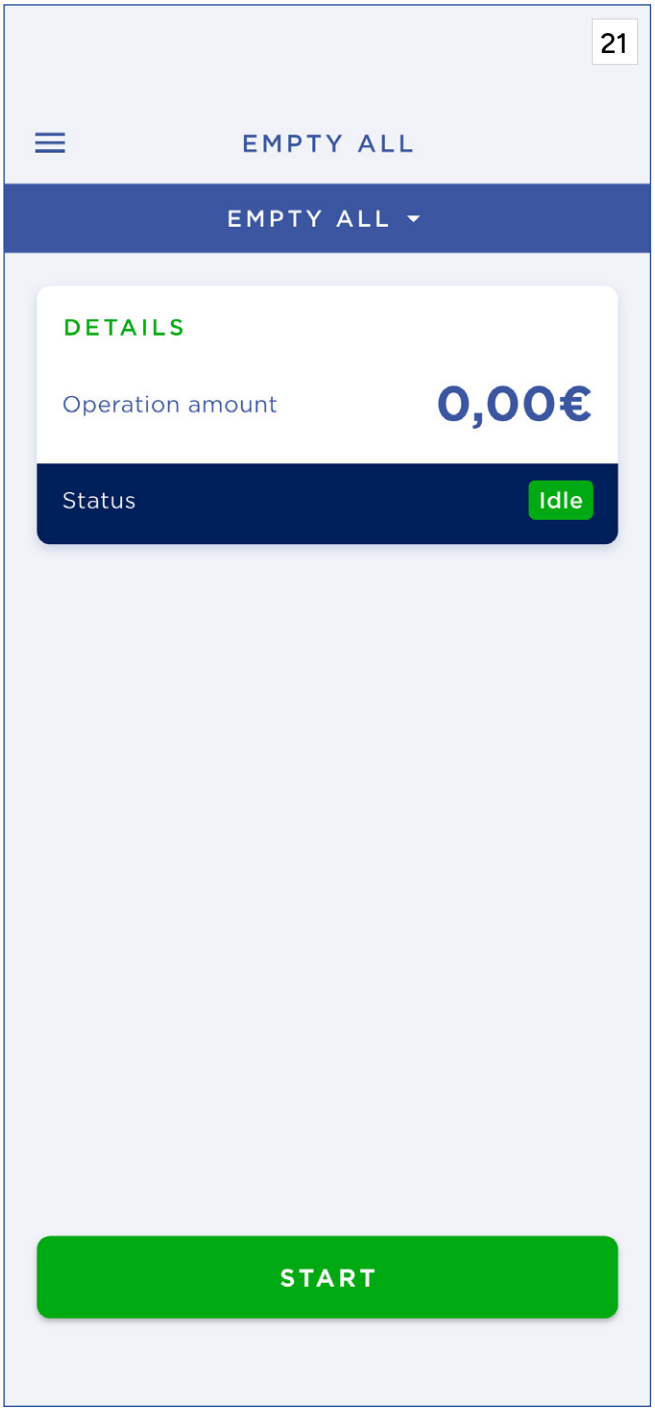


To empty the cashbox, reset the banknote levels present, click on the "Operations" menu item (Fig. 20).

The "Empty all" operation will empty both the coins and banknotes simultaneously (Fig. 21)

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


EMPTY ALL

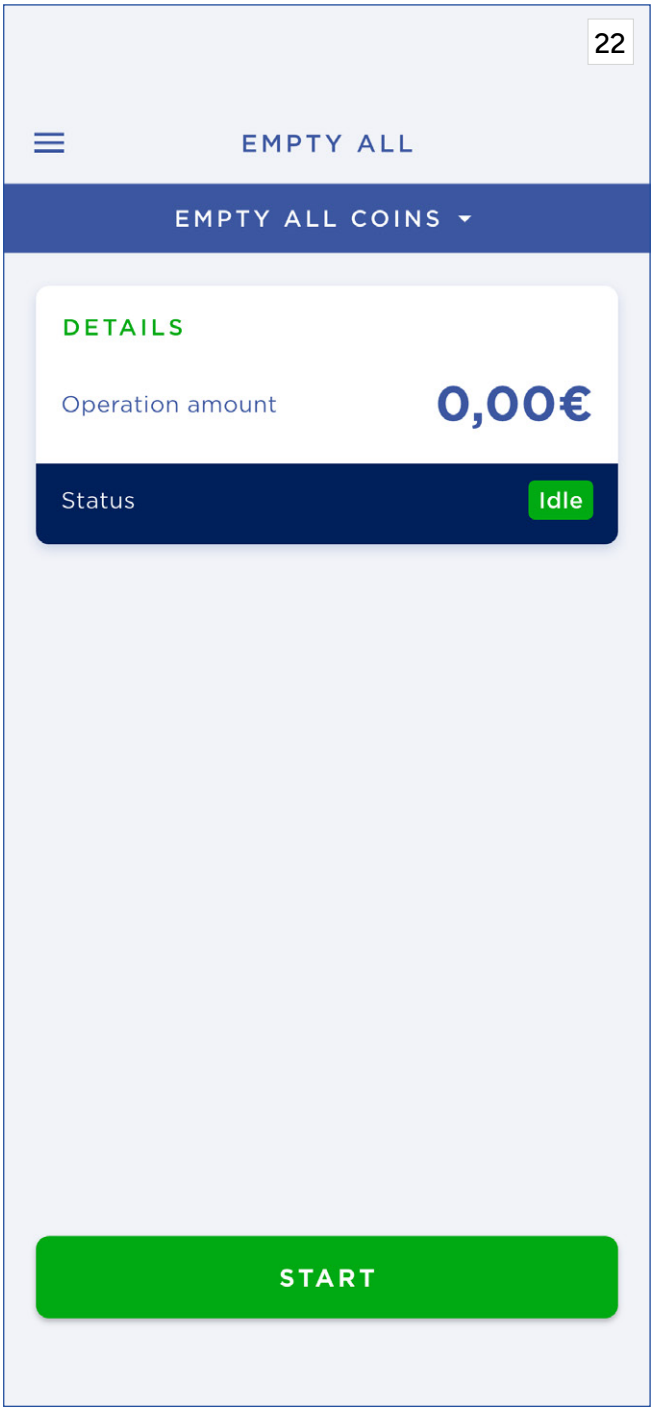

"Empty all coins" can be used to empty the coins in the tray (Fig. 22).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


EMPTY ALL

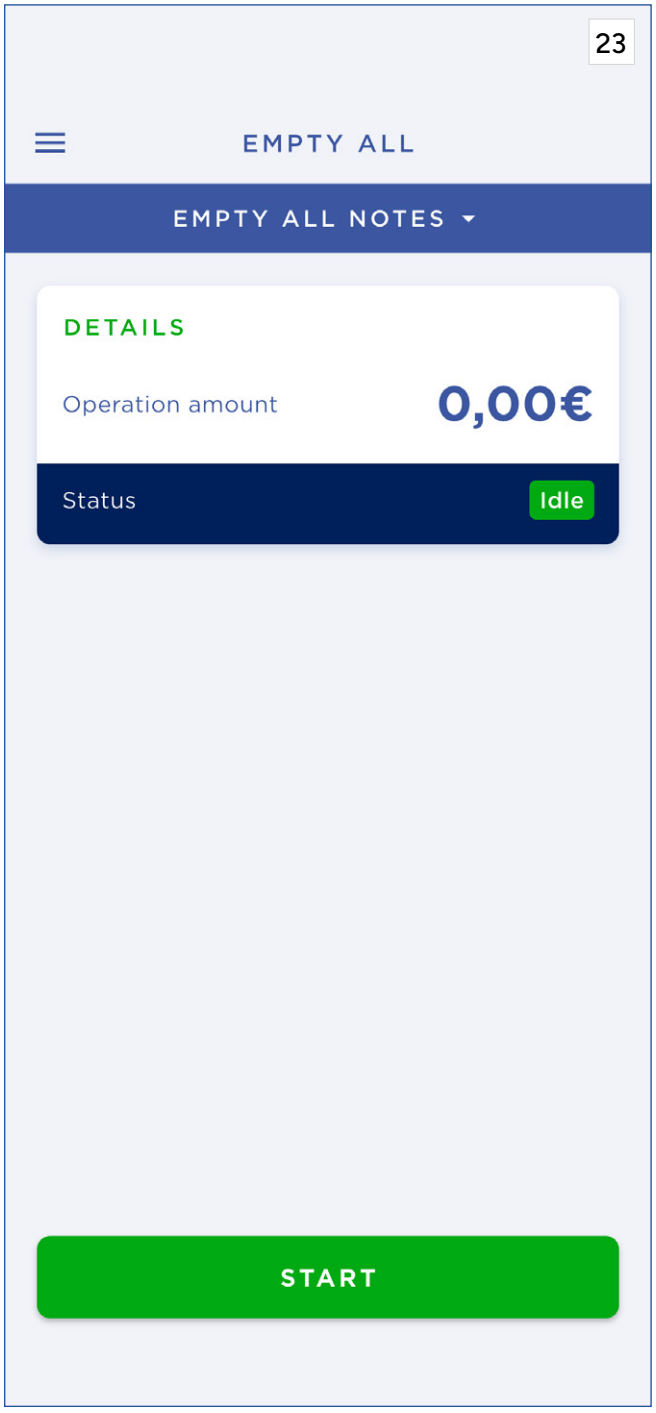


or press “Empty all notes” to move all banknotes to the cashbox (Fig. 23).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

DEPOSIT

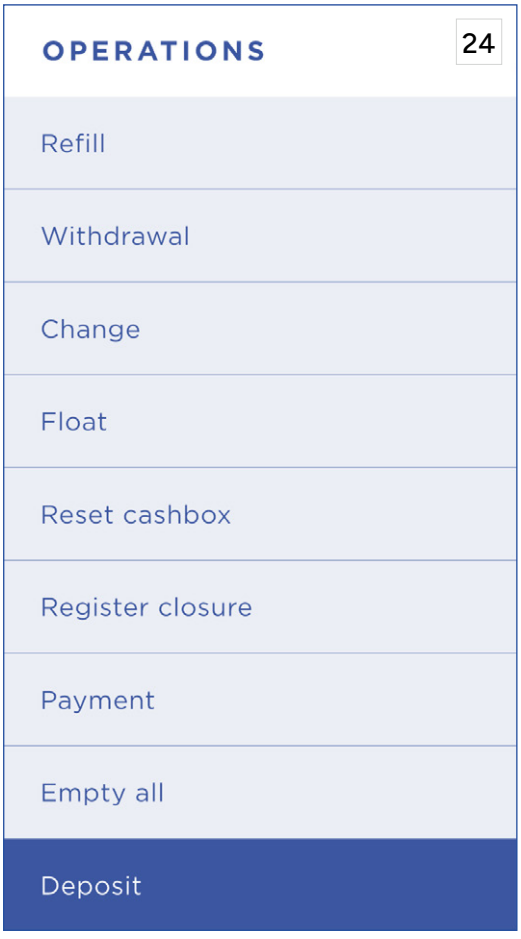

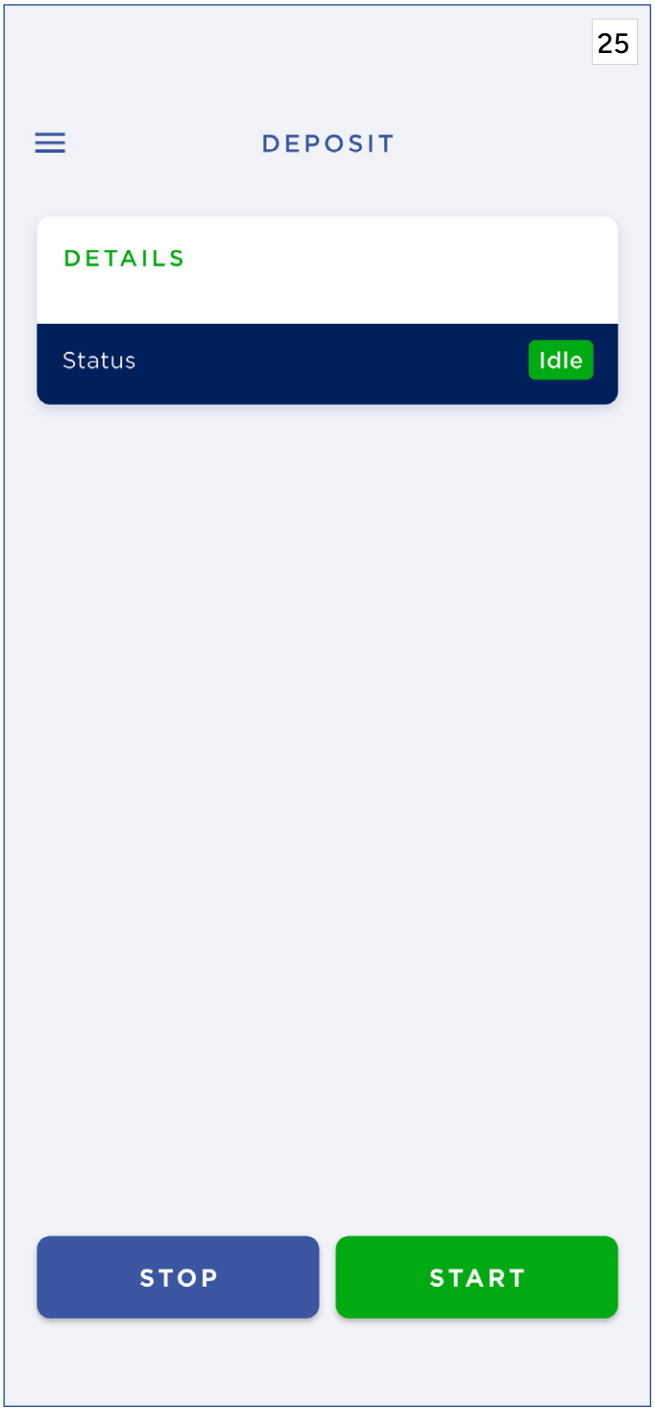


The deposit function allows you to freely insert coins and banknotes into the checkout, ignoring the set cash limit.

To make a deposit, click on the "Operations", "Deposit" menu items (Fig. 24) and press "Start" to begin the operation (Fig. 25).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

4. SPECIAL OPERATIONS

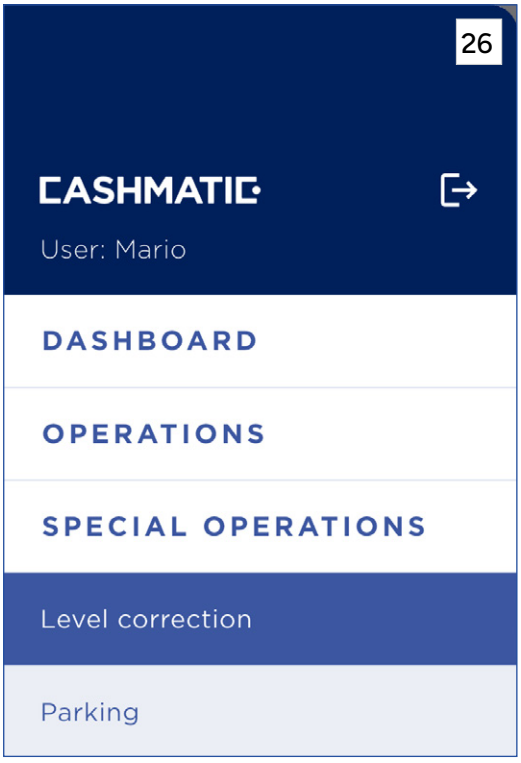

Note: Pay close attention to the quantities inserted, as an error in setting the levels may cause the automatic drawer to jam or prevent it from functioning correctly.


The “Level Correction” function allows you to adjust the coin level inside the device after manually adding or removing a quantity of money.


To adjust, click on the “Special operations” and “Level correction” menu items (Fig. 26), enter the new actual quantities, and then press “Save” (Fig. 27).



Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

PARKING

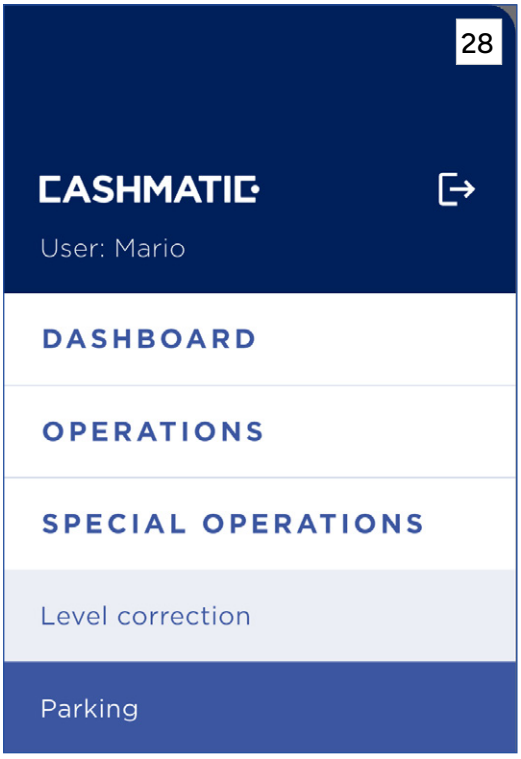

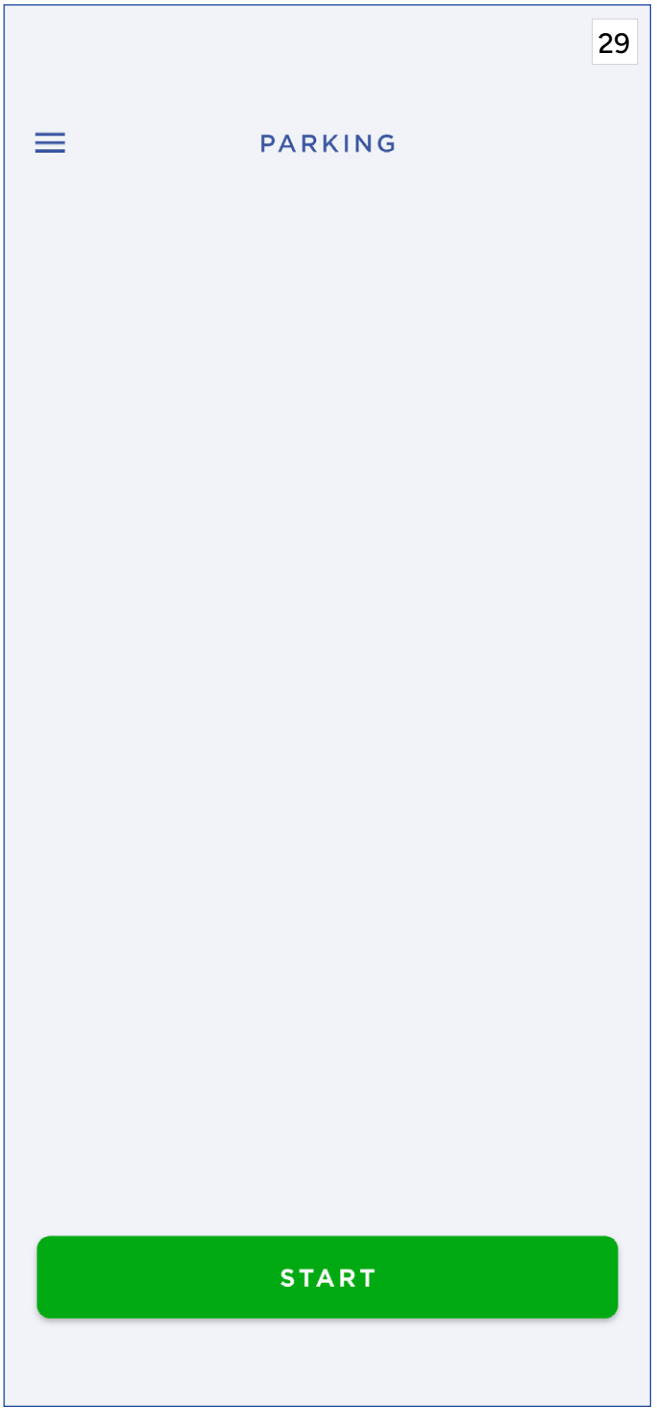


Note: The Parking function is only available on the SelfPay 1060 model.

The Parking function allows you to prepare the automatic drawer for transport.

To park the drawer, click on the “Special operations”, “Parking” menu items (Fig. 28) and press “Start” to begin the operation (Fig. 29).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

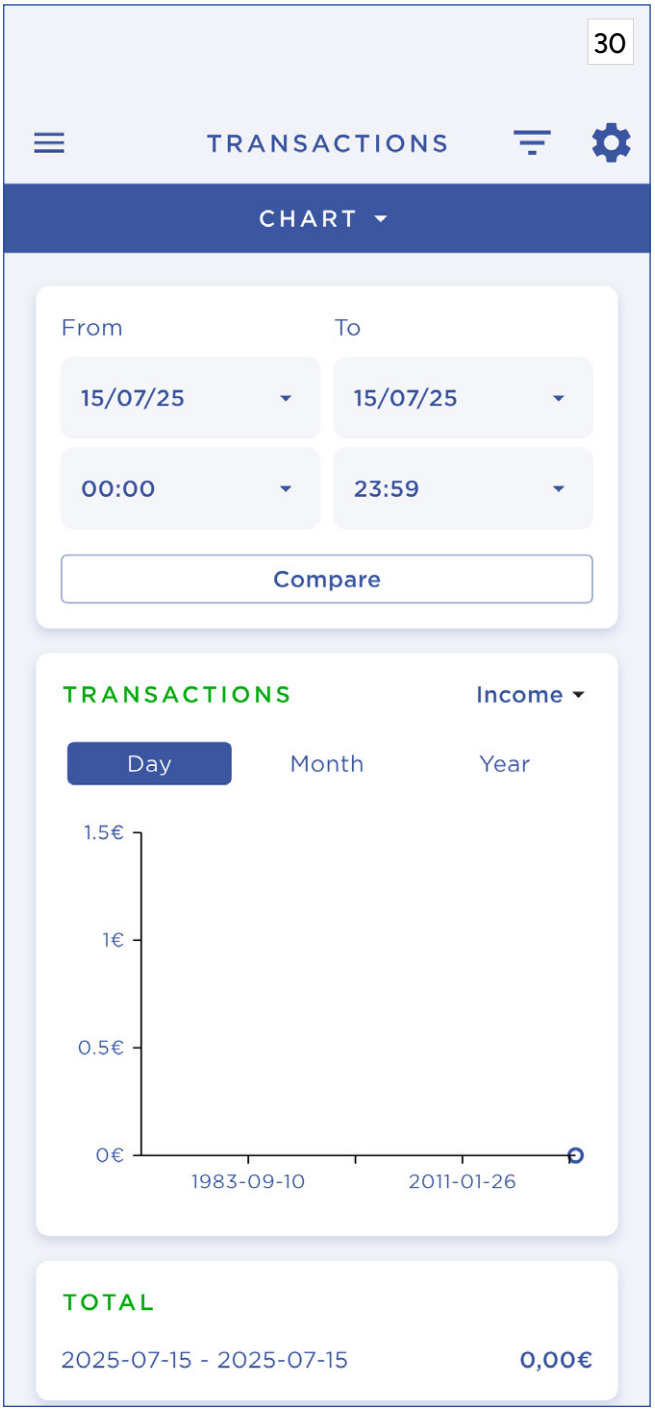

The “chart” of the selected movements types shows their trend over a period of time defined by the user (Fig. 30).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

LIST OF MOVEMENTS



The “List” section of “Movements” allows you to view all the operations carried out by the drawer, indicating the start and end dates, or you can search for a specific operation (by clicking on the first icon at the top right).
(Fig. 31).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

DETAILS




To view the details of an operation, click on the "Show Details" button.

You can download the uploaded table using the "Download" button (Fig. 32).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


CHOOSE FORMAT

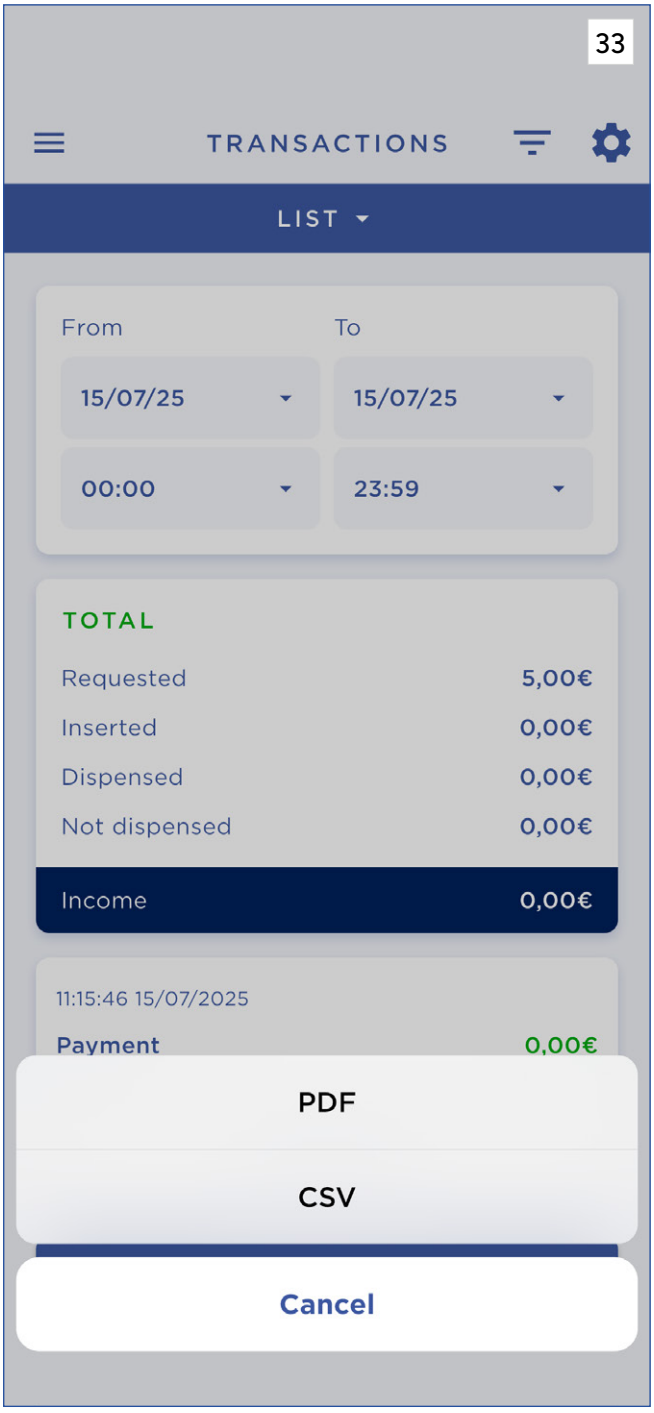

You can choose to download a file in PDF or CSV (Excel) format (Fig. 33).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


CONFIGURE PDF

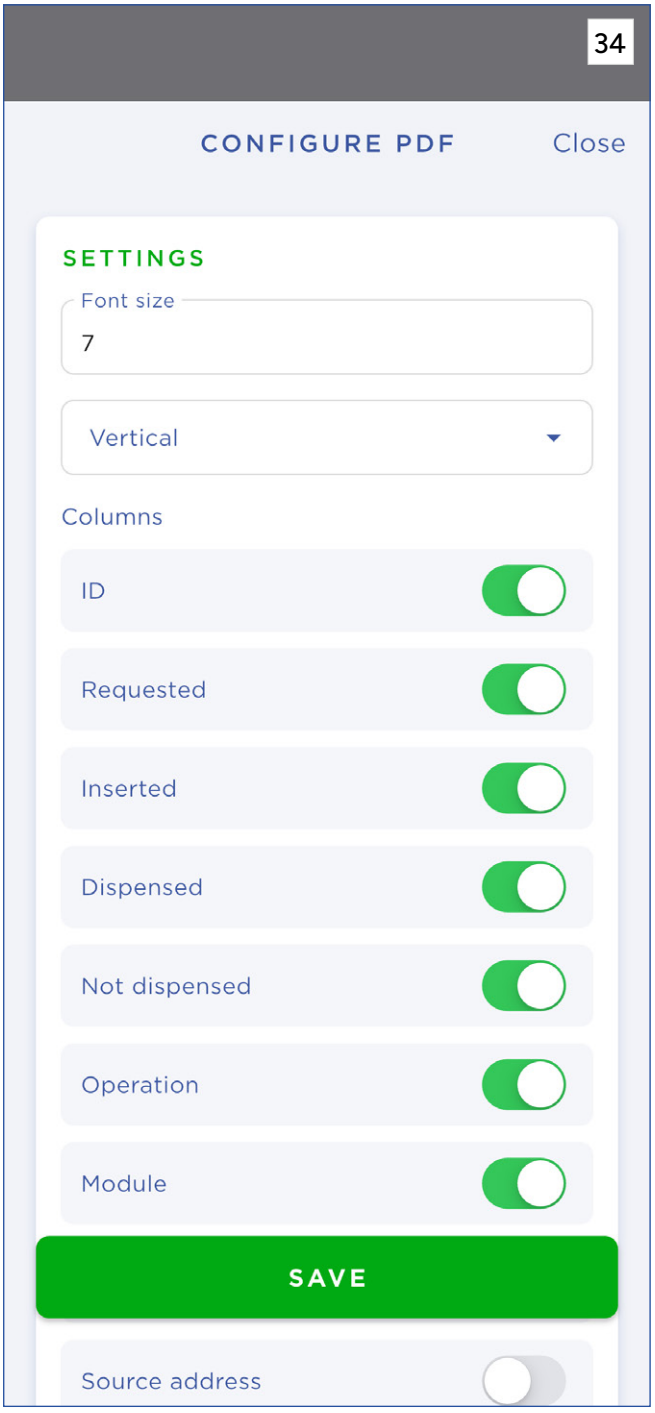

To change the PDF file configuration, click on the wheel icon (Fig. 34).


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

6. SETTINGS

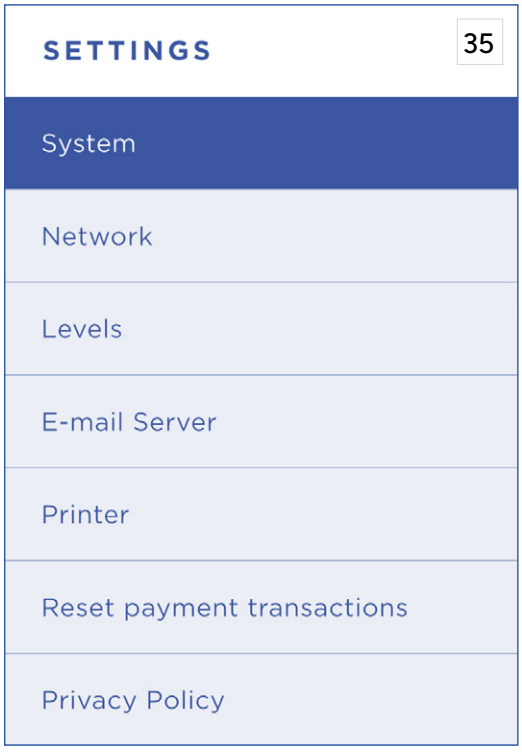


To access the “System settings” screen, click on the item in the “Settings” menu, then on “System” (Fig. 35).

This screen contains the general settings for the device (Fig. 36).

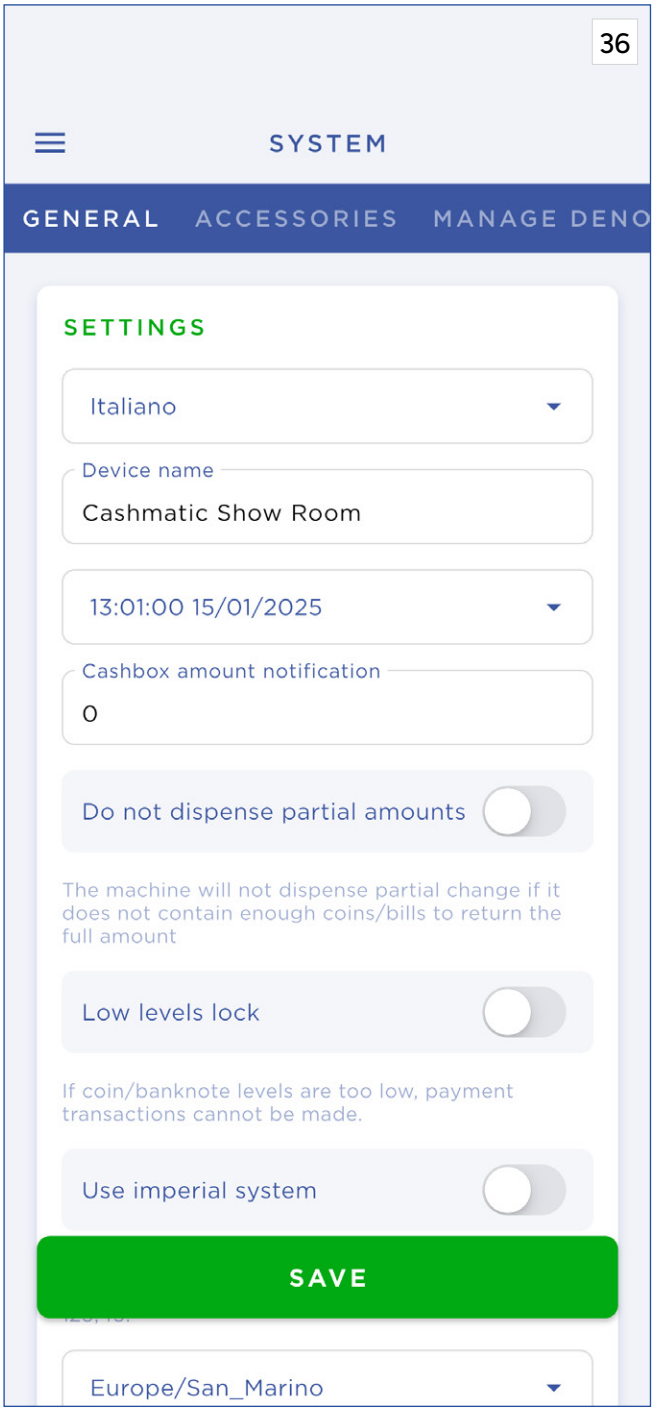

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

ACCESSORIES

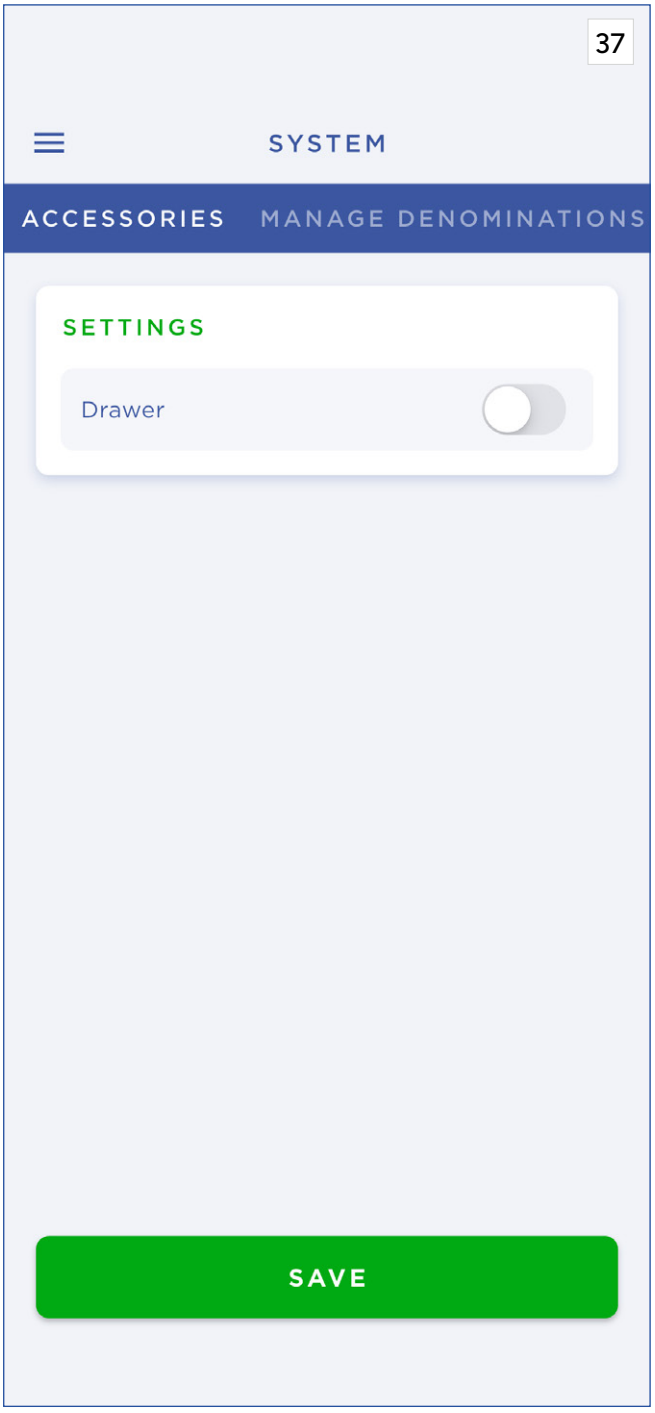

In this section, you can enable/configure accessories installed on the machine (Fig. 37).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


MANAGING DENOMINATIONS



You can use this panel to enable/disable acceptance of coins/banknotes.
To use this service, click on the menu item "Settings", "System", "Manage Denominations", and, finally, click "Save" (Fig. 38).


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

TIPS

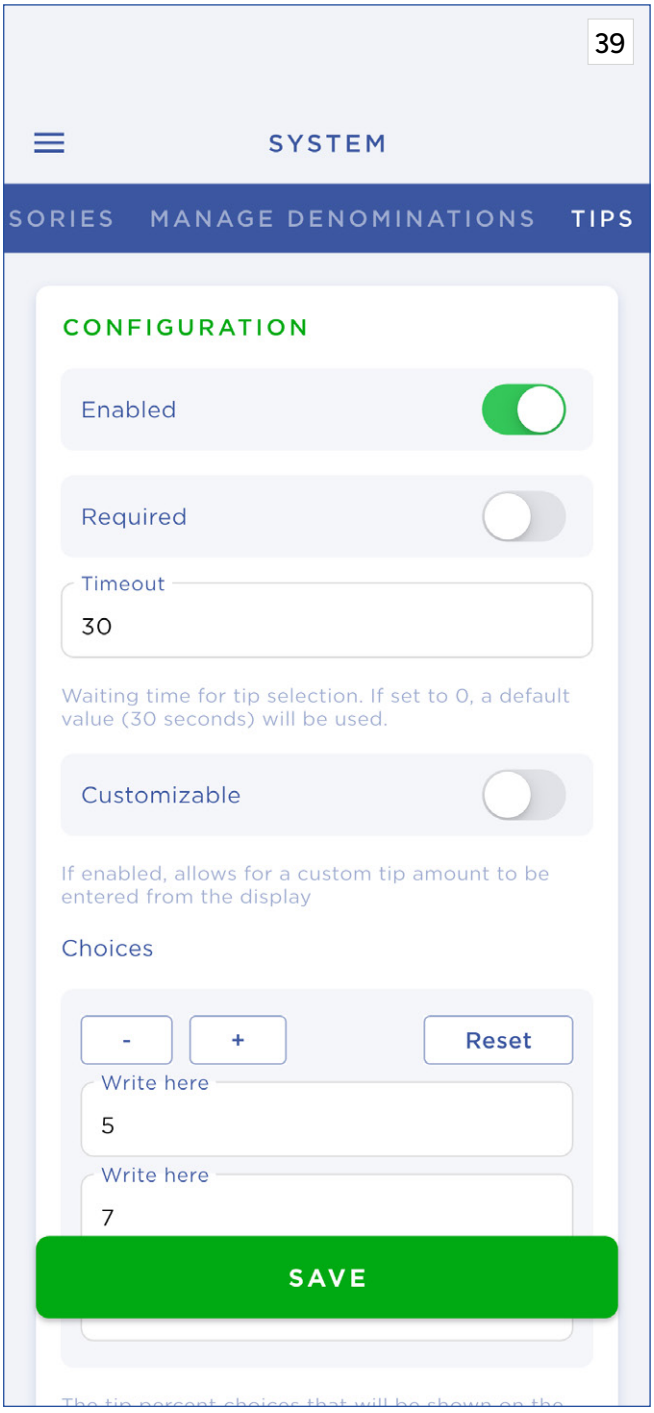

On this page, you can configure the tip feature (Fig. 39).


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

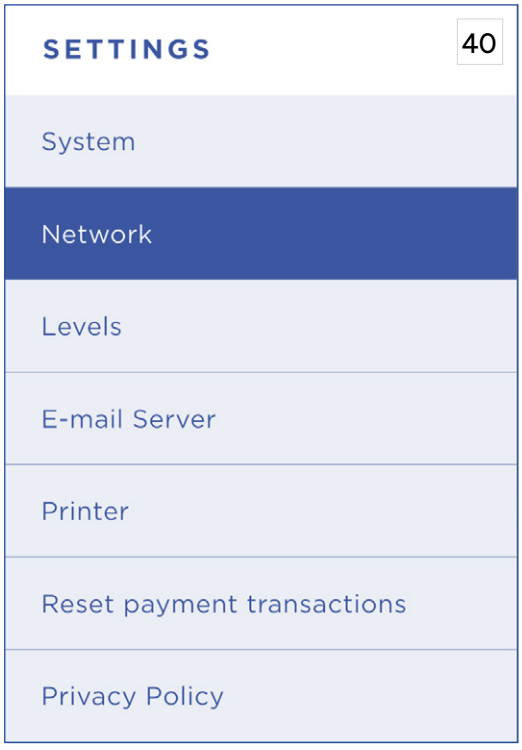


Note: In order to set the IP address of the drawer, it must already be physically connected via an Ethernet cable.

The IP address of the drawer can be viewed and set in the management panel (Fig. 41).

To use this function, click on the “Settings”, “Network”, "IP address” menu items
(Fig. 40).

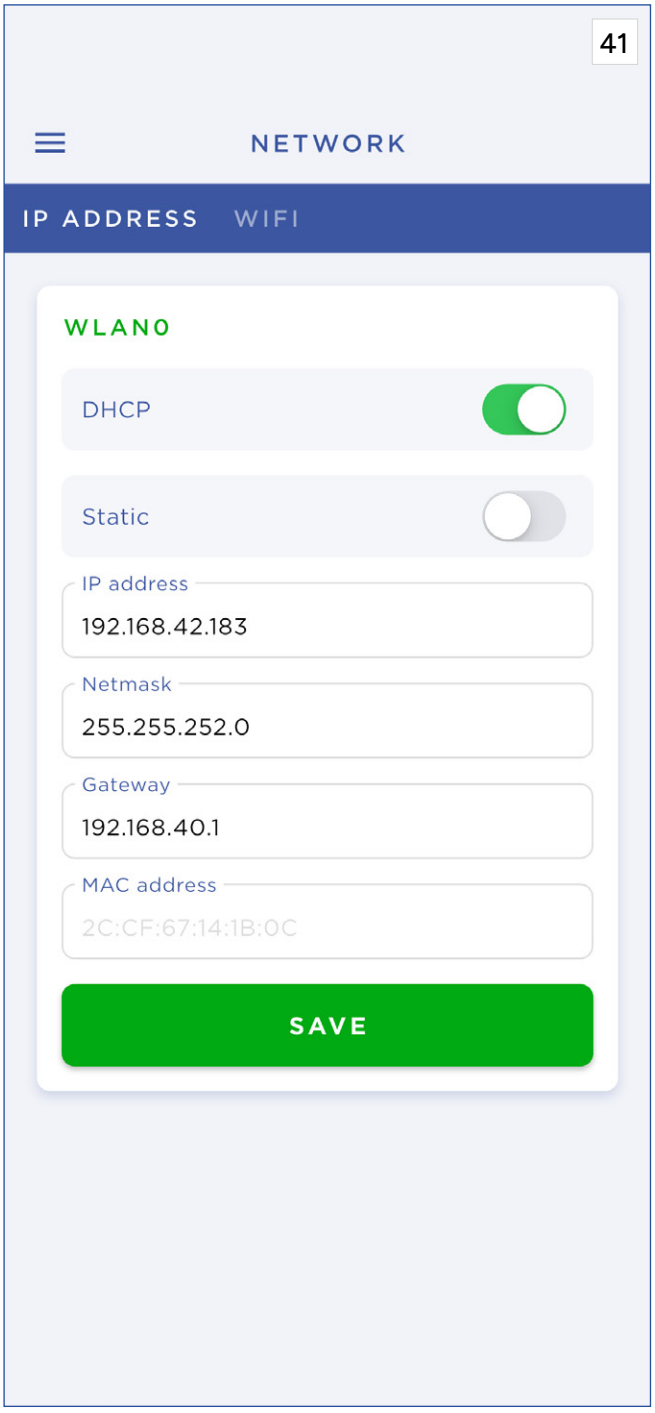

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

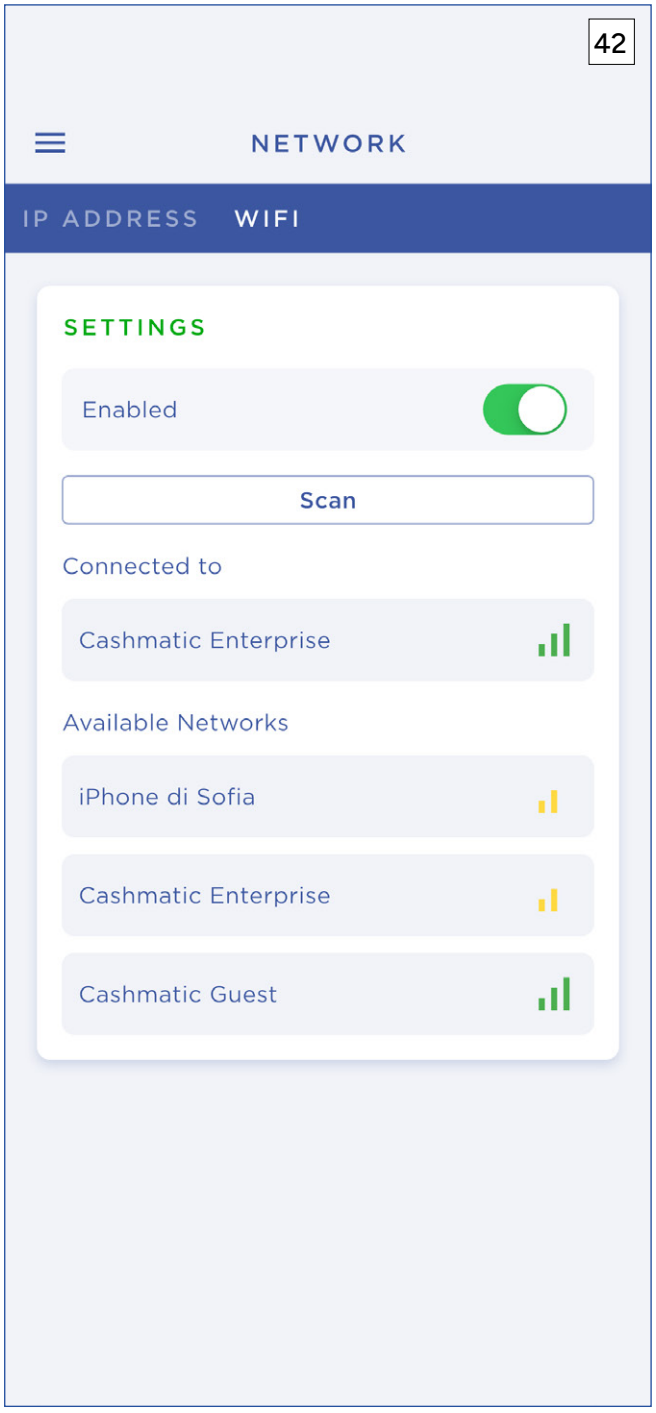

You can enable the WiFi function from the management panel.

To use this function, click on the “Settings”, “Network”, “WiFi” menu items.
Once enabled, the drawer will automatically search for available networks. To perform a new search, click on “Scan” (Fig. 42).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

RECOMMENDED CASH FUND LEVELS



The cash drawer cash levels can be set via the management panel. To use this function, click on the “Settings”, “Cash fund levels” menu items.

The cash fund level indicates the number of coins and banknotes that the drawer will use to give change and that must be retained when emptying the cash funds (Fig. 43).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

MAXIMUM LEVELS




The maximum recycling levels for the automatic drawer can be set via the management panel. To use this function, click on the “Settings”, “Levels” and “Maximum” menu items (Fig. 44).

The maximum recycling level indicates the maximum amount of coins and/or banknotes that will be stored in the recyclers.


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

E-MAIL SERVER

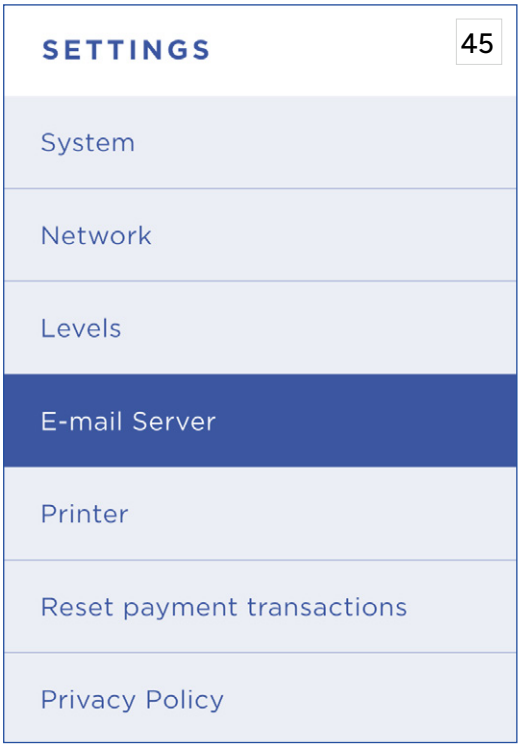


E-mail service allows all authorised users to receive emails regarding the status of their drawer. To use this service, you need a server (e.g. Gmail).

To use the "E-mail Server" feature, click on "Settings" in the menu, then "E-mail Server".
(Fig. 45), enter the information required to use the service and then click "Save" (Fig. 46).

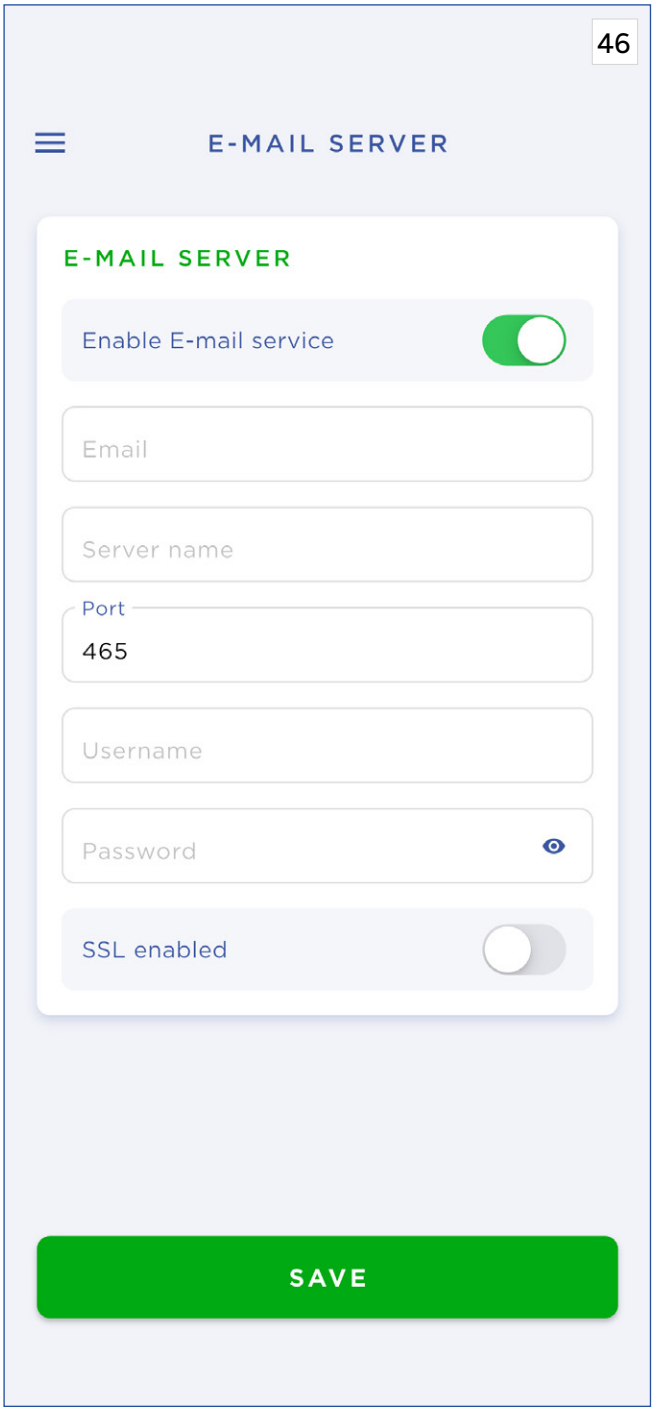


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

PRINTER

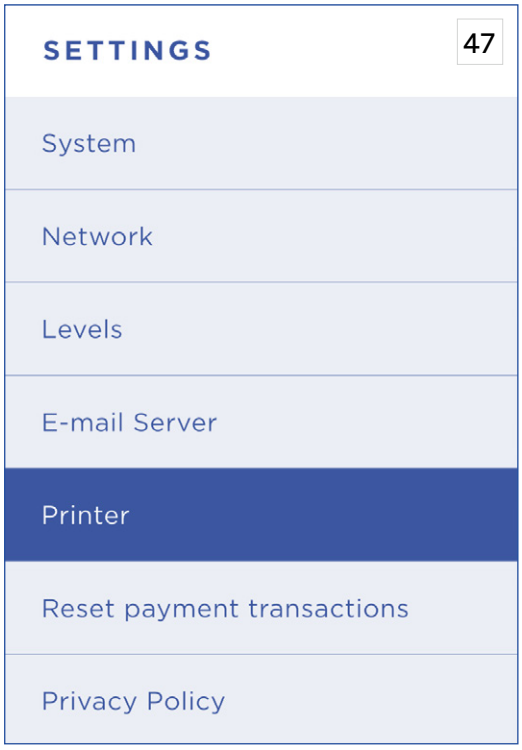


This service allows you to print notifications.

To use the “Printer” function, click on the “Settings”, then “Printer” menu items (Fig. 47), enter the information required to use the service and then click “Save” (Fig. 48).

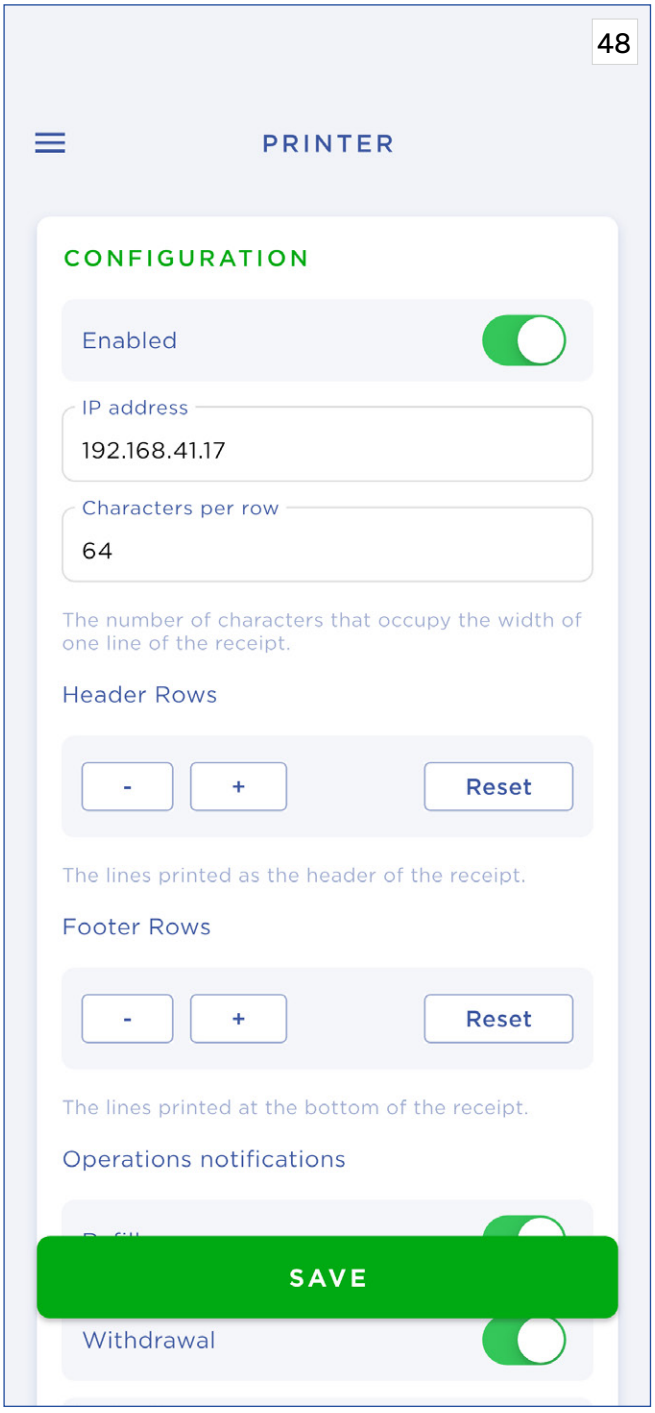


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

RESET PAYMENT TRANSACTIONS

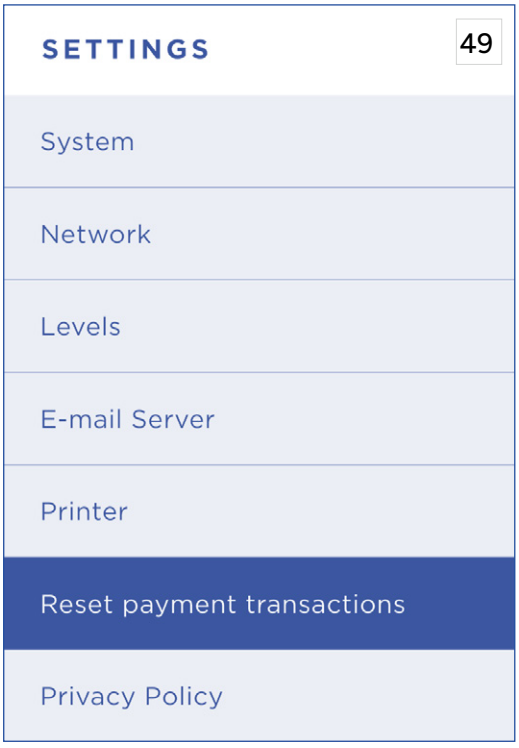


On this screen, you can reset the transactions by entering the code displayed and pressing the “Reset” button.
(Fig. 50).

To access Payment Transaction Reset, click on the “Settings”, “Reset Payment Transactions” menu items (Fig. 49).

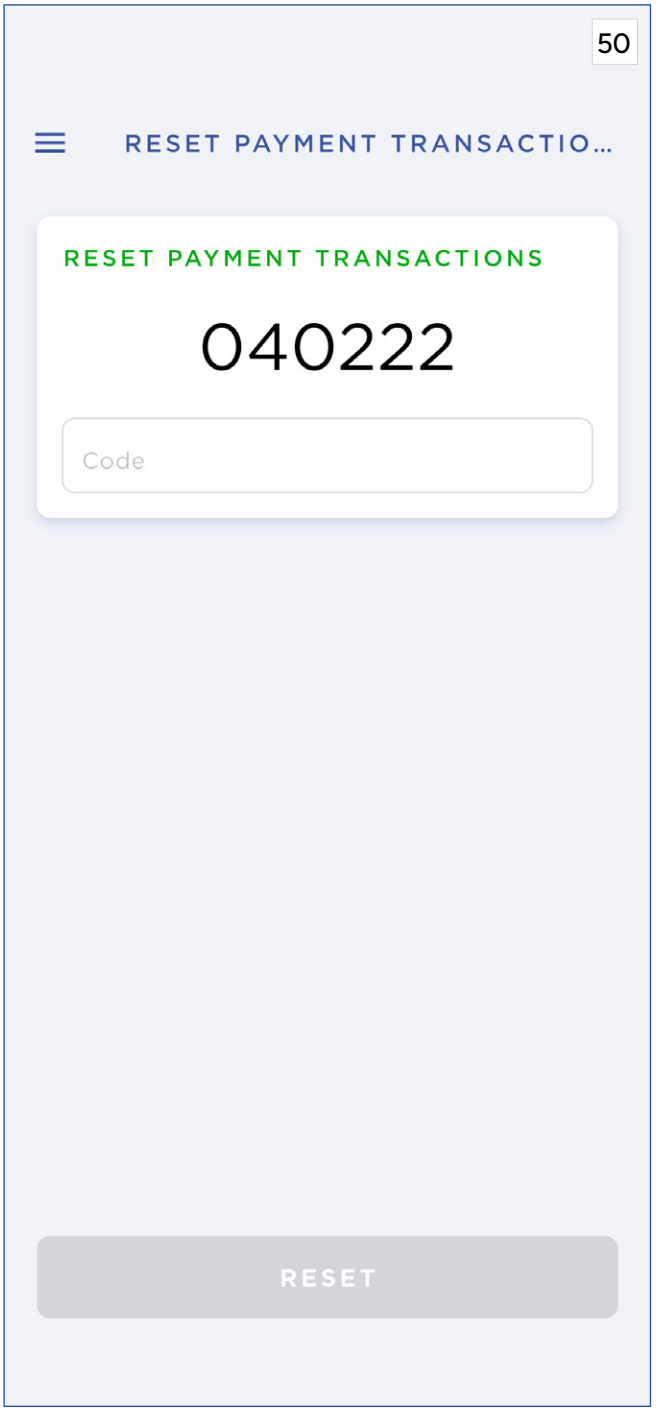

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


51

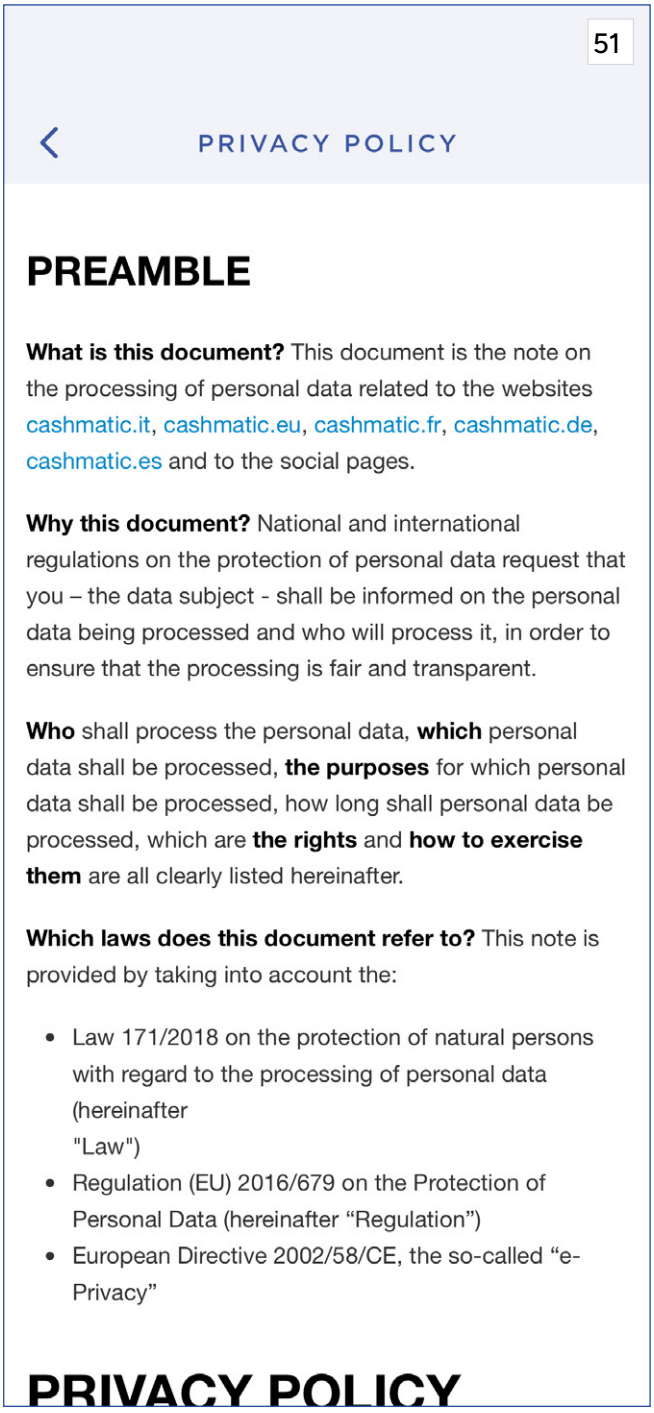


On this screen, you can view the "Privacy Policy" (Fig. 51).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

7. LOG DOWNLOAD

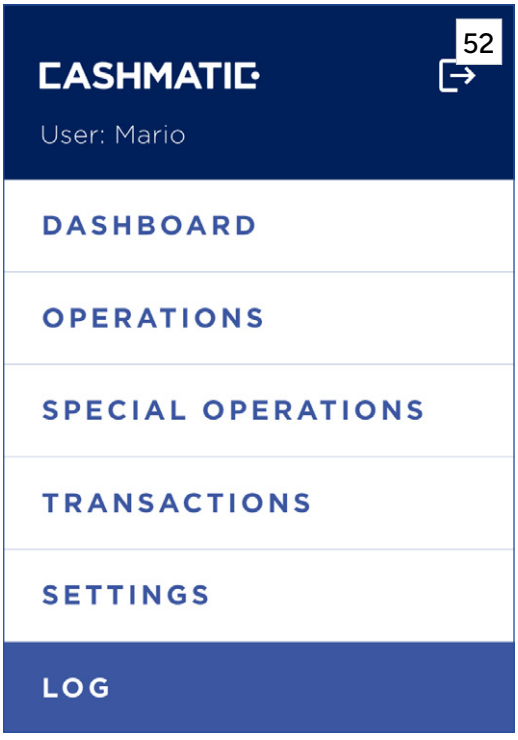


To download the log files, click on the "Log" menu item (Fig. 52).
Select the date for which you want to download the files and click on "Download" (Fig. 53).

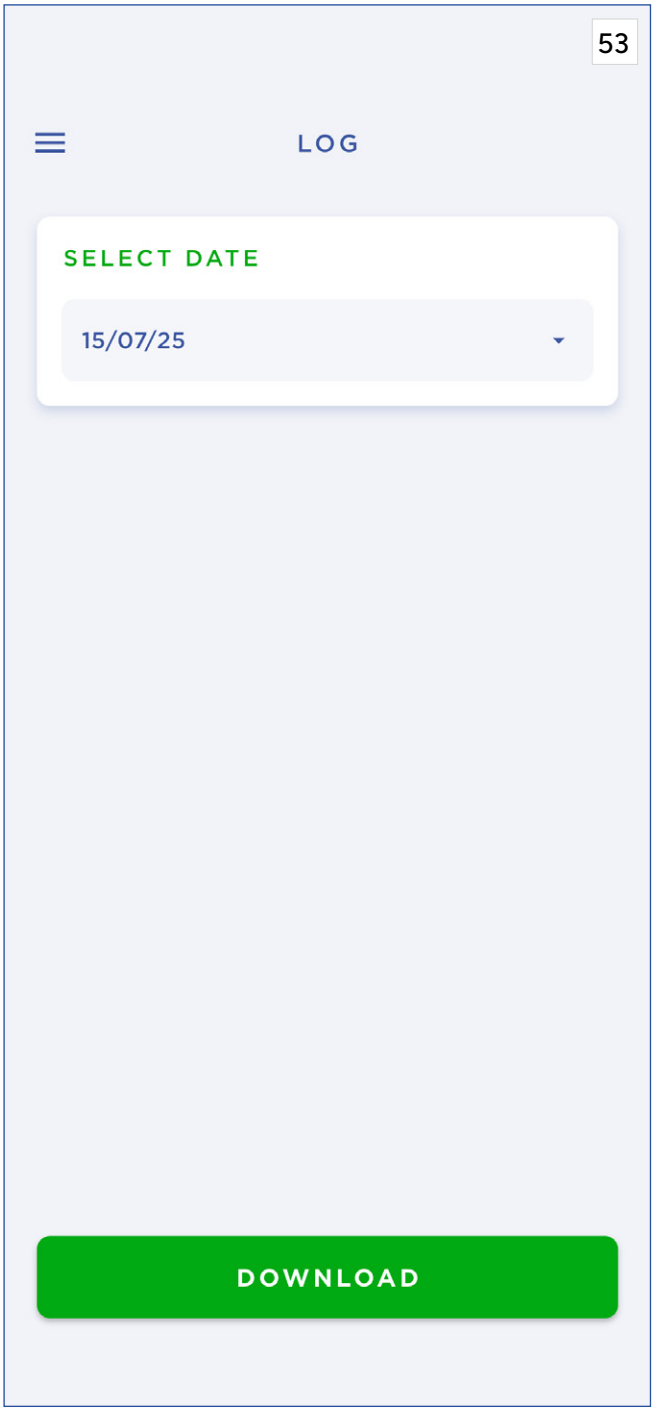


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

8. DOOR

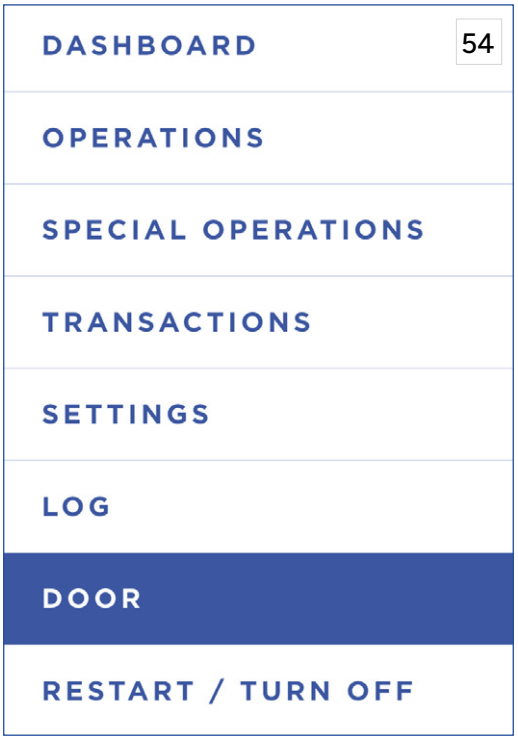


This screen allows you to check the opening and status of the available doors: main and coin Cashbox door (if installed) (Fig. 55).


To access the Door function, click on the "Door" menu item (Fig. 54).

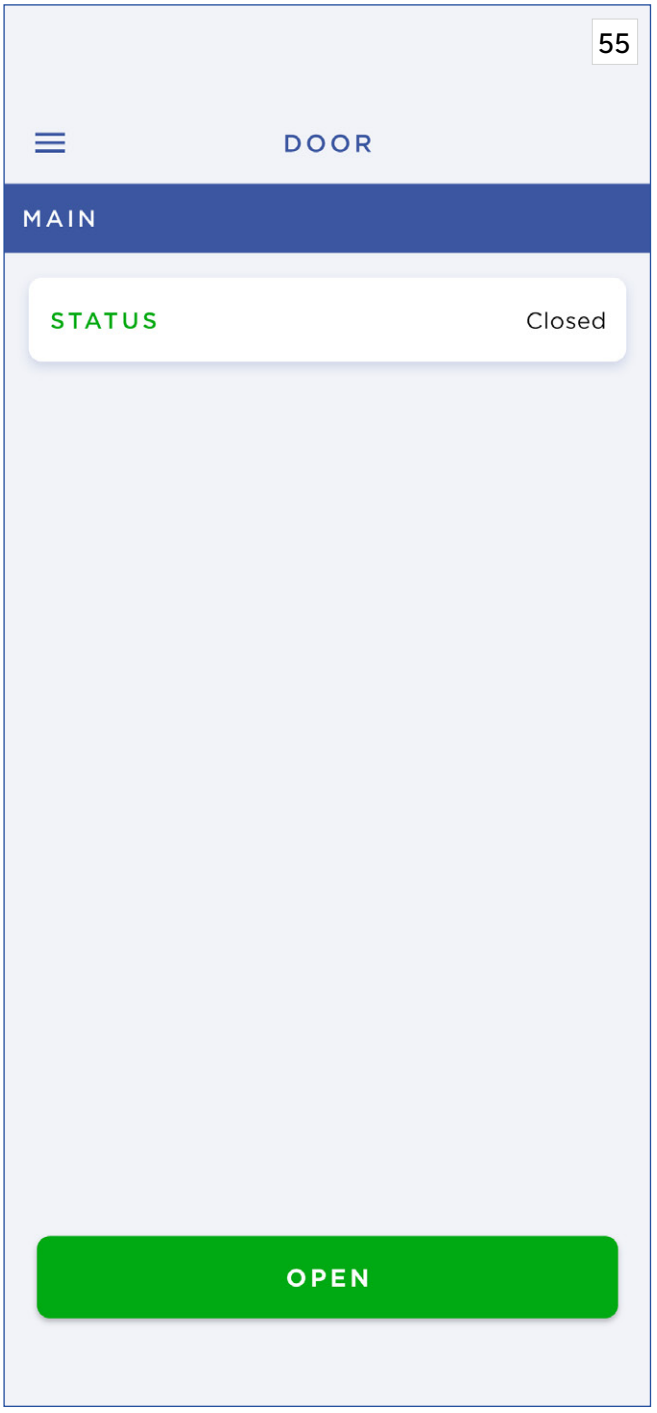

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

9. MANAGE USERS

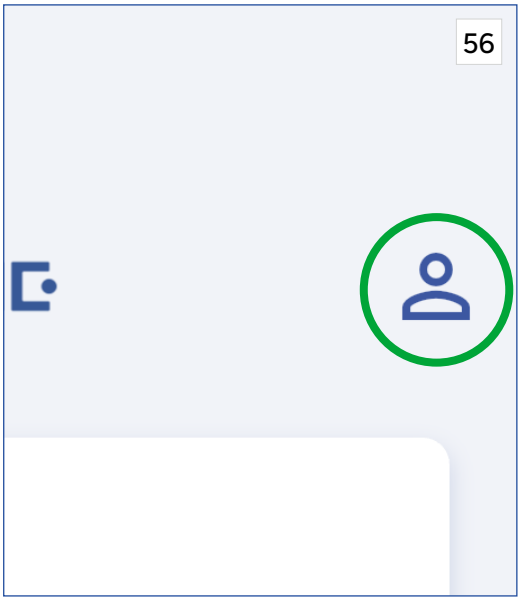

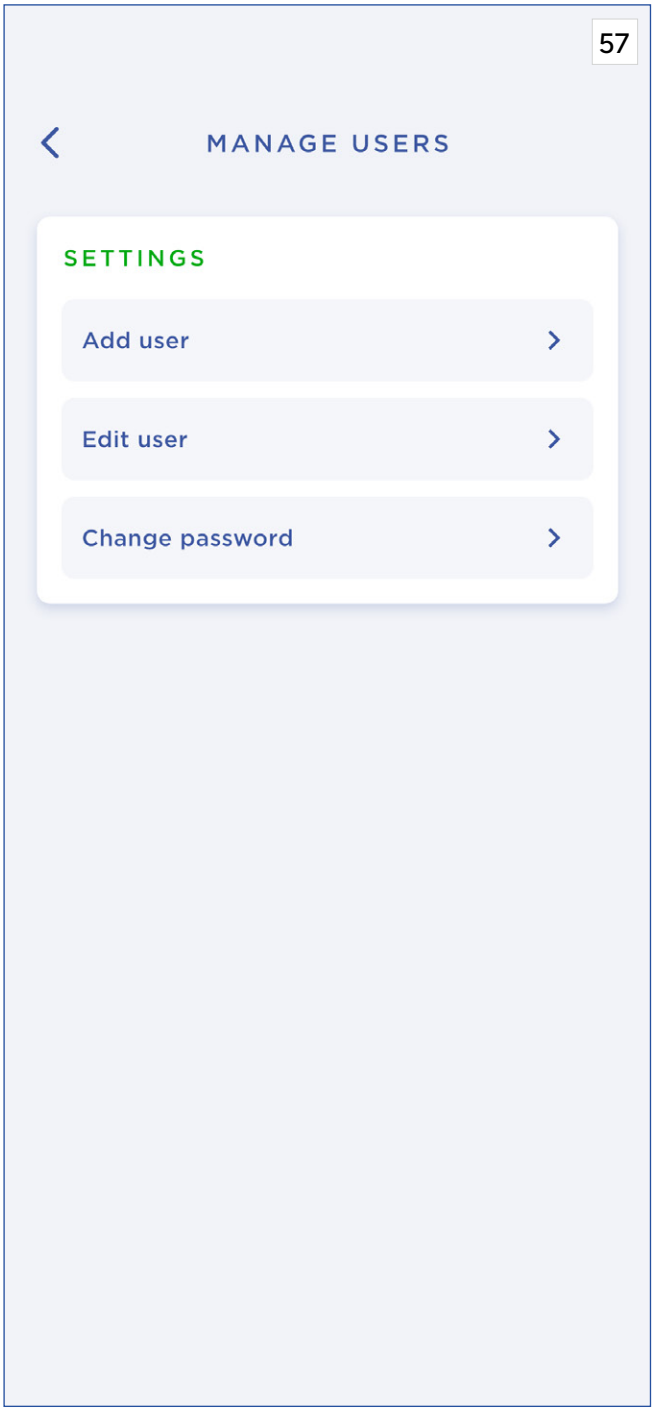


To access the Manage Users Panel, click on “Dashboard” in the menu and then click on the user icon in the top right corner (Fig. 56).

The “Edit user” function allows you to change account information and permissions at any time, even after creating an account.

To use this function, click on the “Manage Users”, “Edit user” menu items (Fig. 57).
It is also possible to deactivate a user.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


CREATING A NEW USER

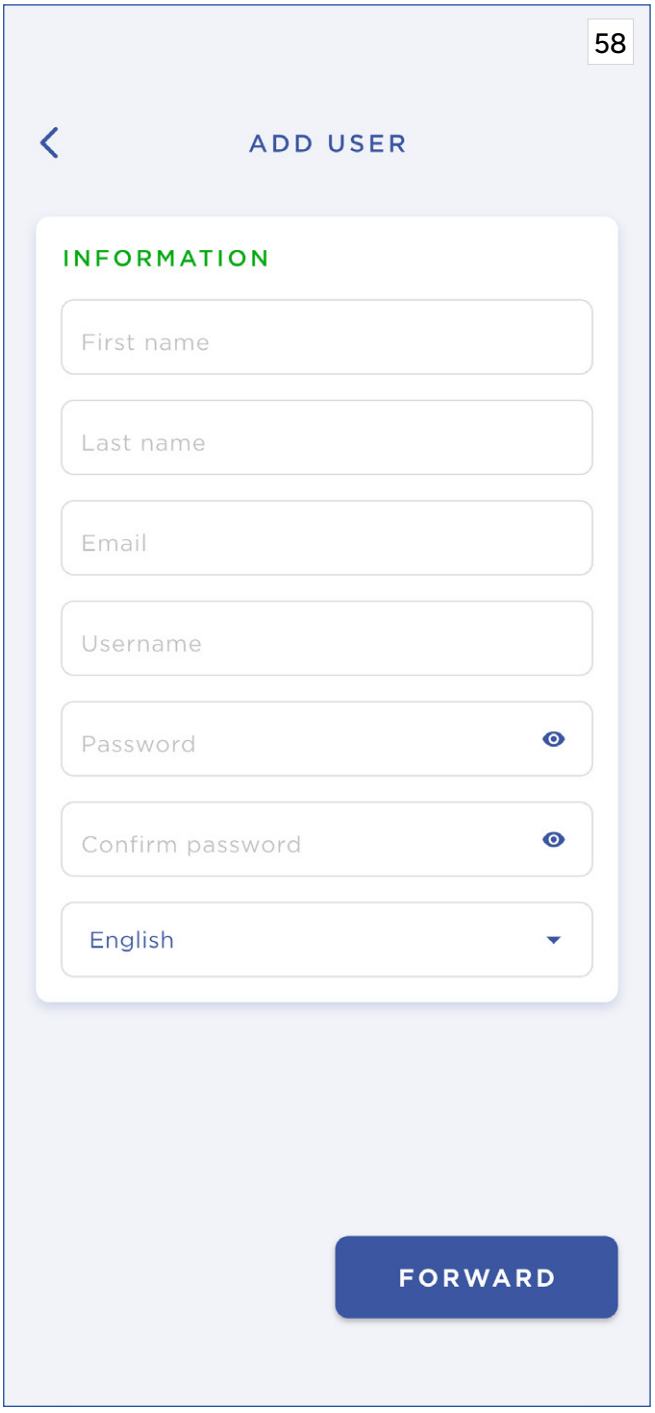

You can add a new user to make automatic drawer management more flexible. Only users with permission enabled can add or edit user accounts. To create a new user account, click on the "Manage Users", "Add user" menu items, then fill in the fields with the new account information (Fig. 58).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

MANAGING PERMISSIONS

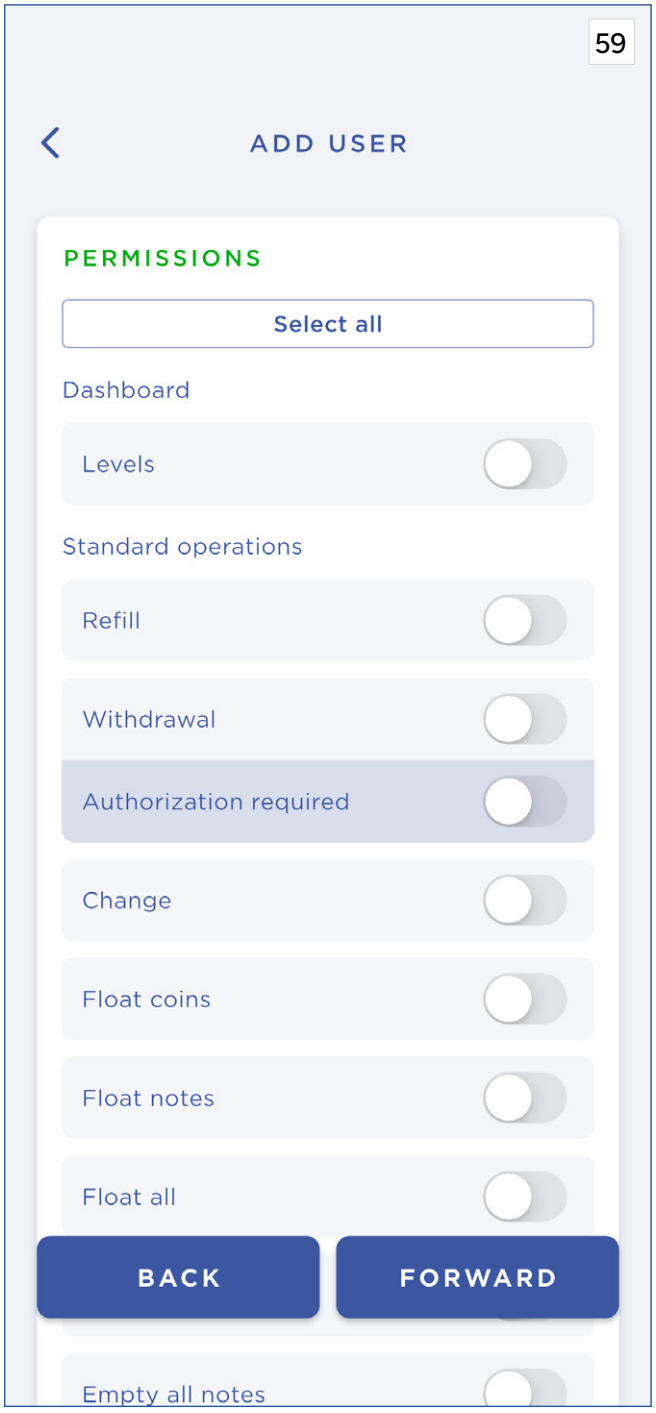


Note: The permissions assigned to a user on the web interface are also valid on the touchscreen display menu.

It is also possible to assign specific permissions to each user (Fig. 59).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


MANDATORY REASONS

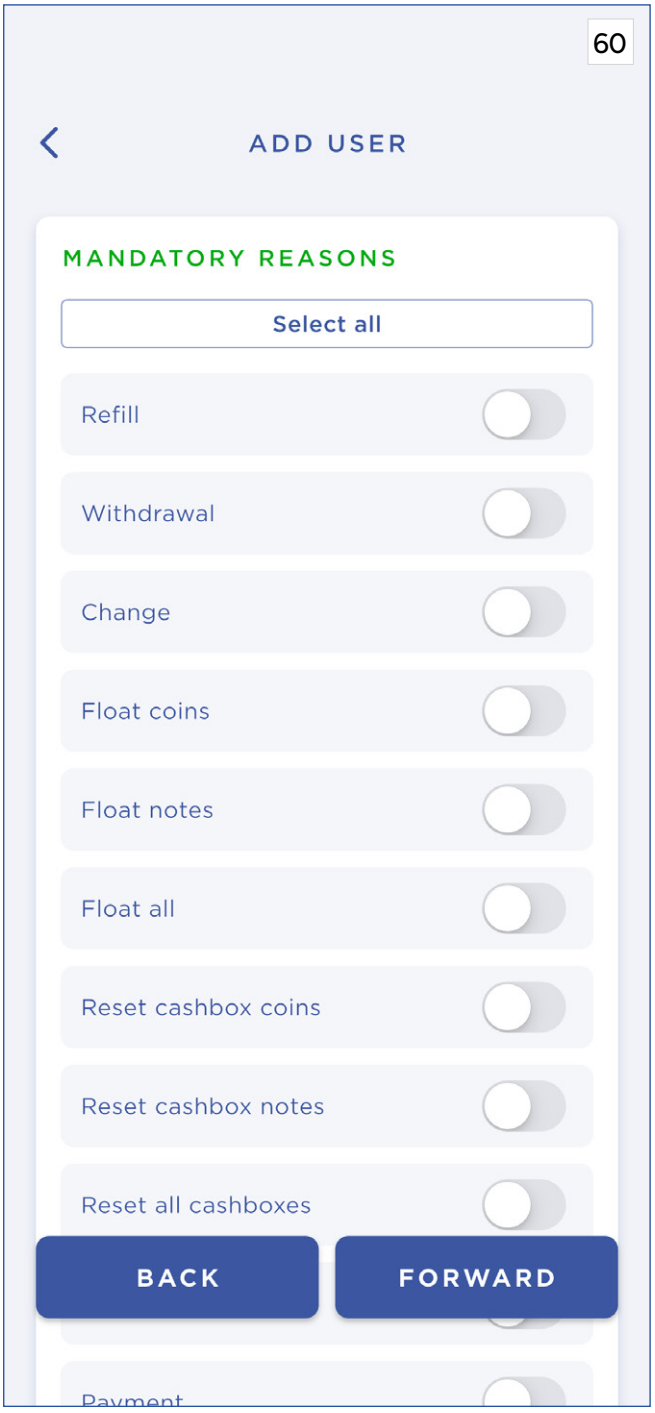

It is also possible to determine mandatory reasons that the user must enter in order to launch certain operations (Fig. 60).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

NOTIFICATIONS

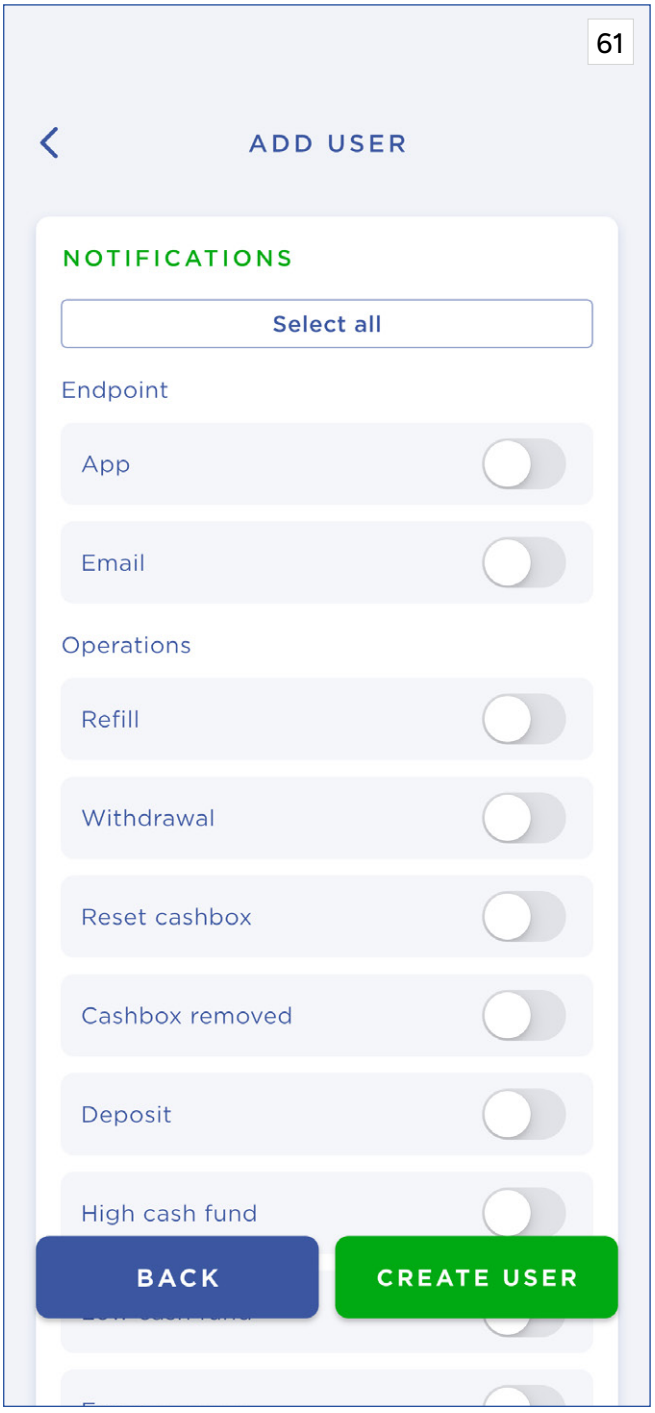


Each operator can receive notifications on their e-mail by setting the operations for which they wish to be notified (Fig. 61).

Notifications can also be managed via the MyCashmatic mobile app.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

CHANGE PASSWORD

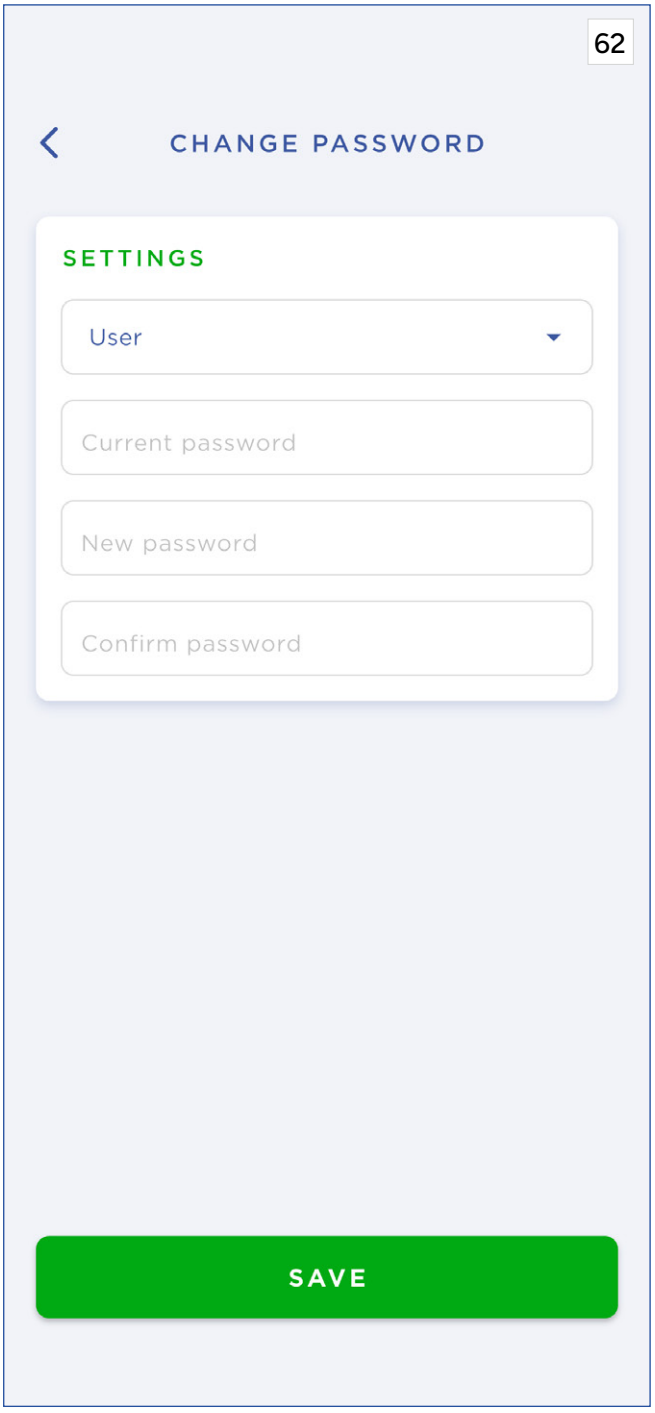


To change your password, click on the **"Manage Users"**, **"Change Password"** menu items, enter your current password and then enter the new password twice, then click **"Forward"** (Fig. 62).


If you have the necessary permissions, you can also change another user's password.

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

10. UPDATE

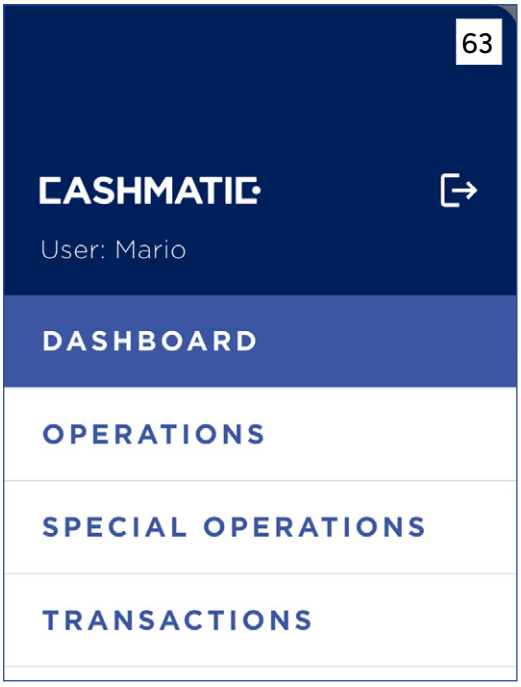


To update the web management panel, click on the “Update” menu item.
The update may be software or firmware.
If available, it is always advisable to download it.
Click on “Check” to check for updates (Fig. 64).
If the device has found available updates, you can download them using the “Download” button.

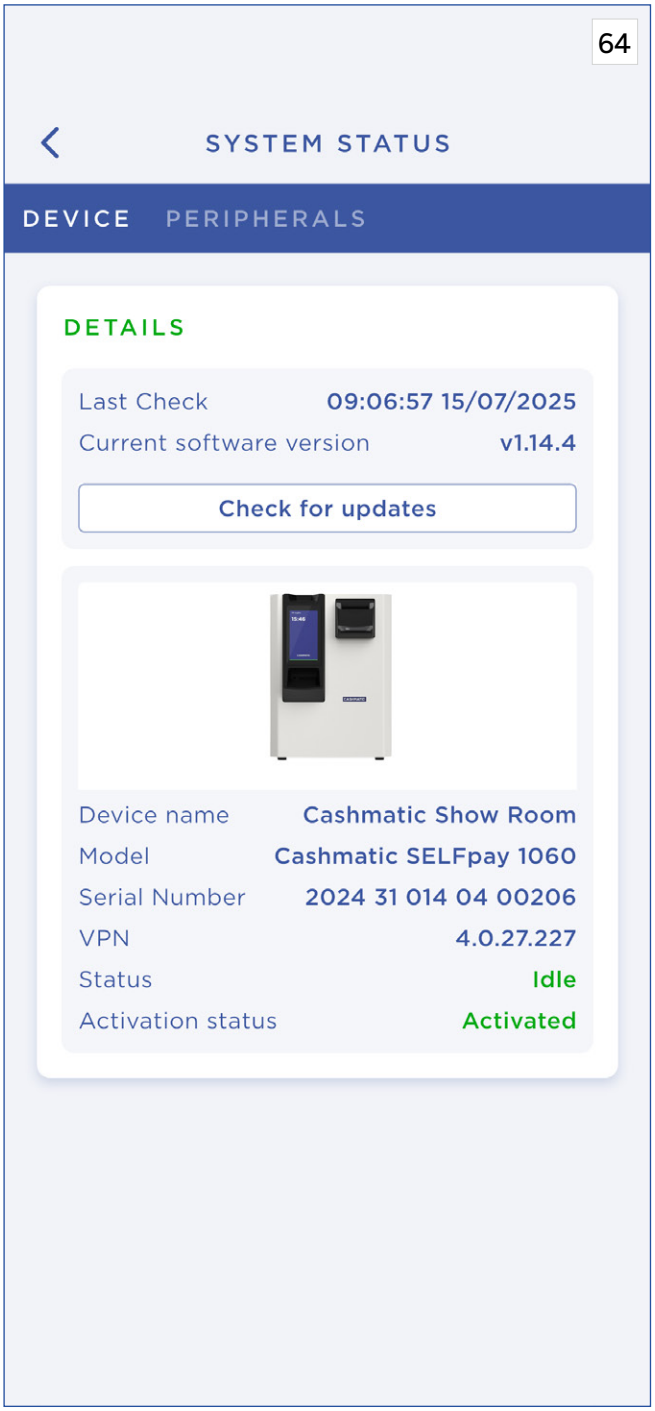

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it


11. DEVICE INFO

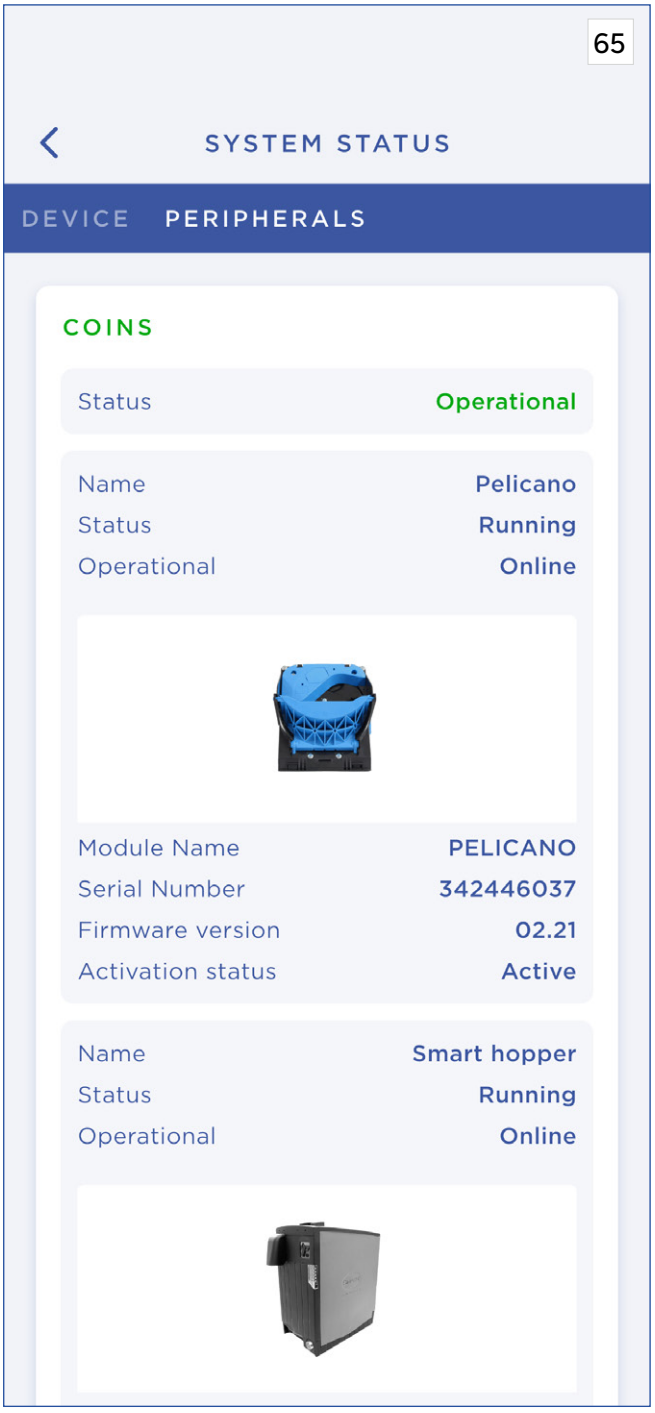

To view information about the device, click on the “Info” menu item. This screen also allows you to view the status of the components (Fig. 65).

Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

12. ACCOUNT DISCONNECTION

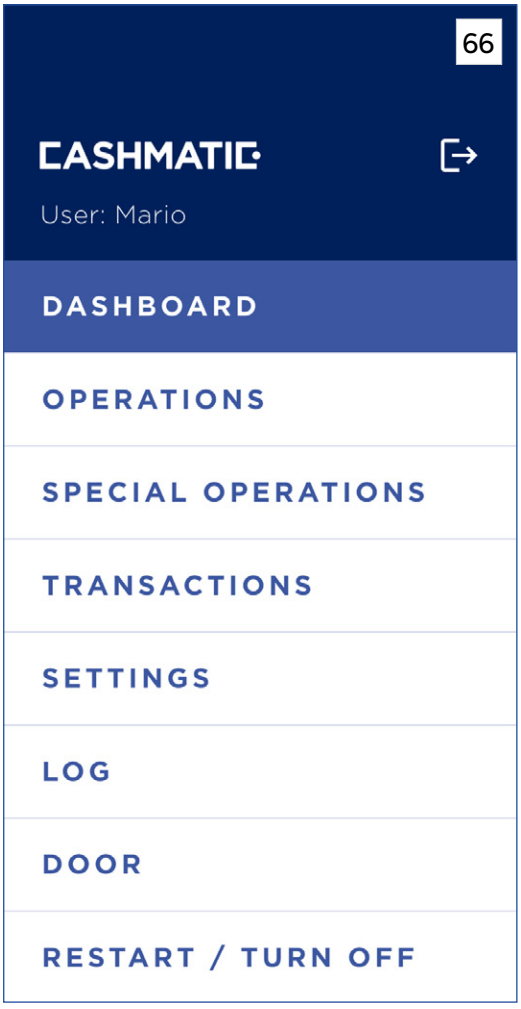



To disconnect an account from the web server, click on the “Exit” menu icon (Fig. 67) and the account will automatically disconnect.


Tel. +39 0541 17.96.791 | Fax. +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | cashmatic.it

13. LANGUAGE

The language used by the app is the one set on the device from which it is opened.

Tel. +39 0541 17.96.791 | **Fax.** +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | **cashmatic.it**

14. TURN OFF

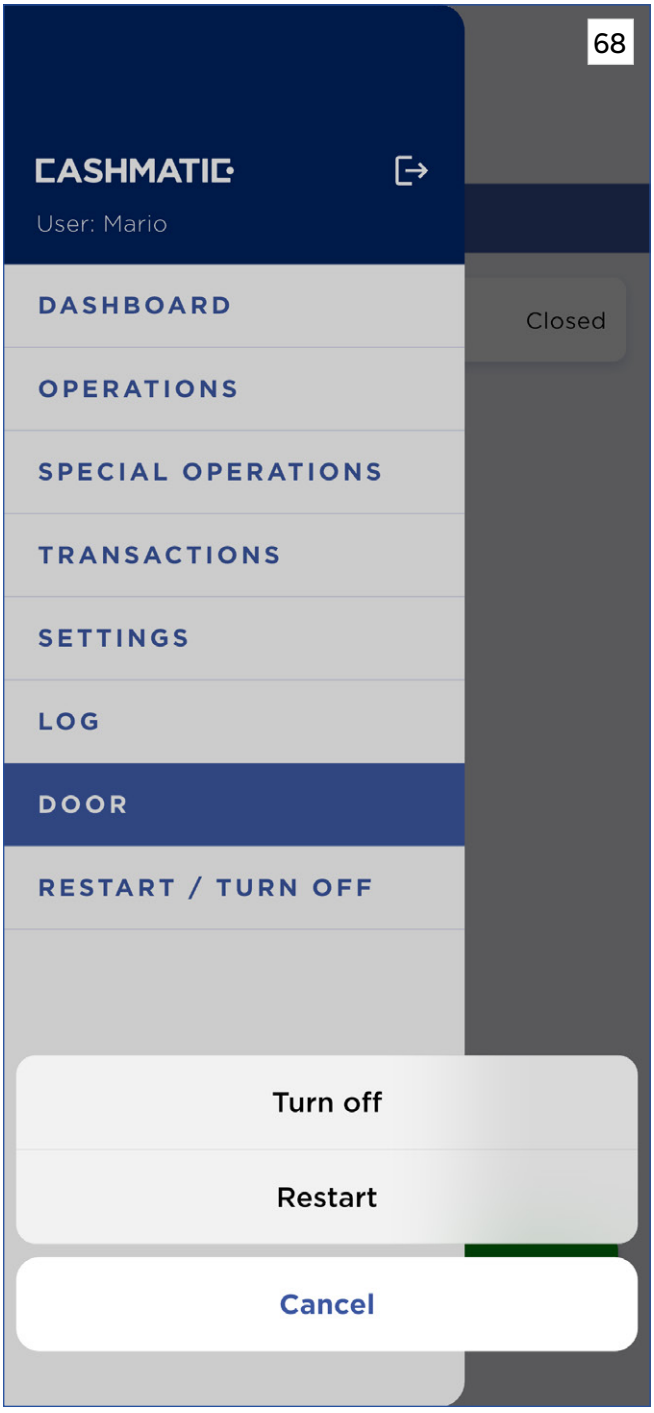

Note: To turn off the machine correctly, do not press the ON/OFF switch without first shutting down the software.

To turn off the automatic drawer, click on the "Turn off" menu item.
You can also restart the device (Fig. 68).

Tel. +39 0541 17.96.791 | **Fax.** +39 0541 17.94.301 Via Fondo Ausa, 28 — 47891 — Dogana (RSM) info@cashmatic.it | **cashmatic.it**