


NEXUSLifts

MANUAL INSTALLATION

[DISPLAY]

Serial LCD-L Display

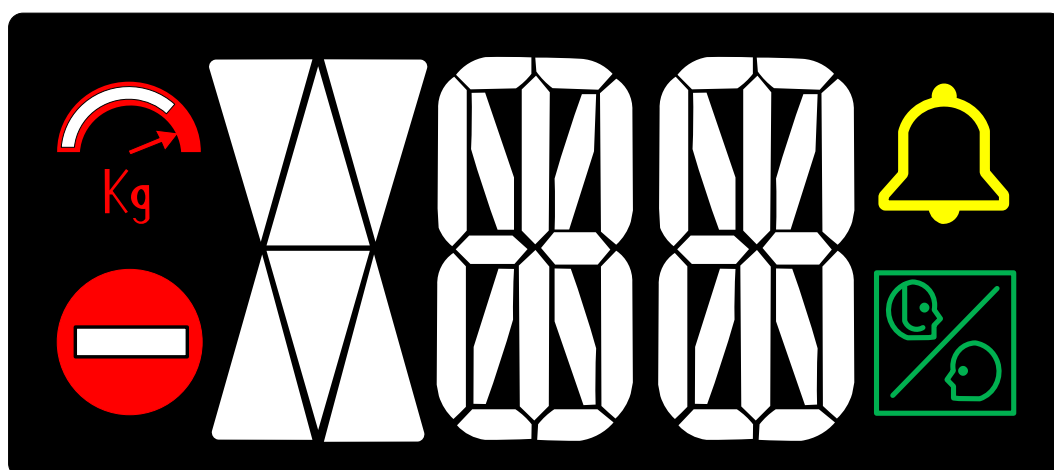

Item Number
LCD_L_SER

Language
ENGLISH


Document Revision
Rev. 1.0

Date
30/08/2026

TECHNICAL DATA

Viewable area	109.2x48 mm
Graphics	LCD, black background, white digits
Operating Temperature	0°C ÷ 60°C
Alarms	Out of service, overload, alarm in progress, alarm received
Power supply	12÷24 VDC ±10%
Consumption	Max 120mA
Inputs	25 digital inputs 1 emergency input 2 optoisolated inputs, alarm sent and received
Operating modes	SERIAL NEXBUS

PINOUT

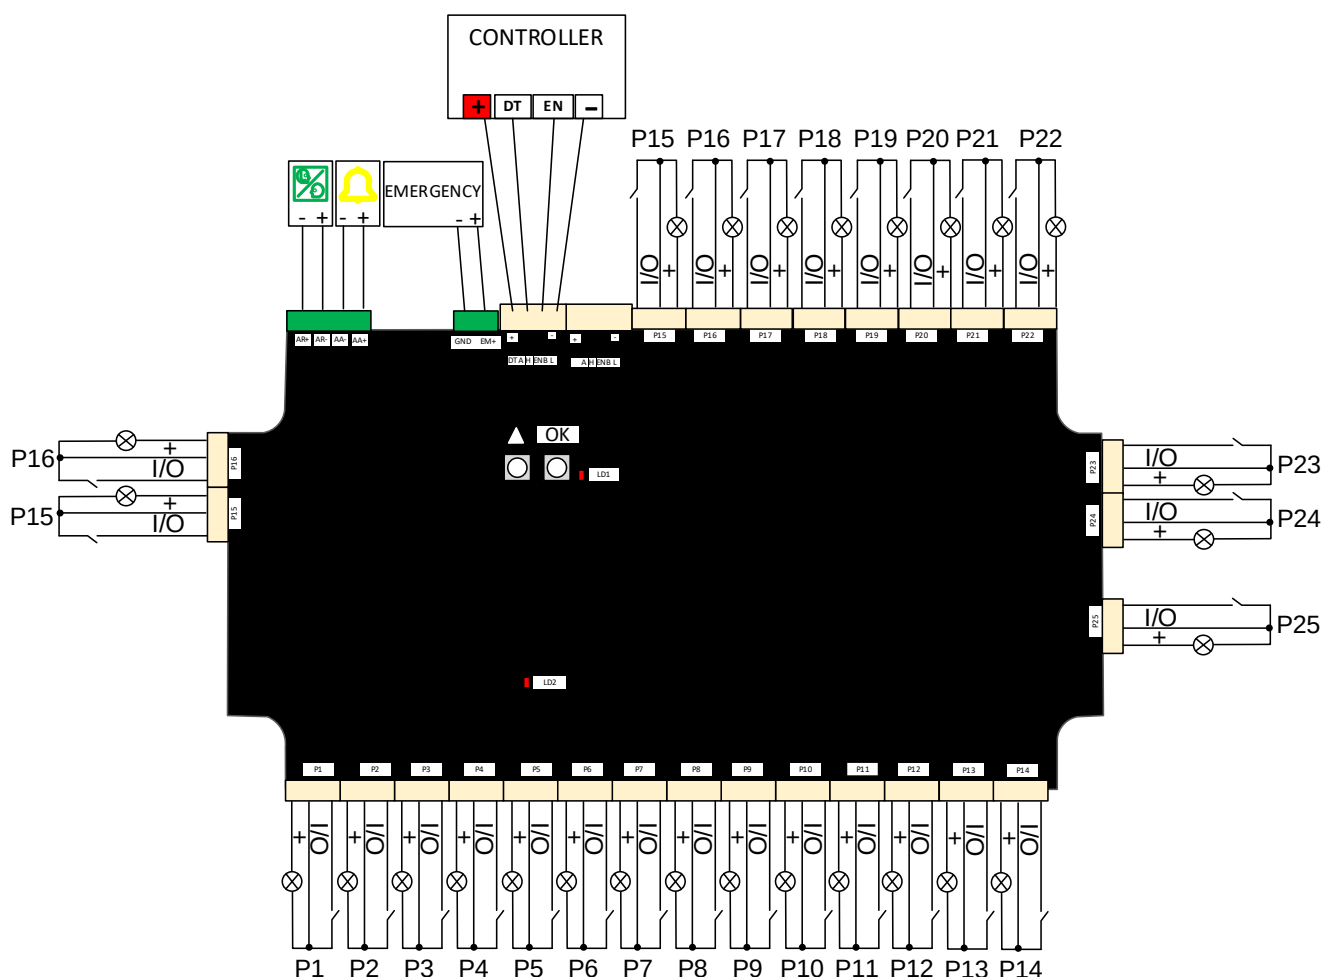

MENU


Programming buttons:

OK: To enter the menu (press >0.5 s)


▲: change menu/value

Menu	Description	Range	Default
FL	Floor address for the management of arrows of the next direction 0=lowest floor; 1= second floor... (arrows only to the programmed floor) 56=car (arrows on all floors)	0÷56	56


DISPLAY SIZE

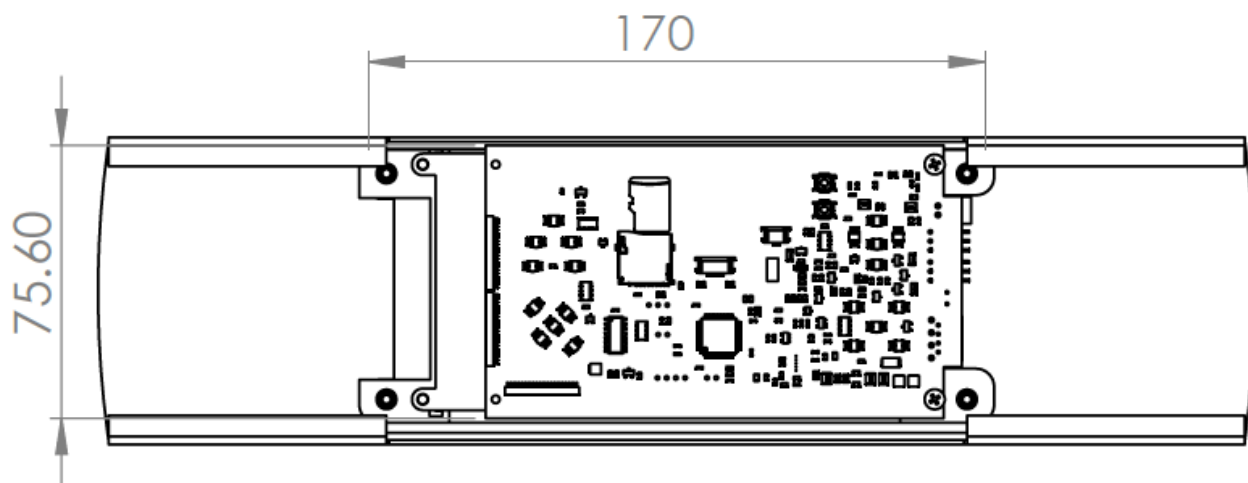

Cutout

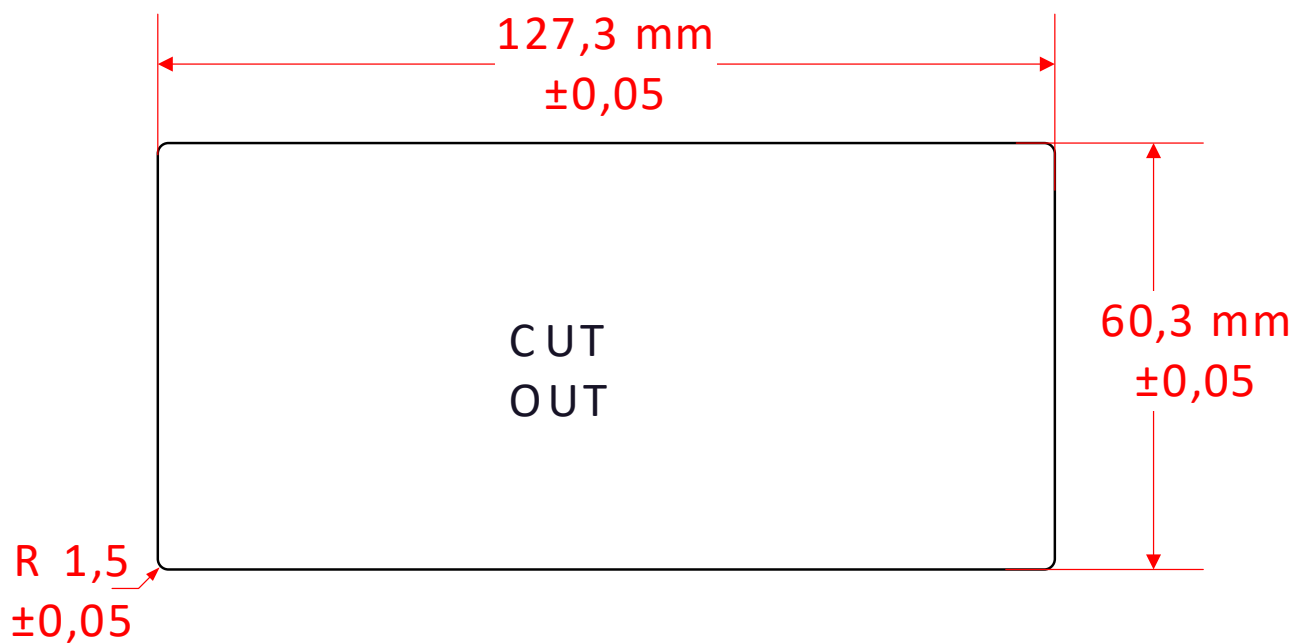


2mm PLATE MOUNTING

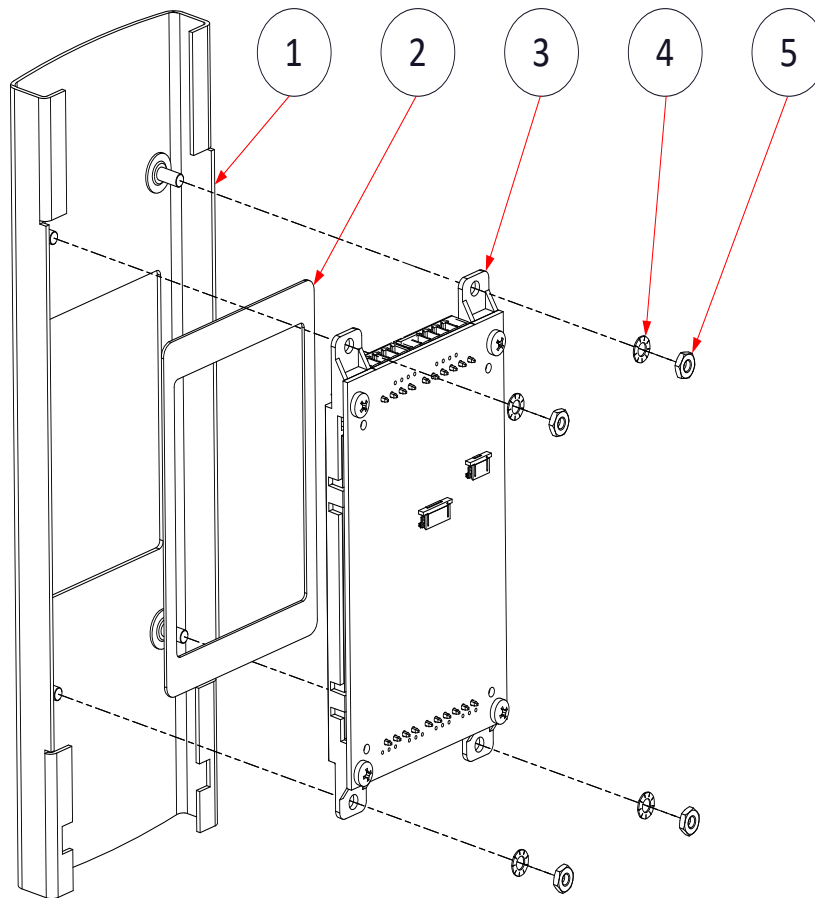


- Insert the spacer (2) onto the display (3);
- Insert the display (3+2) onto the plate (1);
- Insert the washers (4) and secure it with the 4 nuts (5).

PEM POSITION

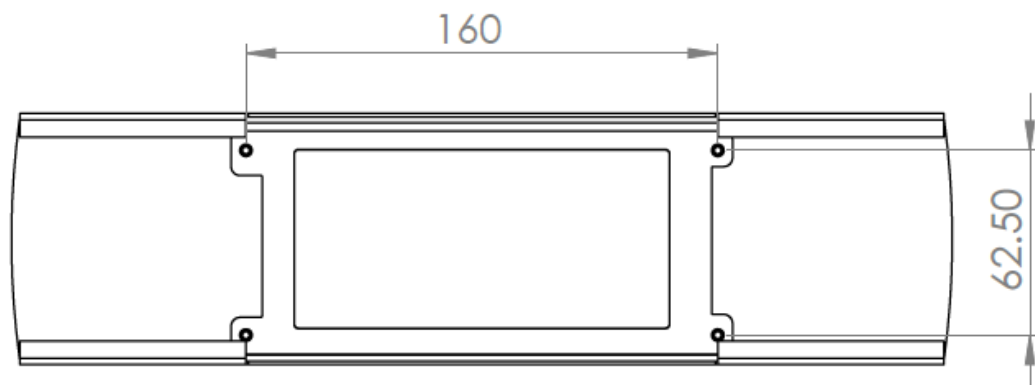

1.2mm PLATE MOUNTING

Bracket with double-sided adhesive (0.8 mm)

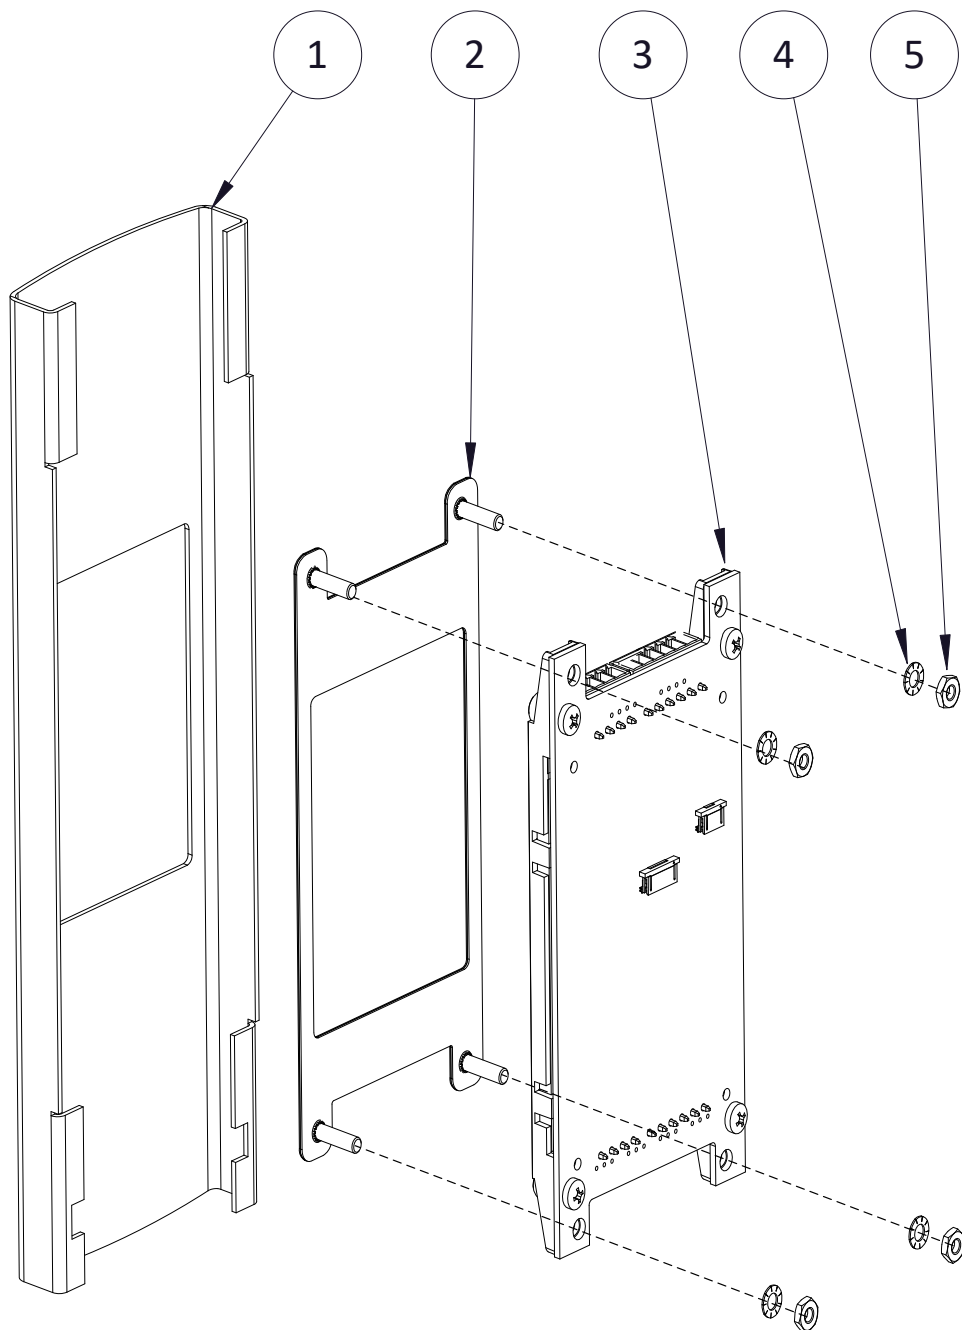

Fix the fixing bracket (2) on the plate (1) using the double-sided adhesive.
Insert the display (3) onto the bracket (2), insert the washers (4) and secure it with the 4 nuts (5)

***NEXUS**Lifts*

via Breda, 52 Civitanova Marche (MC)

Italy

info@nexus-lifts.com

p.IVA 02178670432

nexus-lifts.com