


NEXUSLifts

MANUAL INSTALLATION

[DISPLAY]

Parallel LCD-S Display

FW 0.7

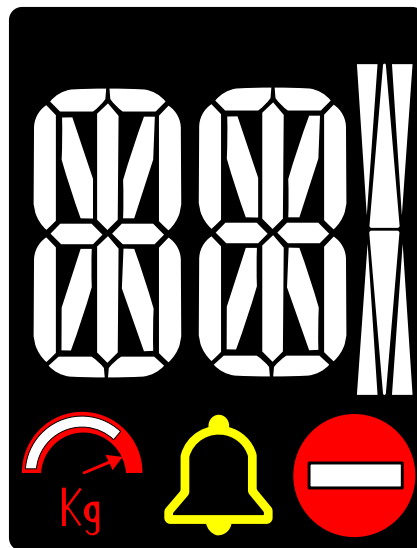

Item Number
LCD_S_SER

Document Revision
Rev. 1.1


Language
ENGLISH

Date
30/08/2026

TECHNICAL DATA

Viewable area	50.3x65.3 mm
Graphics	LCD, black background, white digits
Operating Temperature	0°C ÷ 60°C
Alarms	Out of service, overload, alarm in progress
Power supply	12÷24 VDC ±10%
Consumption	Max 120mA
Inputs	4 Input/output (minispox 3 pins)

PINOUT

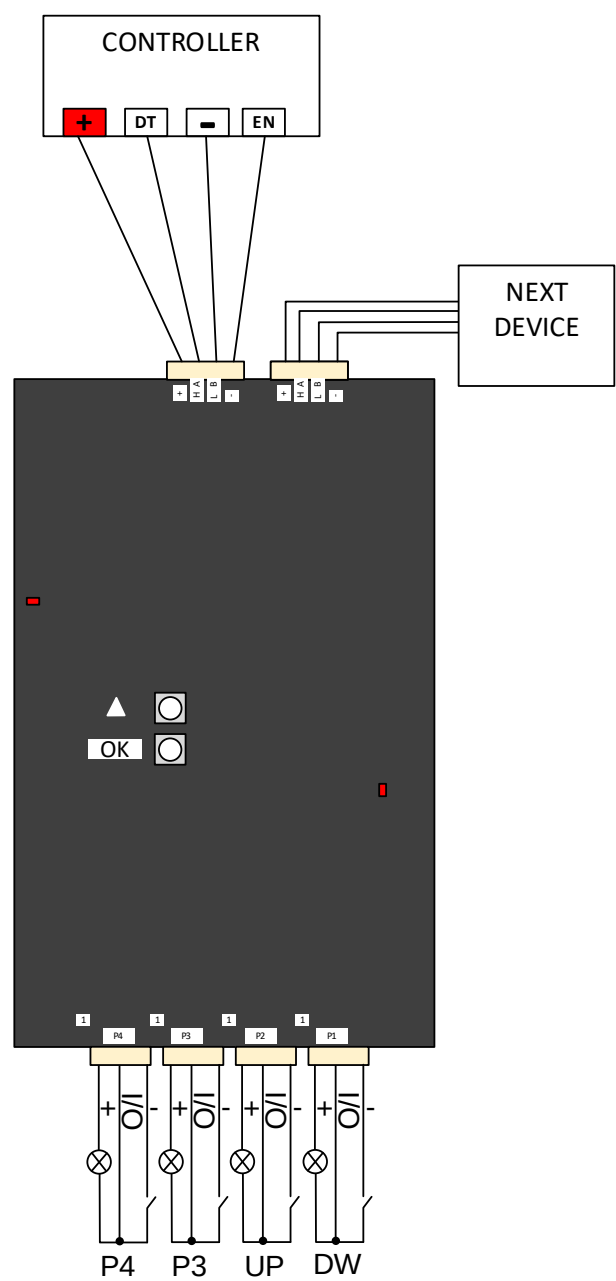

MENU


Programming buttons:

OK: To enter the menu (press >0.5 s)

▲: change menu/value

Menu	Description	Range	Default
FL	Floor address for the management of arrows of the next direction 0=lowest floor; 1= second floor... (arrows only to the programmed floor) 56=car (arrows on all floors)	0÷56	56

DISPLAY SIZE

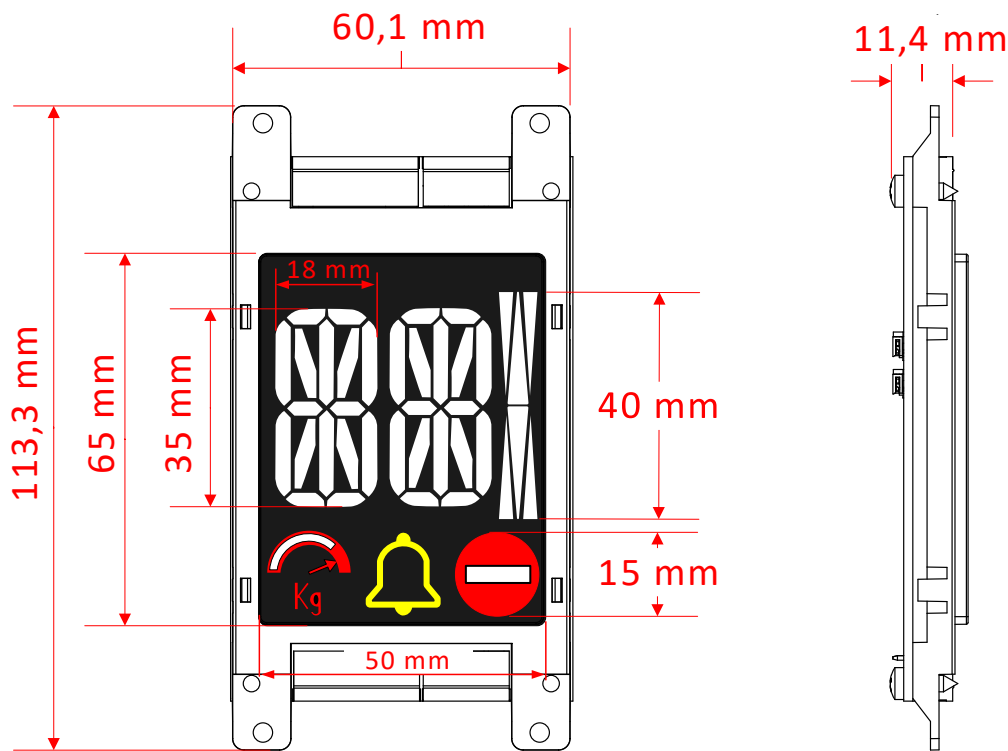

CUTOUT



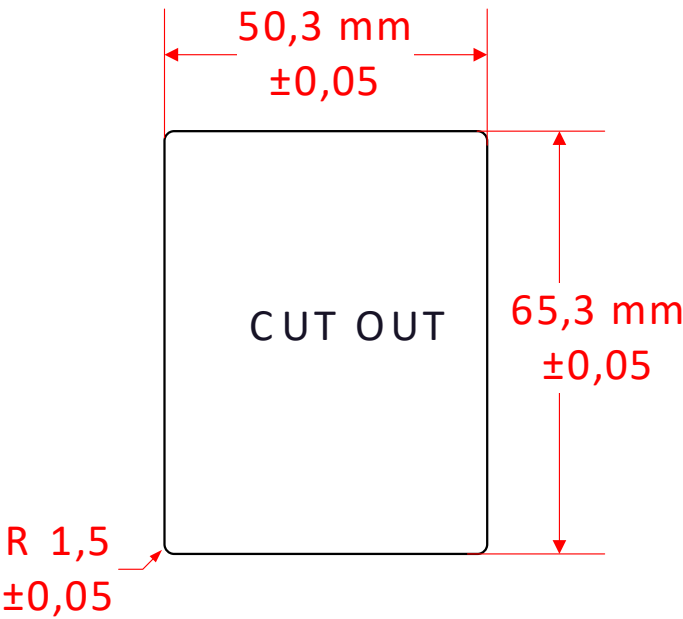


PLATE MOUNTING WITH PEM

1.2mm PLATE 2mm PLATE

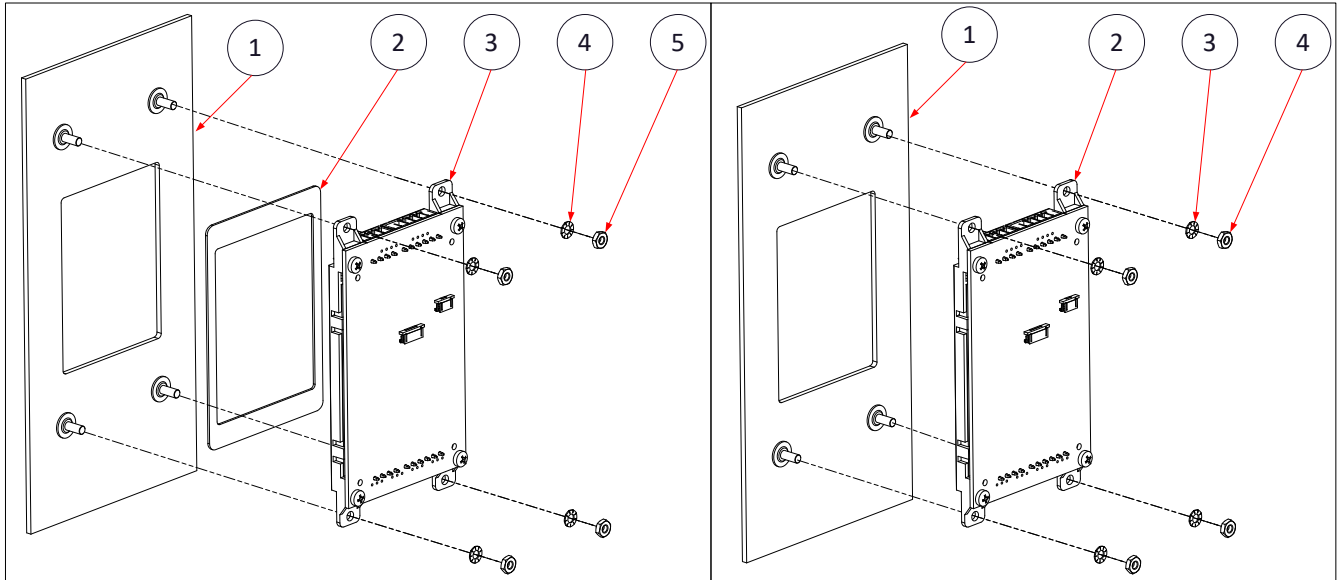


PEM POSITION

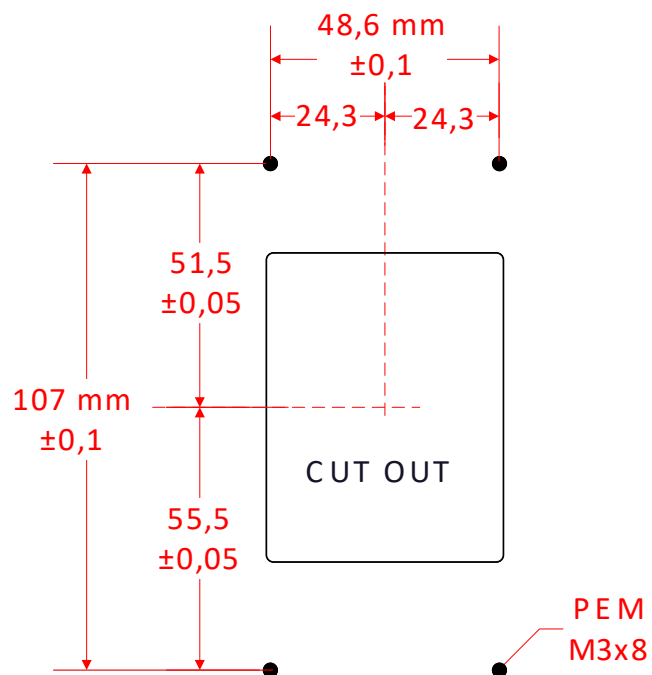

1.2MM PLATE MOUNTING

Bracket with double-sided adhesive (0.8 mm)

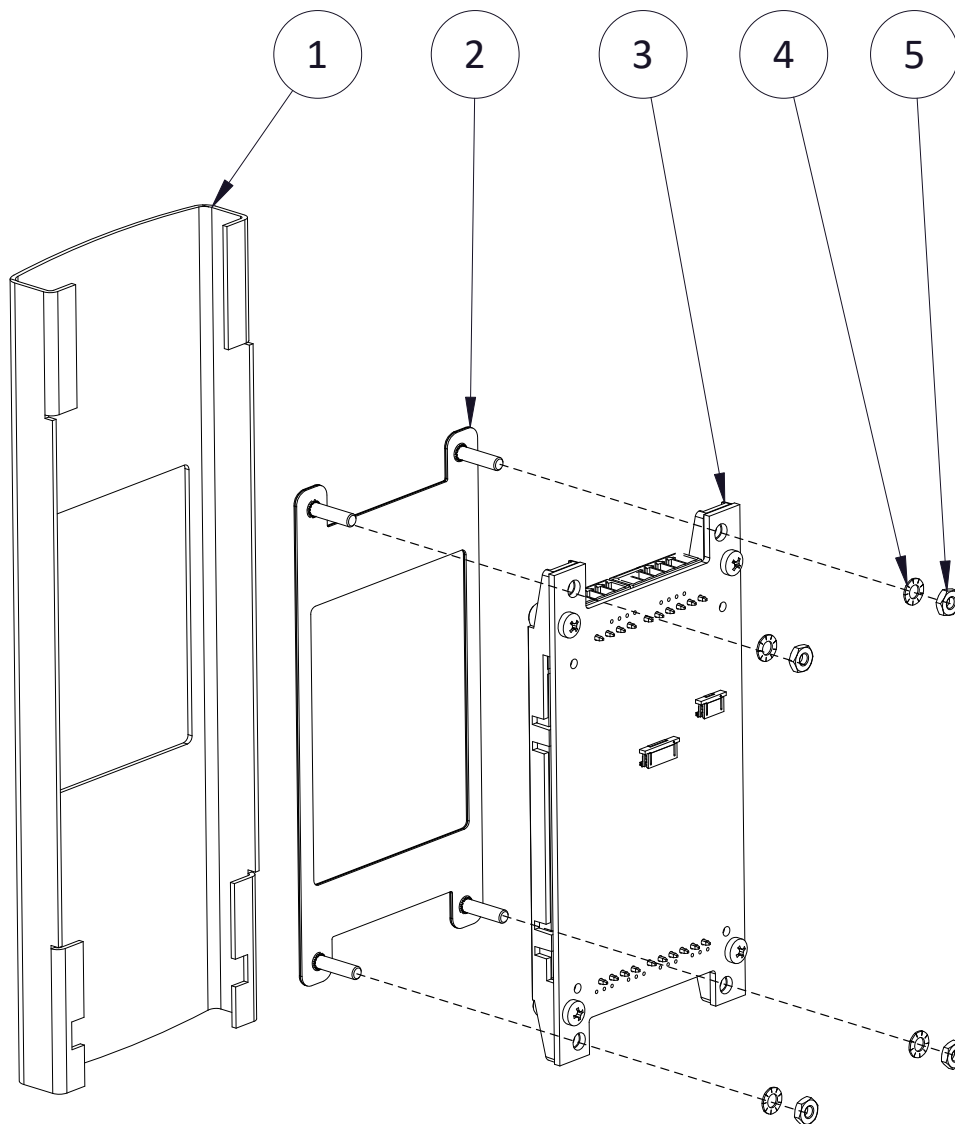

Fix the fixing bracket (2) on the plate (1) using the double-sided adhesive.
Insert the display (3) onto the bracket (2), insert the washers (4) and secure it with the 4 nuts (5)

NEXUSLifts

via Breda, 52 Civitanova Marche (MC)

Italy

info@nexus-lifts.com

p.IVA 02178670432

nexus-lifts.com