LASER TREE



CONTENT

1 LASER MODULE INTRODUCTION

1.1 Parameters . . . . . .

1.2 Outline dimension . . . . . .

1.3 Standard configuration . . . . . .

2 LASER MODULE CONNECTION DESCRIPTION

2.1 PIN Definition . . . . . .

2.2 Driver adapter . . . . . .


2.3 Connection . . . . . .

1. LASER MODULE INTRODU


1.1 Parameters

Optical power:	5W (±1W)
Input:	12V 1.5-2A
Wavelength:	450nm (±10nm)
Focus length:	23mm
PWM modulation:	0/5-12V, 0-5kHz
Fan speed:	10000rpm
Operating temperature:	0-60°C

1.2 Outline dimension (Unit: mm)

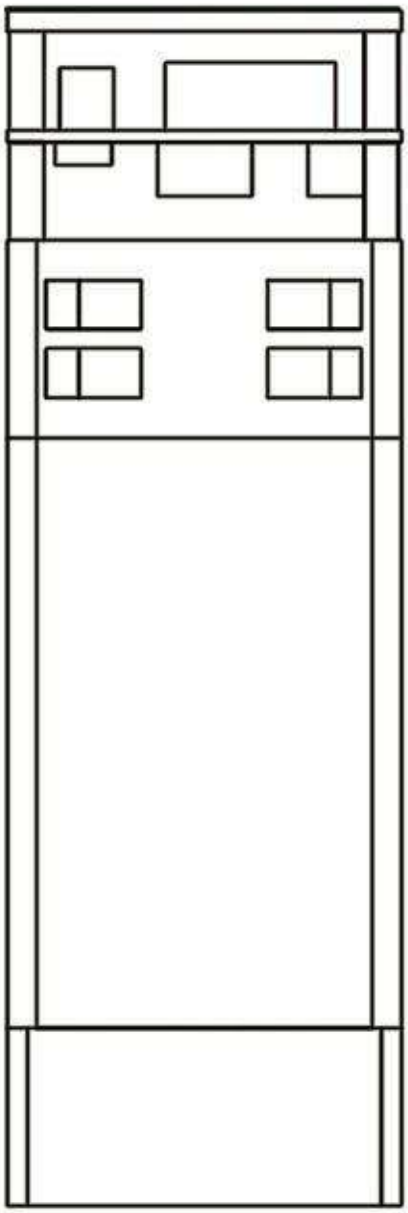



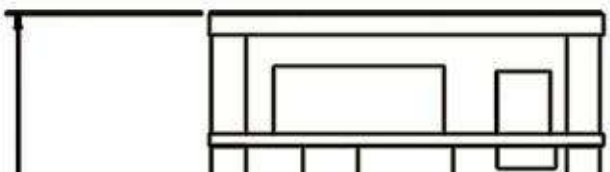


1.3 Standard configuration



2. LASER MODULE CONNECTION D

2.1 PIN Definition


Laser module driver board

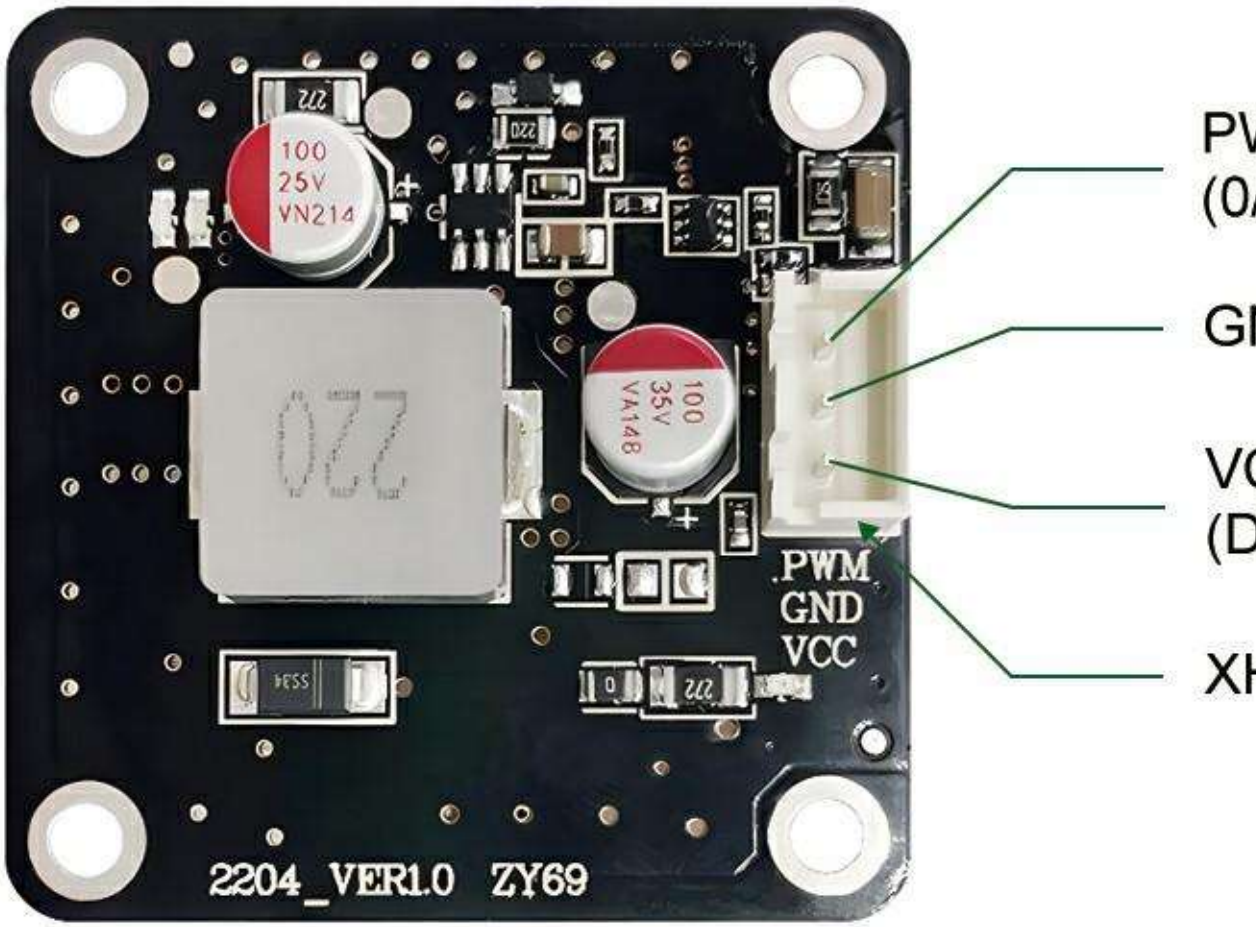

2.2 Driver adapter

Note: This driver adapter DOES NOT come with the laser
details, please refer to **section 2.3 connection.**

Model: P-DA-01

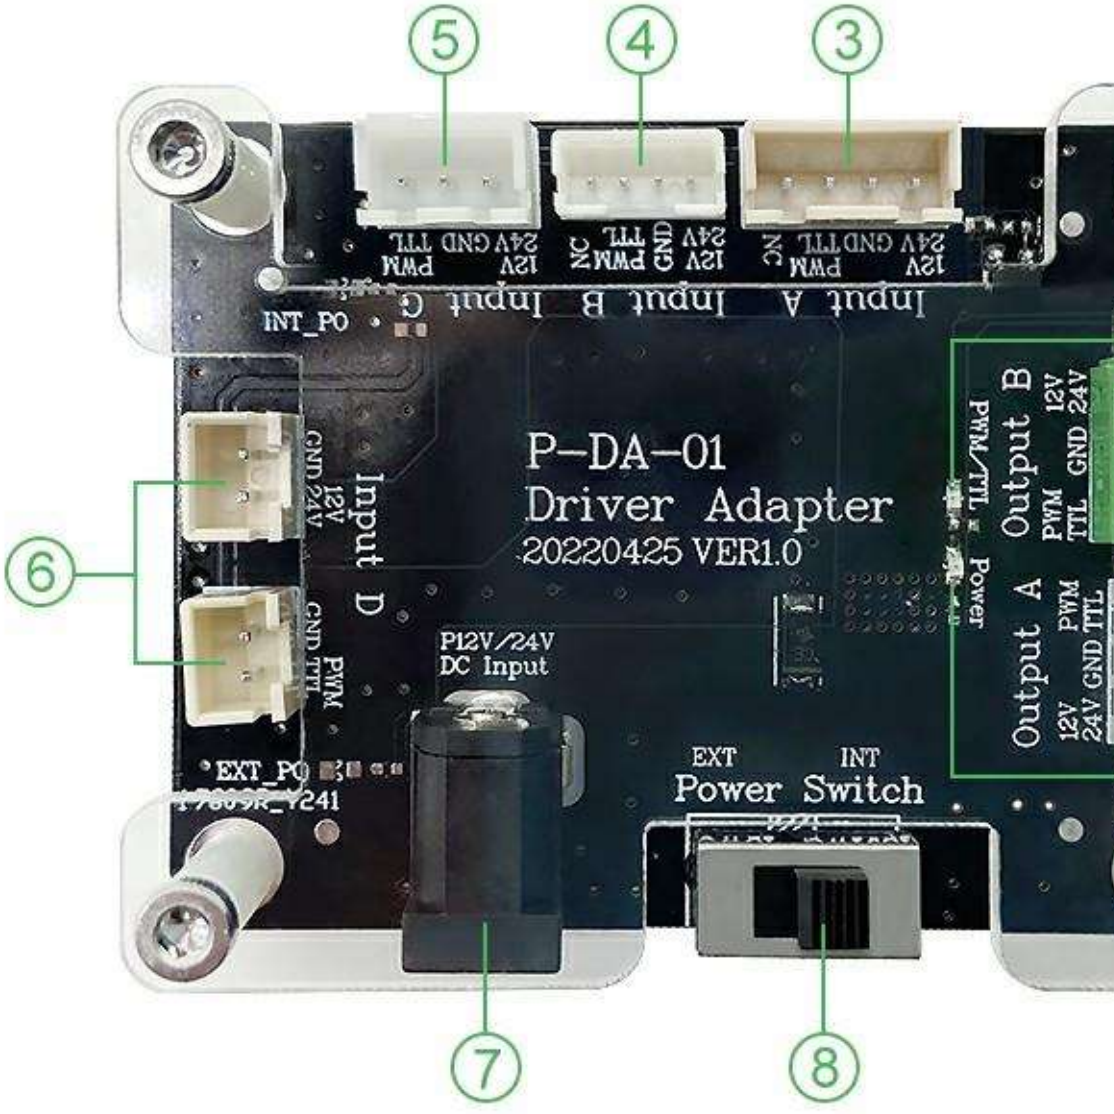

2.3 Connection


Please check whether the laser module is compatible v
machine before connection.

A. Check the voltage parameter of your engraving ma
B. Check the pin definition of the main board on your e

■ “A”&“B”are both compatible.

Connect the laser module to the main board of your engravi

Engraving machine main board

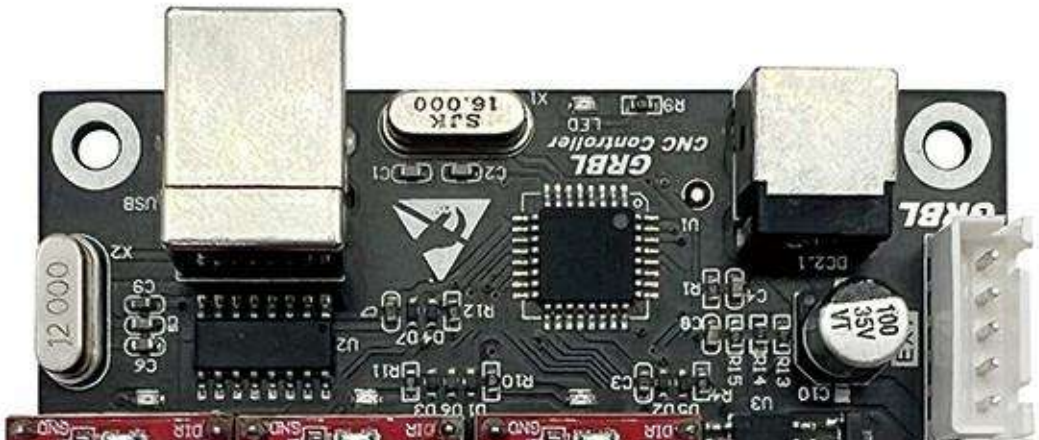

■ Only voltage is not matched.

The voltage parameter of your machine are not matched to t

Machine	Laser Module	Solution
12V	24V	Driver Adapter + 24V
24V	24V	Plug and P

Step1 Connect the cable of your engraving machine to the c connector on P-DA-01.

Step2 Connect the cable of the laser module to the Output A

Step3 Connect the 24V power adapter to the DC Input conne the switch to EXT position and the power is provid adapter.

Driver adapter
P-DA-01




■ Only control board pin definition is not matched.

Situation 1: The definition of connector on the engraving mach
pin-to-pin.

Please rearrange the wire sequence of the cable to make eac
with the pin definition on the main board.

Engraving machine main board

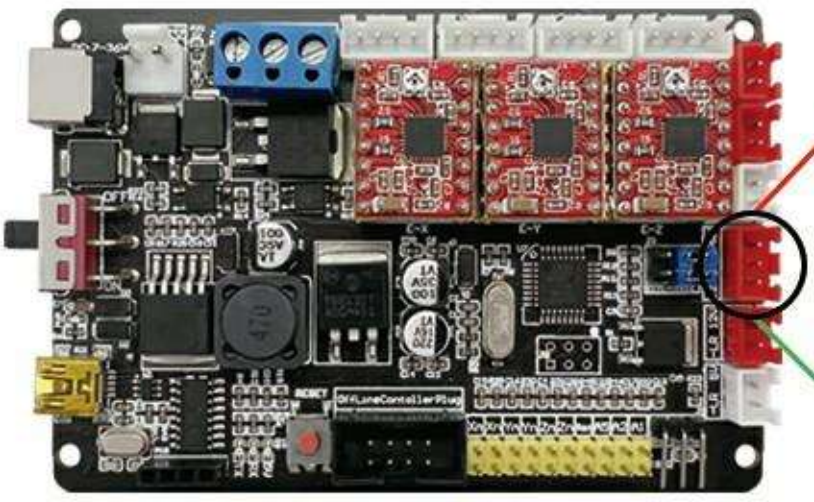



"Red: Pow
c



Situation 2: Please use P-DA-01 if the main board of your eng
3pin, such as 2pin.

Laser Module	Machine	Solution
3PIN	2PIN	Driver Ada
	Other pins	Driver Ada

Step1 Connect the cable of the your engraving machine to the
input connector on P-DA-01.

Step2 Connect the cable of the laser module to the Output A
P-DA-01.


3. LASER MODULE REFERENCE

3.1 For cutting

The focal length of the LT-40W-F23 laser modu

When cutting, you only need to make the focus lo
than the surface of materials.

Reference settings for cutti

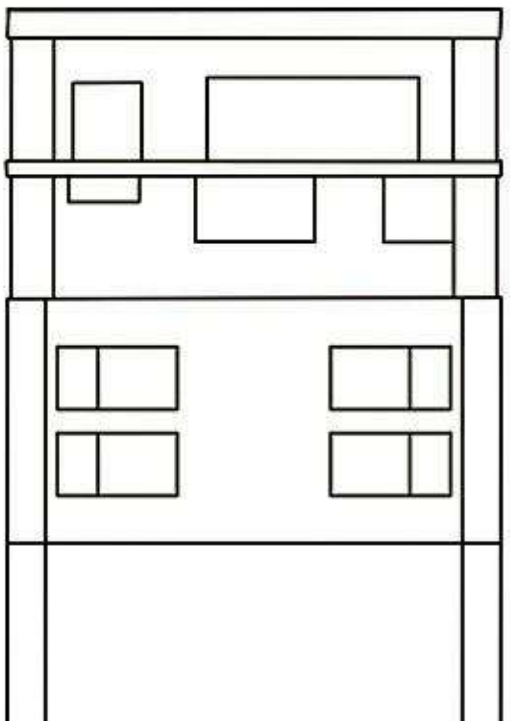


Focus fixing plate using reference	
Material Thinkness	Plate thickness

Fo
to

3.2 For engraving

When engraving, please ensure that the focus is
engraving material surface.

Reference settings for engra

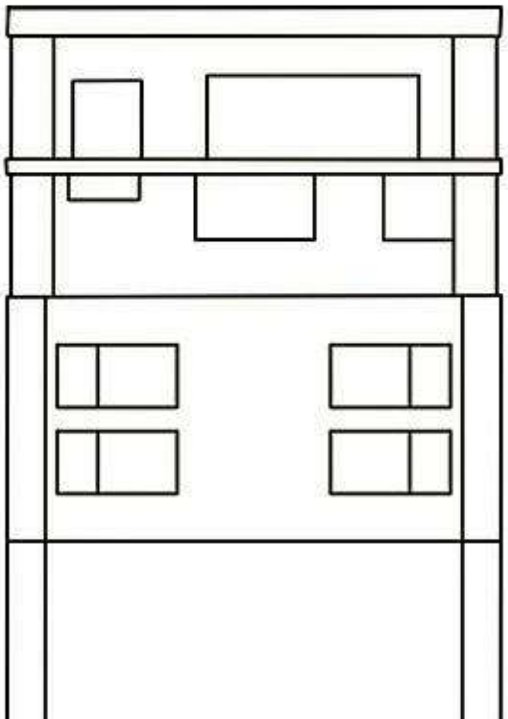

For e
engr

4. PRECAUTIONS AND MAINT

4.1 Precautions



Please wear laser goggles to protect your eyes when
module.



This laser module doesn't support hot plug, hot plug m
to the laser module.

4.2 Maintenance



When the laser module is not used for a long time, plea
lens is not polluted by dust.


Fingerprint



LASER TR

Enjoy pleasure of D