Honeywell | Intelligent Life Care



Systevo Care View IP

GB Installation Instruction

89470J6.GB0
06.2021

Intended purpose
This products may only be used for the applications outlined in the catalogue and in the technical description, and only in conjunction with the recommended and approved external devices and components.
This documentation contains registered and unregistered trademarks. All trademarks are the property of the respective owners. The use of this documentation does not grant you a licence or any other right to use the name, logo and/or the label.
This documentation is subject to the copyright of Honeywell. The content must not be copied, published, modified, distributed, transmitted, sold or changed without the express prior written permission of Honeywell.
The information contained in this documentation is provided without warranty.

Safety-related user information
This manual includes all information required for the proper use of the products described.
In order to ensure correct and safe operation of the product, all guidelines concerning its transport, storage, installation, and mounting must be observed. This includes the necessary care in operating the product.
The term 'qualified personnel' in the context of the safety information included in this manual or on the product itself designates:

- project engineers who are familiar with the safety guidelines concerning patient call systems incl. associated components.
- trained service engineers who are familiar with the components of patient call systems and the information on their operation as included in this manual.
- trained installation or service personnel with the necessary qualification for carrying out repairs on patient call systems incl. associated components or who are authorised to operate, ground and label electrical circuits and/or safety equipment/systems.

Symbols
The following information is given in the interest of personal safety and to prevent damage to the product described in this manual and all equipment connected to it.
Safety information and warnings for the prevention of dangers putting at risk the life and health of user and maintenance personnel as well as causing damage to the equipment itself are marked by the following pictograms. Within the context of this manual, these pictograms have the following meanings:



Warning - Designates risks for man and/or machine. Non-compliance will create risks to man and/or machine. The level of risk is indicated by the word of warning.



Note - Important information on a topic or a procedure and other important information!



Standards and guidelines - Observe configuration and commissioning information in accordance to the national and local requirements.

Demontage



In accordance with Directive 2002/96/EG (WEEE), after being dismantled, electrical and electronic equipment is taken back by the manufacturer for proper disposal.

© Honeywell International Inc./technical changes reserved!
This documentation is subject to copyright law and, as per Sections 16 and 17 of the German Copyright Act (UrhG), is neither permitted to be copied nor disseminated in any other way. Any infringement as per Section 106 of the UrhG may result in legal action.

Contents

1 General / Application 4
1.1 Other applicable documentation 4
1.2 List of abbreviations 5
1.3 Requirements 5
2 Connection variants – duty room 6
2.1 Connections to the call system in the table console version 7
2.2 Connections to the call system for wall mounting 9
2.3 Wiring diagrams / drawings for table console version 10
2.4 Wiring diagrams / drawings for wall mounting 11
2.5 Connections of corridor lamps in conjunction with the SCVIP wall unit 12
3 Mounting 13
3.1 Dimensions 14
3.2 Table stand with fitted holder for the handset 15
3.3 Attachment to a wall or VESA support 15
3.4 Disassembling from table stand 16
3.5 Mount the holder for the handset 18
3.6 Installation on a wall 19
3.7 Mounting on installation socket (e.g. tunnel socket) 20
3.8 Inserting the connection board into the bottom housing panel 21
3.9 Installation of the Touch terminal and connection board 23
3.10 Removing the Touch terminal from the bottom housing panel / connection board 26
4 Installation 27
4.1 Table console version 27
4.2 Wall mounting 27
5 Electrical connection 28
5.1 Connection unit 79CM307Z4 29
5.2 Connections 31
6 Operating and status messages 32
7 Commissioning 32
8 Accessories 33
9 Technical specifications 34

1 General / Application

The Honeywell Systevo Care View IP central hub of information, hereinafter **SCVIP**, is a modern communication device for care institutions that is fitted with a touch screen and is intended for use in duty rooms. SCVIP is connected to the call system using a wall connection unit and can also be connected to additional services via a network.
SCVIP is delivered as a pre-assembled tabletop device. If the factory-assembled table stand is disassembled, the SCVIP can be mounted on a standard VESA holder (75 x 75 mm) or on a wall with a holder for the handset that is available as an accessory.

Additional and current information

The described features, specifications and product related information in this manual correspond to the date of issue (refer to date on the front page) and may differ due to modifications and/or amended Standards and Regulations of the System design, Installation and Commissioning.

Updated information and declaration of conformity are available for comparison on the www.ackermann-clino.com homepage.

Safety information:

- All mounting and installation work must be carried out only when the device is disconnected from the power. The connector plug of the connection line between the Touch terminal and the connection unit must only be connected / disconnected if the connection unit power is switched off, otherwise the connection unit / Touch terminal may be damaged.
- In accordance with DIN VDE 0834-1, connecting cables (including cable laying) must be able to withstand a test voltage of 4 KV. The voltage supply of the devices can be fed in the same cable. Observe the appropriate wire cross-sections! The 89734AH / 89734AJ system cable is recommend for the corridor data bus cabling.
- For 24 V DC power supply from the ward, a standard network connection without PoE must be used.
- When connecting to the corridor and audio data bus while simultaneously using the wired network interface, safe isolation as per standard IEC EN 60601-1 (3rd Edt.) must be ensured. LAN Isolator 89731C is recommended for galvanic isolation of the network interface.

1.1 Other applicable documentation

Name	Part No.
Technical information Systevo Call Ackermann with IP devices	89470F8.GB0
Commissioning Instruction for Systevo Touch IP	89470F9.GB0
Installation Instruction Systevo Call Ackermann	89470A5.GB0
Installation Instruction Systevo Call Ackermann Systevo Control IP	89470A6.GB0
Installation Instruction Systevo bed unit	89470K1.GB0
Installation Instruction Systevo Electronic Module SEM & SEM+ / Corridor Lamp SCL	89470K2.GB0
Quick Guide Systevo Touch IP-Care View	89470J7.GB0
Quick Guide for Systevo Touch IP	89470J8.GB0
Commissioning Instruction for Systevo Touch IP and Systevo Care View IP	89470J9.GB0

1.2 List of abbreviations

Abbreviation	Name	Abbreviation	Name
SCVIP	Systevo Care View IP	RLWC	Call lamp bathroom WC
ABUS	Audio bus	ATWC	Cancel button bathroom/WC call
DBUS	Data bus	AL	Presence lamp
I/O Port	Input / output	STIP	Systevo Touch IP terminal
ID	Identification on the data bus	SCL	Systevo corridor lamp
PoE	Power over Ethernet	SCU	Systevo Care Unit
Eth	Ethernet	SBU-DM2+	Systevo bed unit DM2+
RT	Call button	SBU-D2+	Systevo bed unit D2+
RL	Call lamp	SBU-M5	Systevo bed unit M5
BL	Reassurance lamp	SBU-M2	Systevo bed unit M2
RTWC	Call button bathroom WC		

1.3 Requirements

- **System software:**

  In conjunction with the Systevo electronics module SEM+, the SCVIP replaces the previous duty room equipment (duty room interface [DZI] with Master Station [KSA]) in system environments with system software from V5.xx up.

  In order to use all current and future functions, the system software must be updated to version V12.xx or above. The following overview reflects the relationship between system software versions and the possible range of functions at the time of printing. The system software is subject to continuous further development; the software must always be updated to the latest version so that all available functions can be used. The latest software and up-to-date documentation can be found in the protected download area at www.Ackermann-clino.de.

System software	Functions
From V12.01	• **Hybrid mode**: Connection to call system via LAN* • **IP mode**: Connection to call system via LAN • Pre-defined **I/O profiles** (1+2)
From V12.02	• **Hybrid mode**: Connection to call system via LAN* • **IP mode**: Connection to call system via LAN • Pre-defined I/O profiles (1+2+3)
From V12.03	• **Data bus mode**: Connection to call system via ZBUS
From V12.04	• **IP+ mode**: Connection to call system via ZBUS & LAN

  *An additional e-module is required to connect to the nurse call.

- **LAN:**

  A LAN network is set up according to the Ethernet standard (see documentation “Systevo Call Ackermann with IP devices" 89470F8.GB0).

2 Connection variants – duty room

Connecting to the call system
Systevo Care View IP can be connected to the call system in various ways. The flexibility of connection enables the use of standardised networks as well as the use of existing call system transmission path.

Corridor lamps
Depending on the selected data connection to the call system, visual signals are given to indicate presence or calls to the duty room, either via the higher-level electronics module or a corridor lamp. In connection with the wall unit, existing passive corridor lamps with three chambers (red, green and yellow) and the new generation of corridor lamps with four chambers can be connected via the data bus (DBUS).

Options for connecting to the call system

No.	Data connection Call system	Audio Intercom	Visual signals	Additional services via network *1	System software version V5.xx	System software version V11.xx	System software version V12.xx
1	DBUS / ZBUS with SEM+	ABUS	SEM+	---	Yes	Yes	Yes
2	DBUS / ZBUS with SEM+	ABUS / LAN	SEM+	LAN / WIFI	---	---	Yes
3	LAN (hybrid mode) EM99 / EM34xx / DZI 99 / ZT 99	LAN	EM99 / EM34xx / DZI 99 / ZT 99	LAN / WIFI	---	---	Yes
4	LAN (IP mode)	LAN	ZSL passive / SCL passive / SCL DBUS	LAN	---	---	Yes
5*2	ZBUS direct	ABUS	ZSL passive / SCL passive / SCL DBUS	---	Yes	Yes	Yes
6*2	ZBUS direct	ABUS	ZSL passive / SCL passive / SCL DBUS	LAN / WIFI	---	---	Yes


*1 Additional services via network:
Additional services from V12.xx
WIFI will be available in a future version of SCVIP.

*2 Only for wall mounting of SCVIP


The numbering **(no. 1–6)** from the table – Connection options – helps to follow the following connection diagrams.

2.1 Connections to the call system in the table console version

No. 1 ➔ Data and audio connection via SEM+ with Systevo Care Unit (SCU) at the door

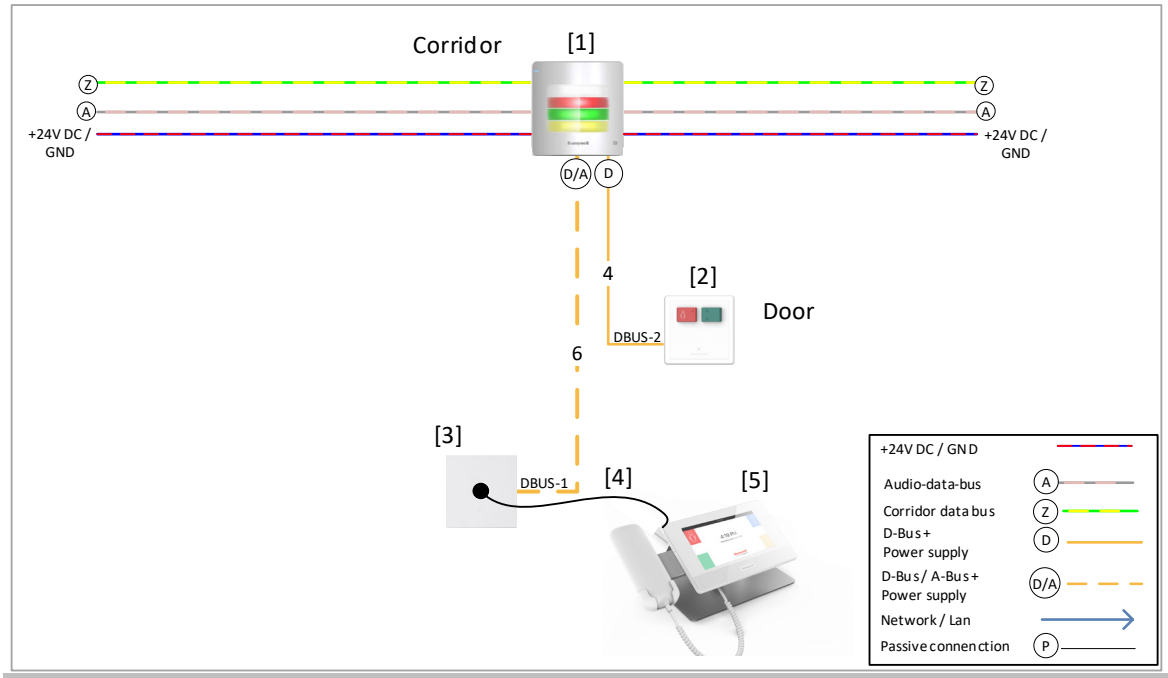


No. 2 ➔ Data and audio connection via SEM+ with Systevo Care Unit (SCU) at the door, additional services via LAN / WIFI

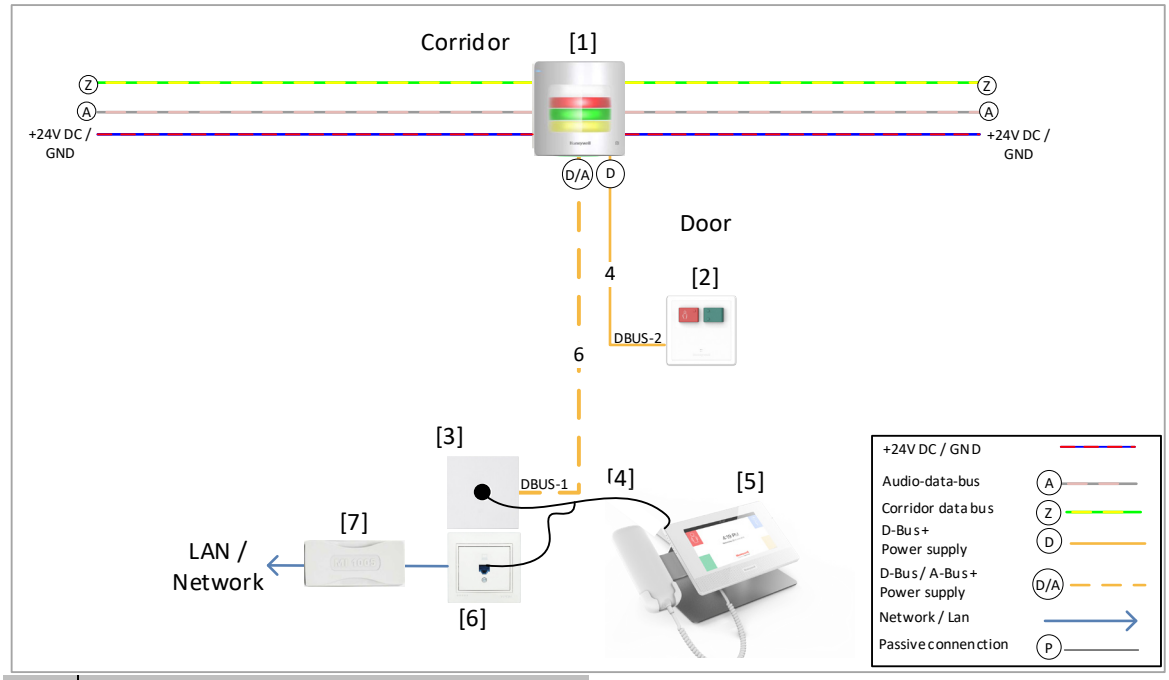

No.	Name
[1]	SEM + Systevo electronics module
[2]	SCU Systevo Care Unit
[3]	SCVIP wall unit
[4]	SCVIP connecting cable
[5]	SCVIP Systevo Care View IP
[6]	Standard data socket
[7]*	LAN Isolator (Part No. 79823D1)


* Recommended for complying with galvanic isolation according to the standard IEC EN 60601-1 (3rd Edt.).

No. 3 ➔ Hybrid, data and audio via LAN, no direct connection to call system, additional services via LAN / WIFI

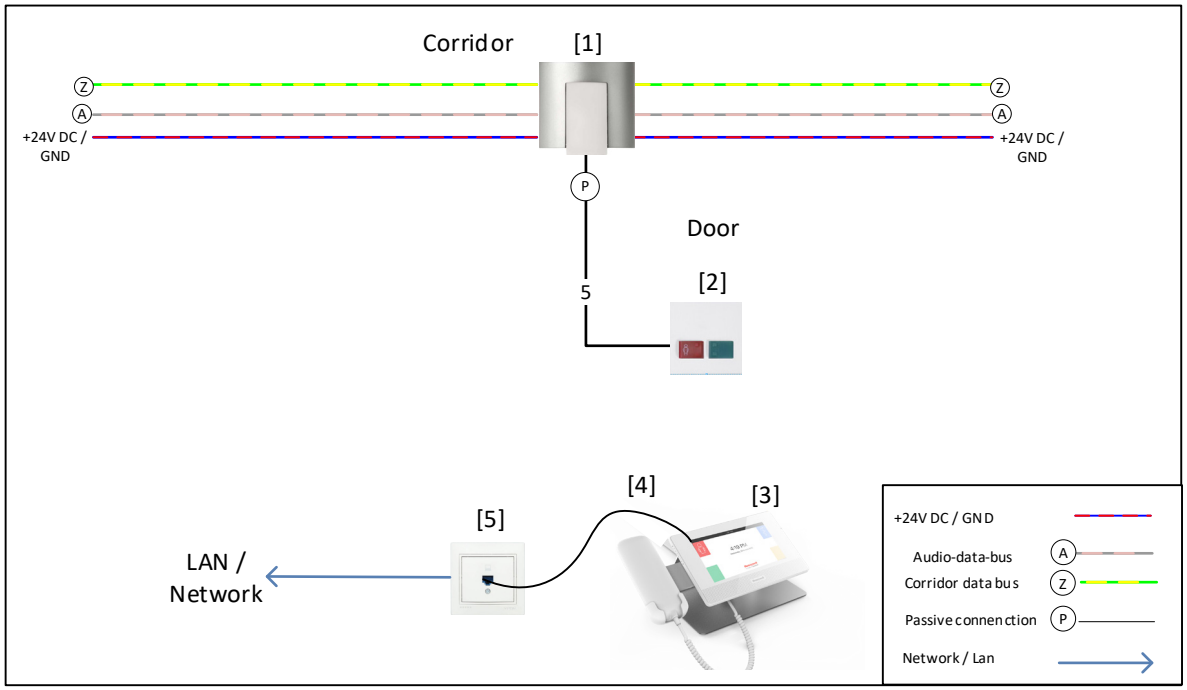

No.	Name
[1]	Systevo e-module, e.g. EM 340
[2]	Call / cancel button (Part No. 73642B3)
[3]	SCVIP Systevo Care View IP
[4]	SCVIP connecting cable
[5]	Standard data socket


No. 4 ➔ LAN direct, additional services via LAN / WIFI

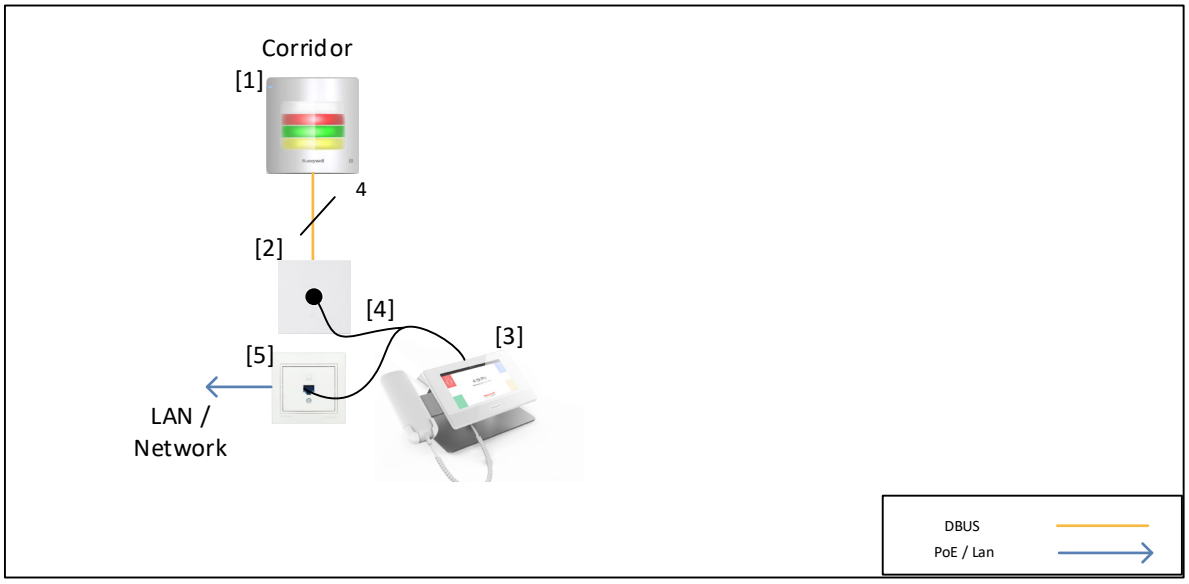

No.	Name
[1]	Active corridor lamp SCL
[2]	SCVIP wall unit
[3]	SCVIP Systevo Care View IP
[4]	SCVIP connecting cable
[5]	Standard data socket


2.2 Connections to the call system for wall mounting

No. 5 ➔ Data and audio connection directly to the corridor and audio data bus (SCVIP wall mounting)

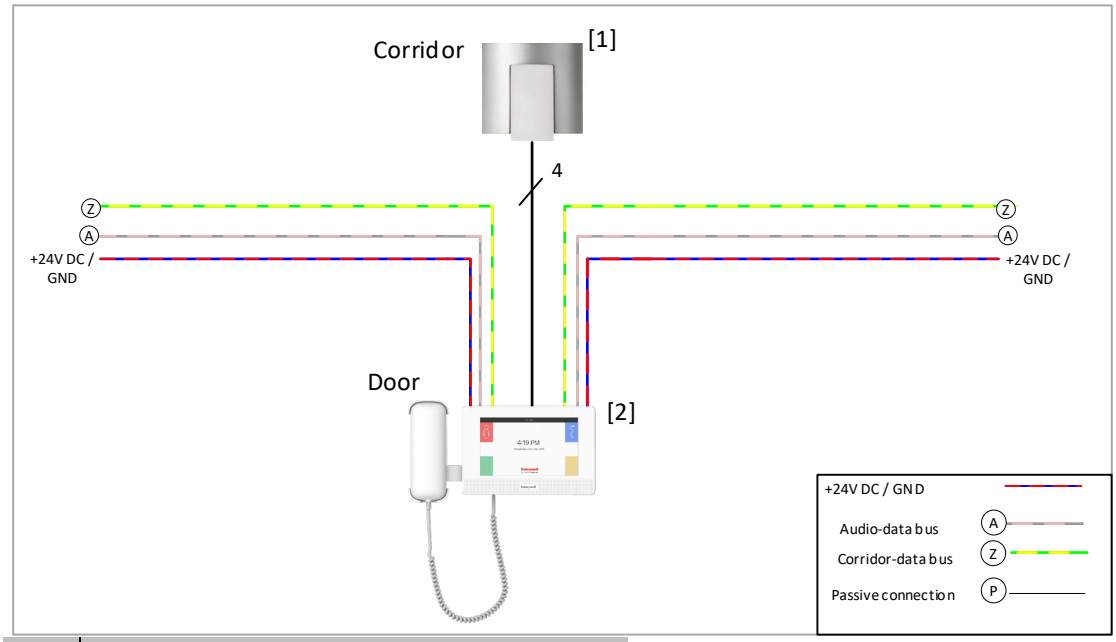

No.	Name
[1]	Passive corridor lamp CL340
[2]	SCVIP Systevo Care View IP

No. 6 ➔ Data and audio connection directly to the corridor and audio data bus, additional services via LAN / WIFI (SCVIP wall mounting)

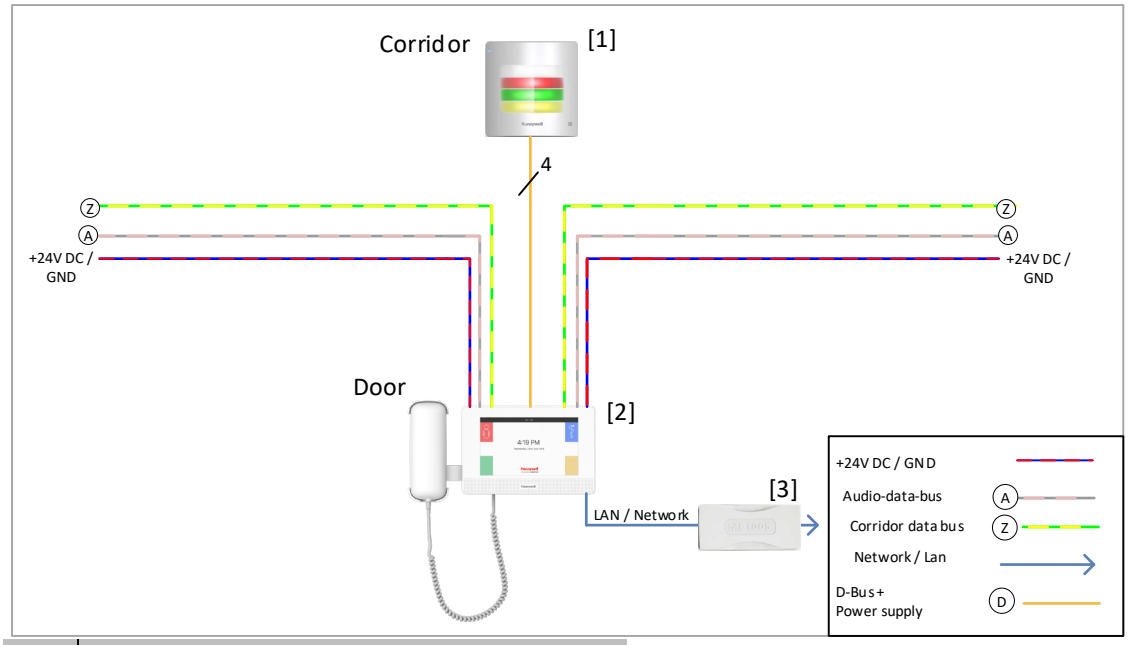


No.	Name
[1]	Active corridor lamp SCL
[2]	SCVIP Systevo Care View IP
[3]*	LAN Isolator (Part No. 79823D1)

* Recommended for complying with galvanic isolation according to the standard IEC EN 60601-1 (3rd Edt.).

2.3 Wiring diagrams / drawings for table console version

No. 1 + 2 ➔ Connection SEM+ to wall unit with Systevo Care Unit (SCU) at the door for SCVIP with table console

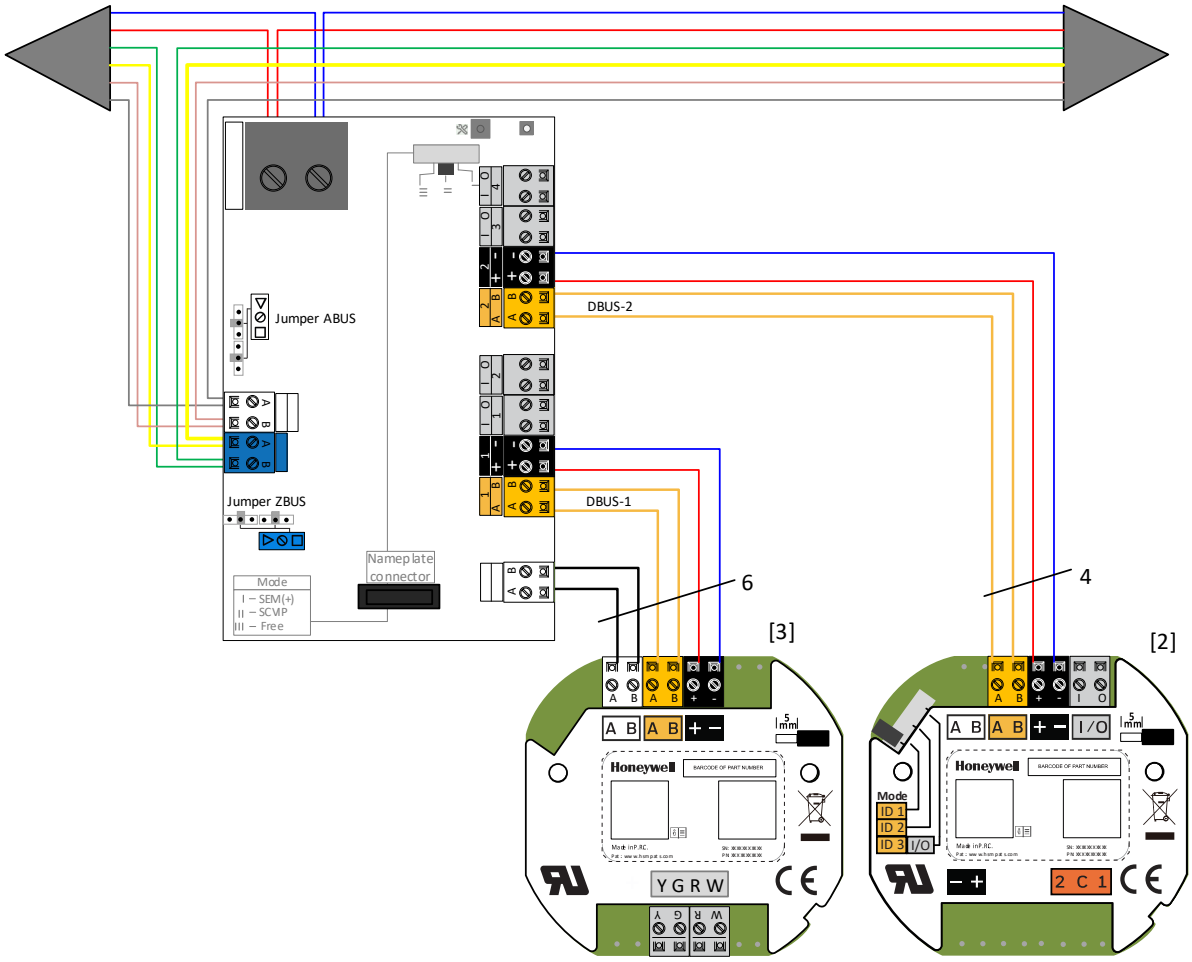


No.	Name
[1]	SEM + Systevo electronics module
[2]	SCU Systevo Care Unit
[3]	SCVIP wall unit

The operating mode must be selected to "Operation in Dbus" when the SCVIP is switched on for the first time.


1. On STIP bootup tap on the top of screen
2. Enter password “963852”
3. Wait for firmware versions of STIP and SCBIP to display on top right corner of screen
4. Then navigate to “Set Operating Mode” menu


2.4 Wiring diagrams / drawings for wall mounting

No. 5 + 6 ➔ Direct connection of the SCVIP to the corridor and audio data bus for SCVIP wall mounting

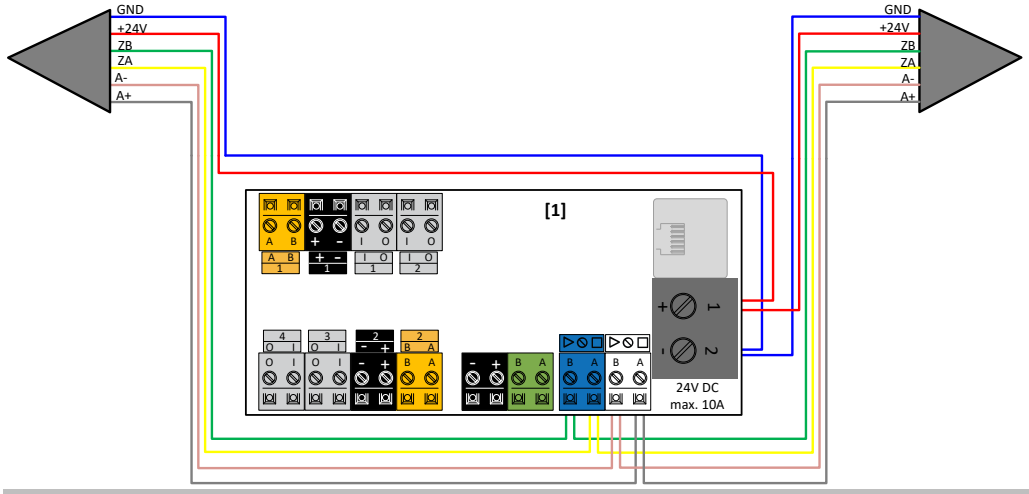



No. 5 + 6 ➔ Passive corridor lamp for connecting the SCVIP to the corridor and audio data bus for SCVIP wall mounting

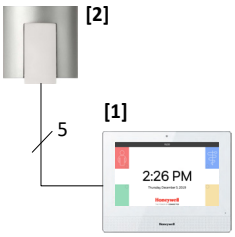

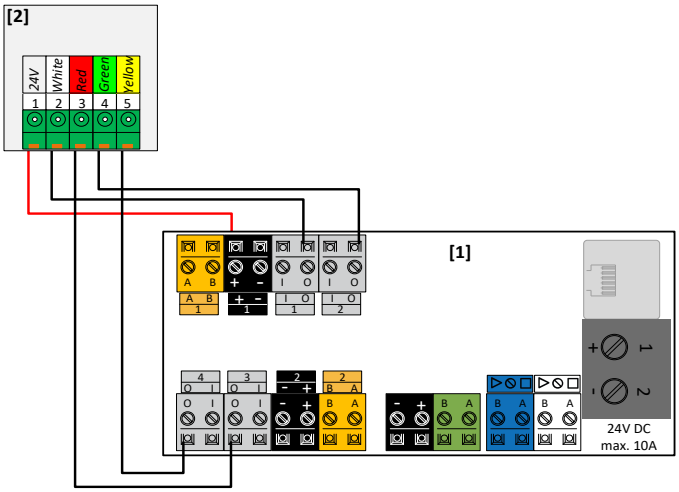

No. 5 + 6 ➔ Corridor lamp SCL on DBUS for connecting the SCVIP to the corridor and audio data bus for SCVIP wall mounting


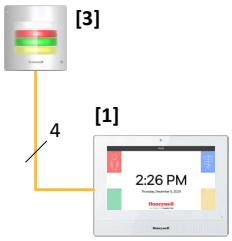


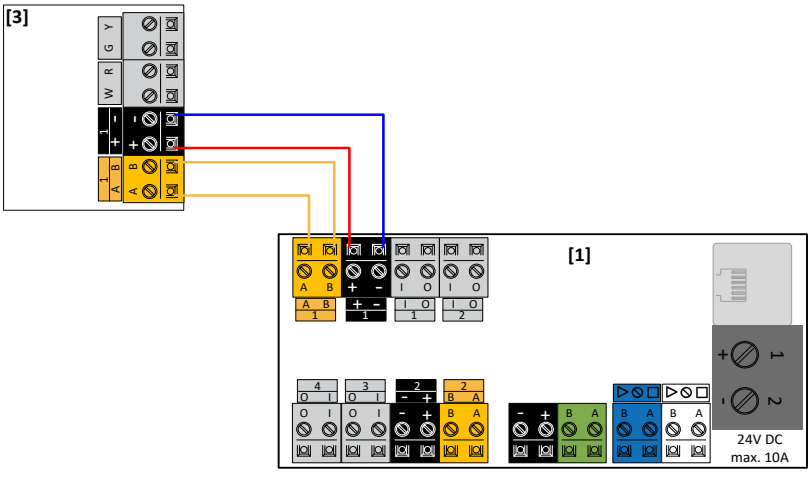

No.	Name
[1]	SCVIP connection board (Part No. 79CM307Z4)
[2]	Passive corridor lamp CL340
[3]	Active corridor lamp SCL

2.5 Connections of corridor lamps in conjunction with the SCVIP wall unit

The connection type of the SCVIP enable different versions of active, DBUS-controlled corridor lamps, and passive corridor lamps to be connected.

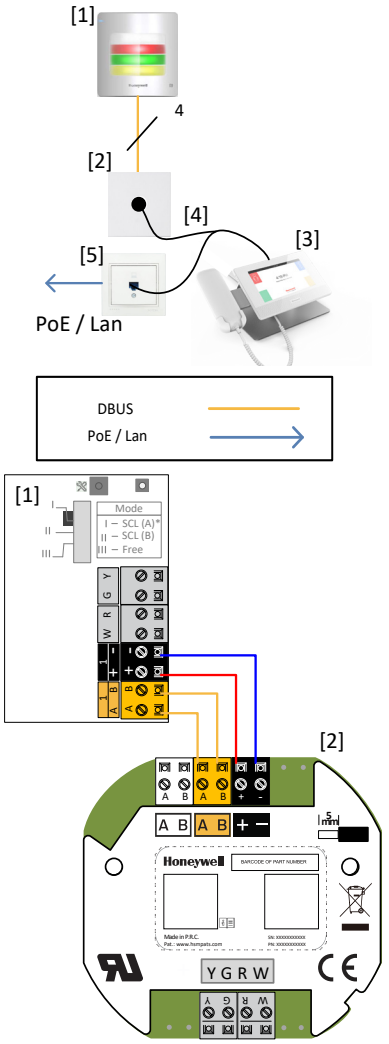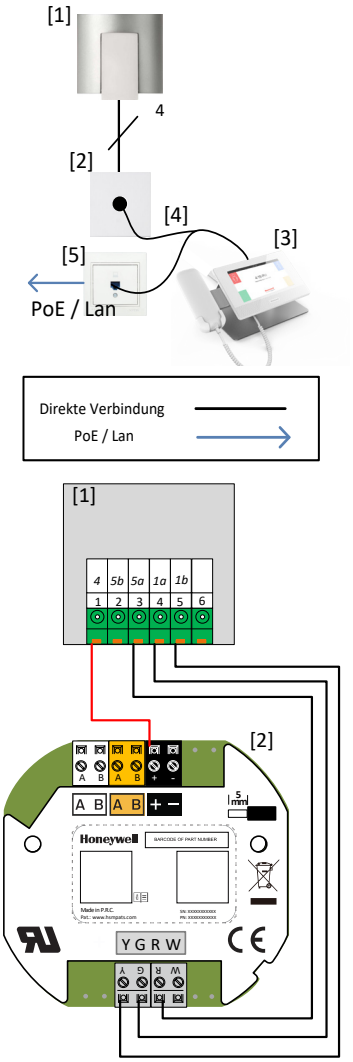Connection of the corridor lamp SCL via the DBUS (4-chamber)	Connection of the corridor lamp CL13xx 14xx / 23xx / 34xx via the passive I/O ports (3-chamber)
	

No.	Name	No.	Name
[1]	Corridor lamp SCL	[1]	Corridor lamp CL13xx/ 14xx/ 23xx/ 34xx
[2]	SCVIP wall unit		
[3]	SCVIP Systevo Care View IP		
[4]	SCVIP connecting cable		
[5]	Standard data socket		

3 Mounting

In the table console version (as delivered), 'mounting' is limited to connection with the call system; this is done by connecting the supplied connection cable to the SCVIP wall unit. Aside from the table console version, SCVIP can be mounted on a desk/wall holder with a standard VESA holder or directly on a wall.



Fig. 1: View of SCVIP wall mounting

3.1 Dimensions

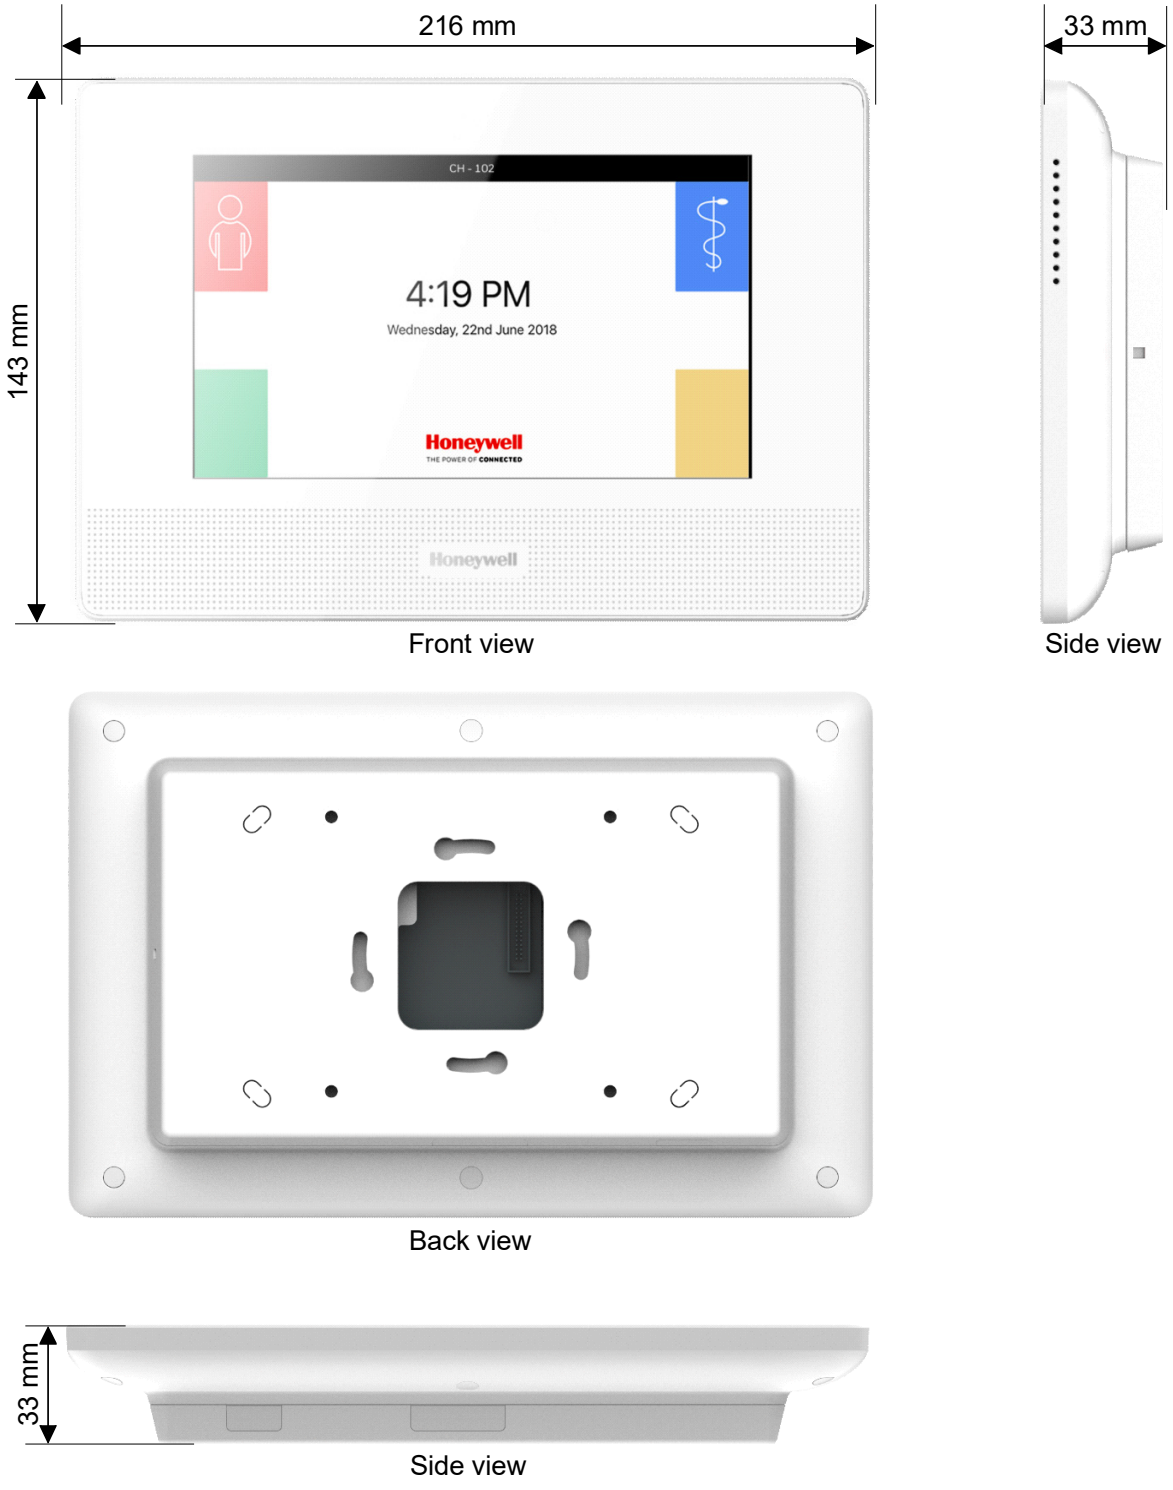


Fig. 2: Dimensions front view / back view / side view

3.2 Table stand with holder for the handset

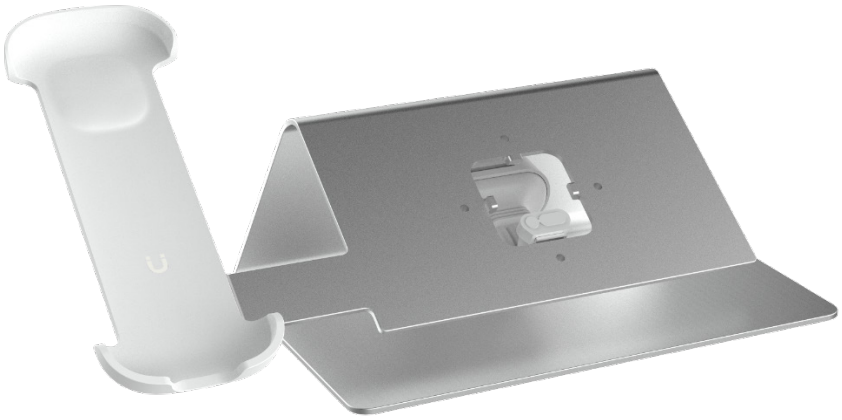


Fig. 3: Table stand with holder

3.3 Attachment to a wall or VESA support

When attaching to a wall or a VESA support, SCVIP must be disassembled from the table stand.



Fig. 4: SCVIP with table stand

3.4 Disassembling from table stand

The steps below describe how to disassemble the SCVIP unit from the table stand. Before disassembling, log out of the SCVIP and disconnected from the call system.

Disconnecting the Touch terminal from the bottom housing panel / connection unit.

Using excessive force to try to remove the Touch terminal from the bottom housing panel despite the catch (Lock level) could cause the mechanism to be **destroyed**.

***This function will become available at a later date.** (see also the release notes in the download area under www.ackermann-clino.de).

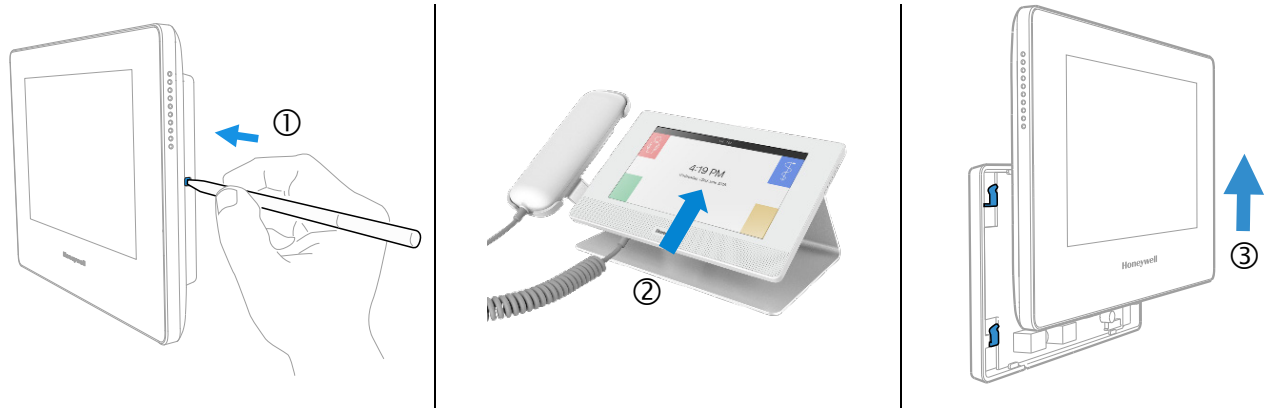


Fig. 5: Disconnecting the Touch terminal from the bottom housing panel

①	Unlock the locking mechanism with a thin screwdriver or similar (Unlock level)
②	After unlocking, the Touch terminal can be removed from the bottom housing panel by pushing it upward.
③	Touch terminal

If you wish to remove the Touch terminal during ongoing operations, first select the 'Unlock display' maintenance function* in the service menu.

The electromechanical catch will then automatically be reset to the 'Lock level'. **Before** inserting the connection board into the bottom housing panel, make sure that the electromechanical catch is **pressed** down (Unlock level).

If the Touch terminal of the bottom housing panel is removed, the connection terminals on the connection bar can be reached.
Connections of the connection lines and from the handset to the marked points.

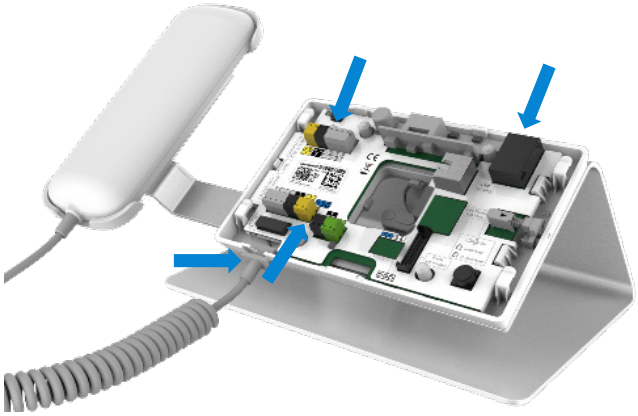


Fig. 6: Loosen connection lines

Release connection board by pressing the snap lock on the left side of the outside.

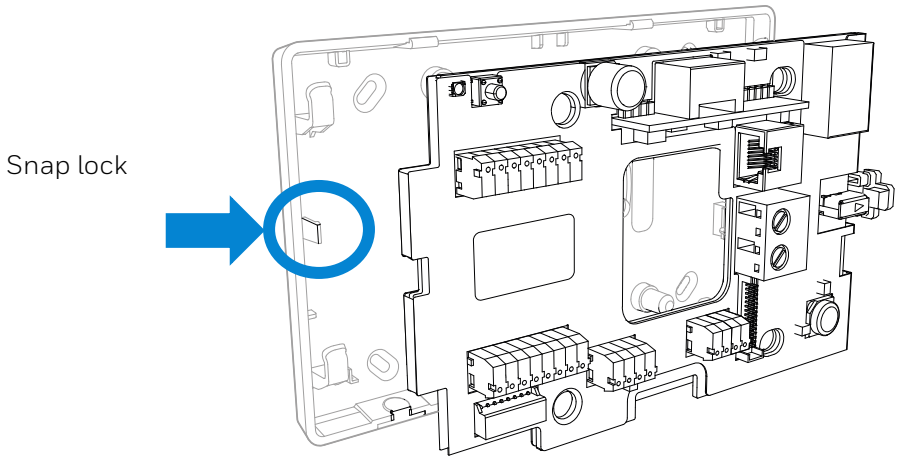


Fig. 7: Snap lock ➔ left

The connection board can now be lifted out of the guides.

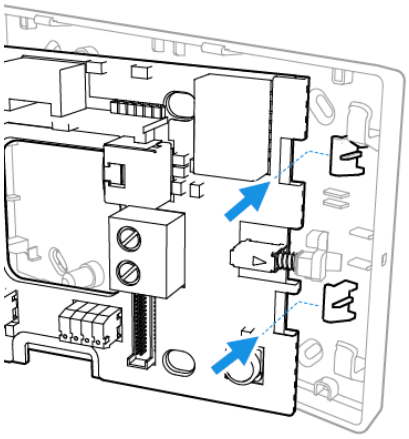


Fig. 8: Lateral guides ➔ right

Loosen the four screws and remove bottom housing panel from the table stand.

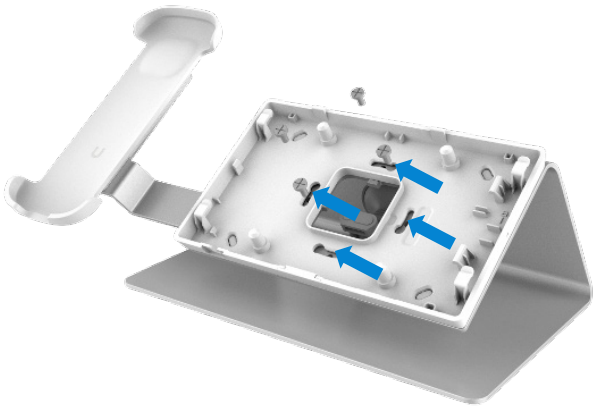


Fig. 9: Loosen the four screws

3.5 Mount the holder for the handset

If a handset is to be operated on the SCVIP, before attaching the bottom housing panel to the wall, or to a VESA support, the holder (79CM407.C) for the handset (79CM407.HS) must be mounted on the back of the bottom housing panel.


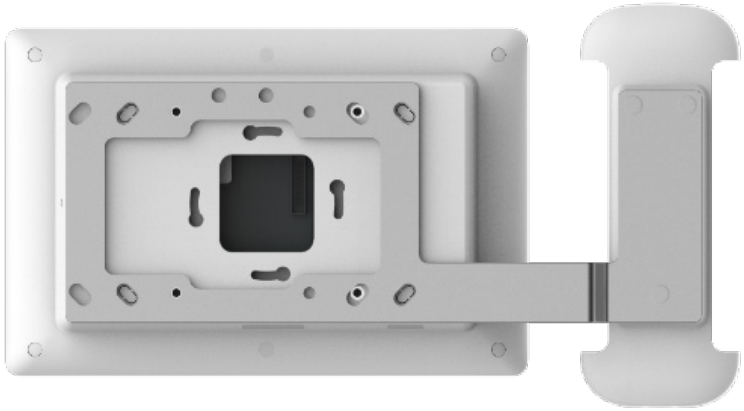



Fig. 10: Mounting the holder

3.6 Installation on a wall

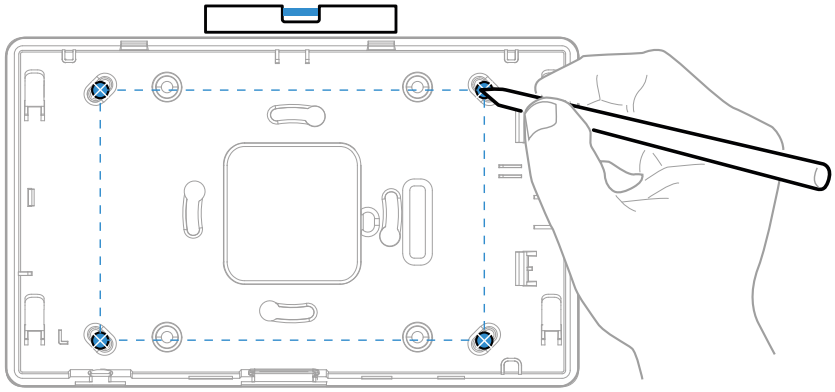

Hold the connection unit's bottom housing panel horizontally (align using a spirit level) against the mounting surface and mark the four mounting holes.
Drill through the marks for the holes to create four holes and insert wall plugs measuring 6 mm.

Fig. 11: Mark and drill the mounting holes

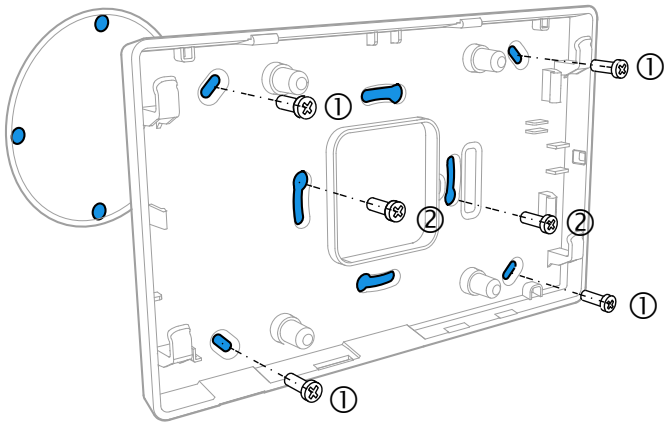

Hold the bottom housing panel against the mounting surface and align. Screw the four screws ① with a diameter of 4 mm and a max. screw head height of 3 mm into the wall plugs and tighten.
Screw in the two screws ② to fasten on a standard flush box (e.g. tunnel socket) and tighten.
The suitable type of wall plugs and screws depends on the material of the mounting surface (cavity wall, concrete, wood etc.) and must be chosen accordingly.

Fig. 12: Fitting the panel to the mounting surface

The maximum screw head height of 3 mm must be observed, otherwise the STIP electronics could be damaged.

3.7 Mounting on installation socket (e.g. tunnel socket)

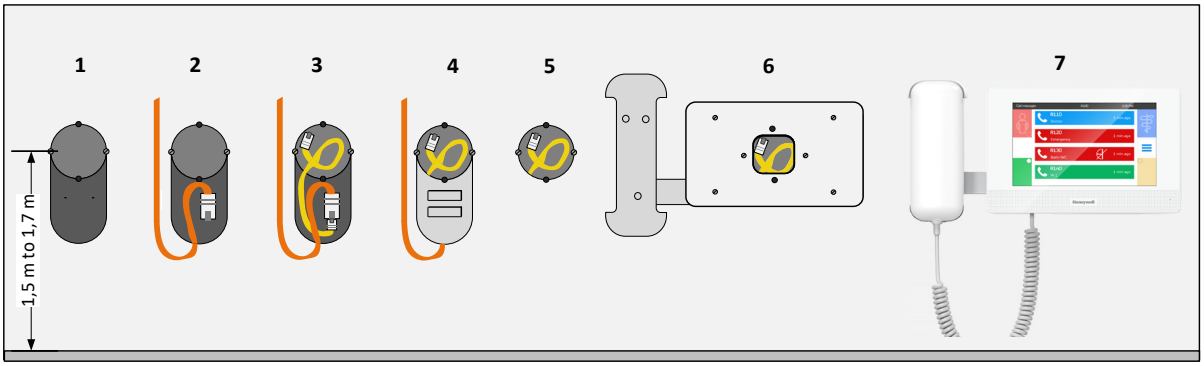


Fig. 13: Keep the mounting height 1.5 m to 1.7 m over the operator's standing surface in accordance with DIN VDE 0834

Installation steps	
1	Flush tunnel box embedded in the wall.
2	CAT cable inserted and data connection equipment with RJ45 Ethernet socket.
3	Use the patch cable included with the connection board.
4	View with closed tunnel.
5	CAT cable and tunnel concealed.
6	Installation of the connection board on the tunnel socket.
7	Connect and install the Systevo Care View Touch terminal.

In practice, the "tunnel" of the installation socket is plastered over and thus not visible.

3.8 Inserting the connection board into the bottom housing panel

The connection board features a mechanical catch with a tamper contact to prevent unauthorised removal of the Touch terminal.

Observe the catch position before installation.

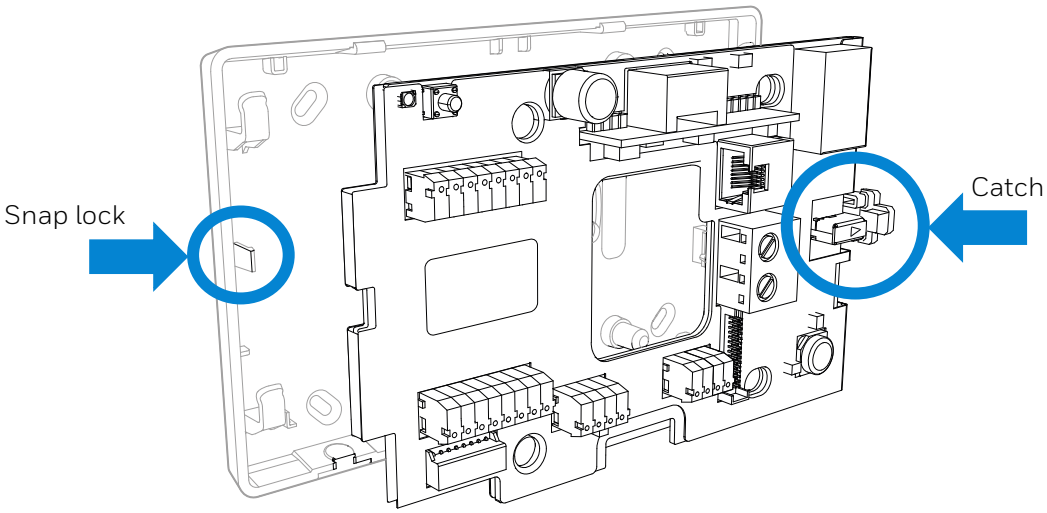


Fig. 14: Mechanical catch / tamper contact

Before inserting the connection board into the bottom housing panel, make sure that the mechanical catch / tamper contact is **pressed** down and set to the “Unlock level” position.

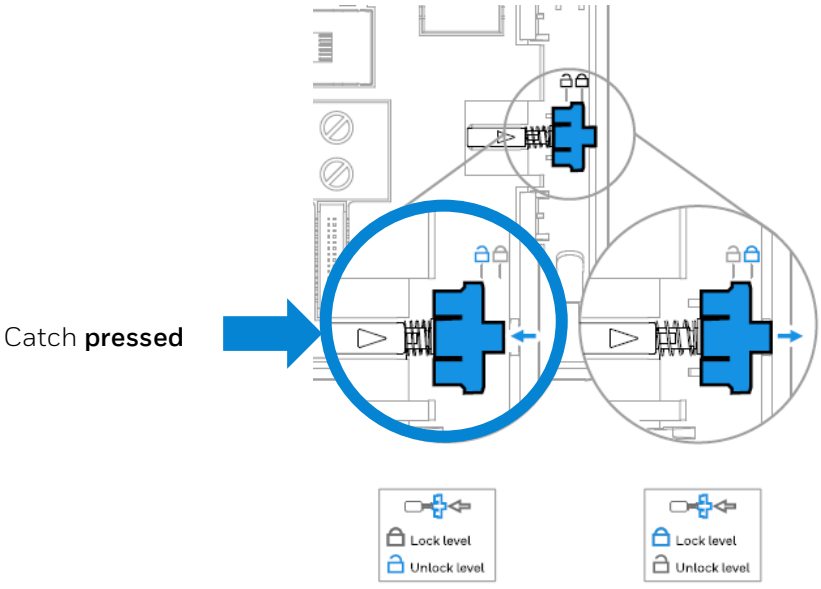


Fig. 15: Position ➔ Unlock level

Inserting the connection board into the bottom housing panel.
Insert the connection board into the lateral guides on the right side of the bottom housing panel.

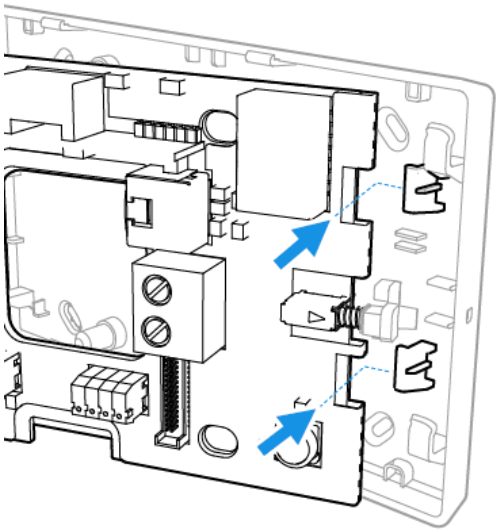


Fig. 16: Lateral guides ➔ right

Then carefully press down the left side of the connection board until it engages.

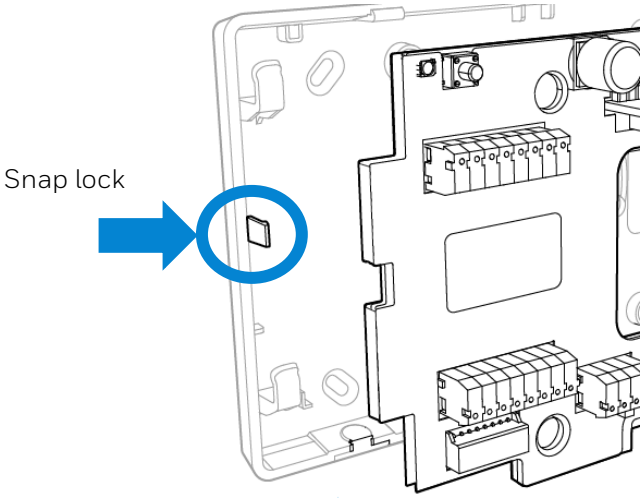


Fig. 17: Snap lock ➔ left

3.9 Installation of the Touch terminal and connection board

Connect the Touch terminal and the connection unit to the power supply and install.
Depending on the version, the connection unit can be supplied with power via these three connection terminals ①.

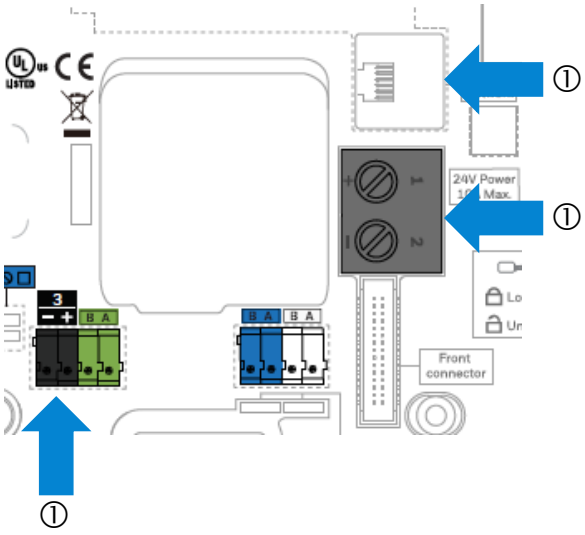


Fig. 18: Position of the connecting terminals for the power supply

Damage hazard!
Assembly and installation work may only be performed while the devices are **de-energised (without power)**.

Attach the connection plug ② into the “front connector” ③ socket of the connection board in the correct position (an incorrect connection (reverse polarity) is not possible due to the coding lug on the plug and socket). Then re-insert the plug for the power supply / Ethernet (PoE).

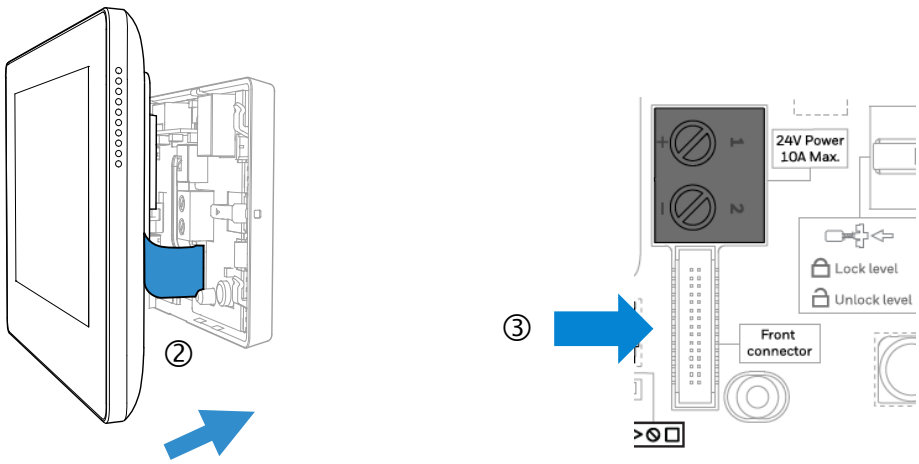


Fig. 19: Connection plug and socket “front connector”

The bottom housing panel has four catch hooks ④, (marked in blue) where the Touch terminal engages.

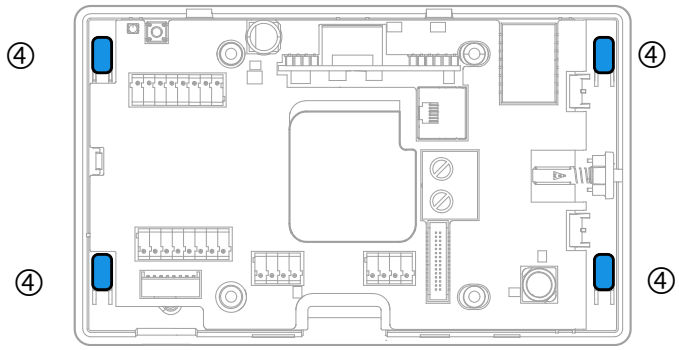


Fig. 20: Position of the catch hooks

Before placing the Touch terminal on the connection board, the electro-mechanical catch must be set to the “Unlock level” ⑤ state, as otherwise the mechanism could be damaged.


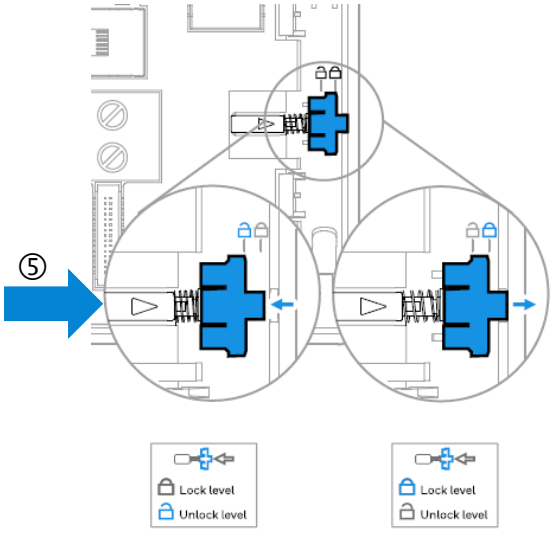


Fig. 21: Position ➔ Unlock level

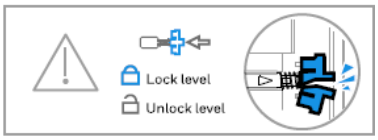

mechanism damaged

In the “Lock level” state, the Touch terminal cannot be fitted and locked.

Non-observance could cause the mechanism to become damaged.

Place the Touch terminal on the bottom housing panel from above so that the protrusions on the back of the Touch terminal engage in the catch hooks ⑥. Then press the Touch terminal down using moderate pressure until it audibly clicks into place.

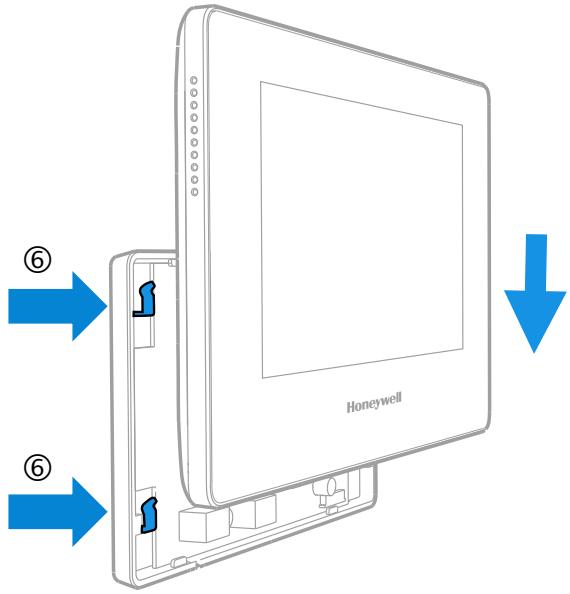


Fig. 22: Place the Touch terminal on the bottom housing panel from above

The electro-mechanical catch will automatically be set to the “Lock level” state ⑦and thus lock the mechanism.

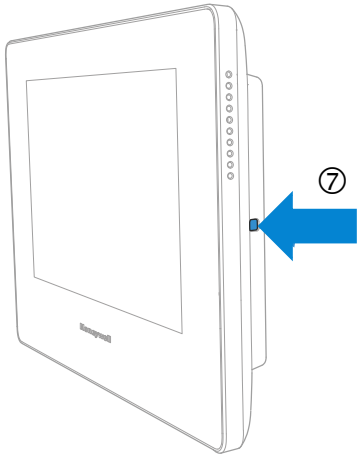


Fig. 23: State ➔ Lock level

In this state, the Touch terminal cannot be removed from the bottom housing panel.

3.10 Removing the Touch terminal from the bottom housing panel / connection board

The Touch terminal can be removed from the connection board for servicing purposes.
If you wish to remove the Touch terminal, first carry out the “Deregister the device” maintenance function* in the service menu.

*This function will become available at a later date (see also the release notes in the download area under www.ackermann-clino.de).

Then use a thin screwdriver with an edge/tip measuring < 3 mm or similar to unlatch the mechanical catch through the housing opening (Unlock level).

After unlocking, the Touch terminal can be removed from the bottom housing panel by pushing it upward.

The mechanical catch will then be automatically be reset to the “Lock level” position. **Before** replacing the Touch terminal in the bottom housing panel, make sure that the mechanical catch is **pressed** down and set to the “Unlock level” position.

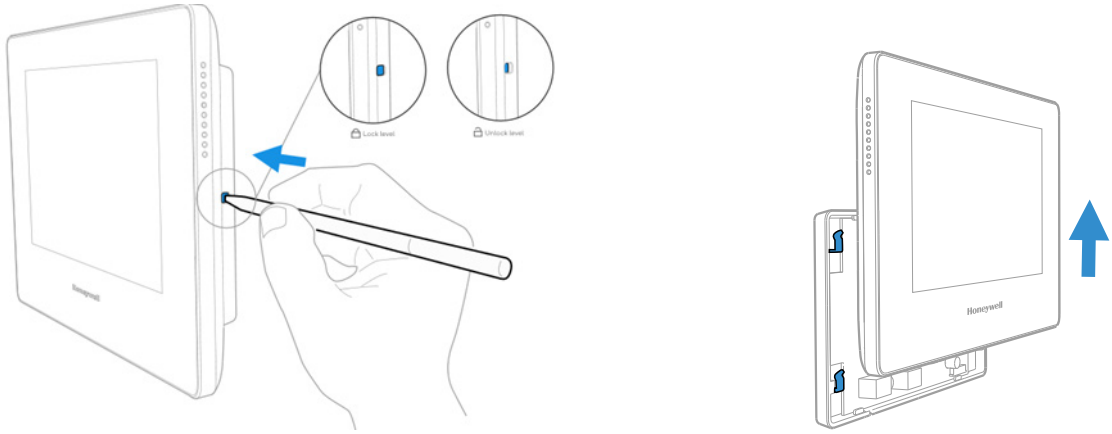


Fig. 24: Unlock the mechanical catch and remove the Touch terminal

Damage hazard!
Using excessive force to try to remove the Touch terminal from the bottom housing panel despite the catch (Lock level) could cause the mechanism to be **destroyed**.

4 Installation

4.1 Table console version

An installation in the conventional sense is not required for the table console version of the SCVIP. The pre-requisite for this is an electronics module integrated into the call system and an installed wall connection unit.



4.2 Wall mounting

Installation work is required if the SCVIP is mounted on a wall in deviation from the table console version.

- All mounting and installation work must be carried out only when the device is disconnected from the power.
- The connecting terminal for the power supply from the corridor data bus is suitable for two cables per pole with a cable cross-section of up to 1.5 mm².
- All other connection terminals are suitable for installation cables with a wire diameter of 0.6 mm / 0.8 mm.
- Up to three wires measuring 0.6 mm or up to two wires measuring 0.8 mm can be safely connected per screw terminal.
- Strip wires to approx. 5 mm.
- When installing on the wall, use suitable screws with a maximum screw head height of 3 mm for the screw fitting.

5 Electrical connection





Connecting terminals and their function
Straightforward and largely self-explanatory wiring of components and simplified commissioning are a particularly important part of the new Systevo wiring concept. Specific functions are thus allocated to the connecting terminals via colour coding. Every function, e.g. power supply or switch output, as well as every data bus has its own colour for easier differentiation.

Function	Connecting terminal	Properties
Power in 24 V / 10 A		Power supply from the ward, 24 V max. 10 A
2 x DBUS		DBUS Use a twisted wire, max. length 200 m. Up to 4 DBUS components possible per DBUS, radial wiring possible.
BBUS		BBUS Use a twisted wire, max. length 200 m. Up to 10 BBUS devices are supported, e.g. 8 bed bus modules, 2-display modules, radial wiring possible.
ZBUS		ZBUS Use a twisted wire, max. length 2500 m, (without repeater max. 500 m). The ZBUS supports up to 127 ZBUS devices (use repeaters after 64 devices) radial wiring not permitted.
ABUS		ABUS Use a twisted wire, max. length 2500 m, (without repeater max. 500 m). The ABUS supports up to 127 ABUS devices (use repeaters after 64 devices) radial wiring not permitted.
4 x NC (up) / passive I/O down		I/O port Connection for passive call units exclusively in quiescent current. I ➔ Call circuit input 0 V~24 V +/- 10% DC. O ➔ Lamp output (reassurance light) max. 100 mA (open collector acc. to GND)
3 x Power for bed		Power supply for beds, max. 2 A (all power supply terminals for BBUS + DBUS 1 + 2 together)
ETH with PoE		Network / LAN connection (PoE)

5.1 Connection unit 79CM307Z4







Power can be supplied via PoE or from the ward supply for the Systevo Care View IP central hub of information with the connection unit 79CM307Z4.

The data connection to the call system can take place via the data / corridor and audio data bus or via the network connection via IP. Additional services can also be made available via the network connection.

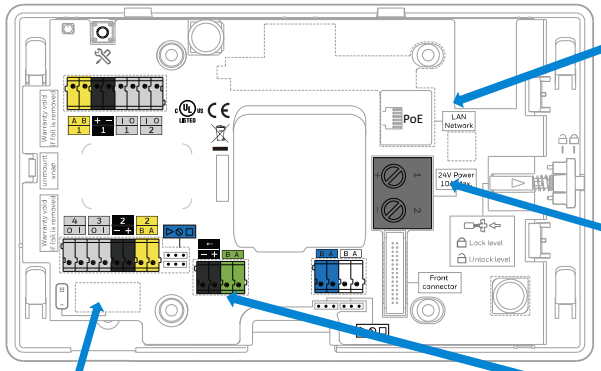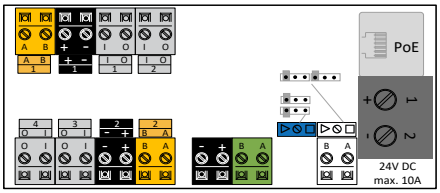Care View IP mode	Connection unit 79CM307Z4	Power supply Data / audio
Connection unit STIP / Care View IP The connection unit **Care View IP** enables power supply via PoE or from the ward supply. The data and audio connections to the call system can take place via the corridor and audio data bus or via the network connection via IP. Additional services can also be made available via the network connection.	 Connection for handset	 **Network connection (with PoE** power supply) to connect to the call system and for additional services.  **Power supply** 24 V DC max. 10 A  **Power supply** 24V DC (only for Systevo Care View IP)  Connecting **ZBUS / ABUS** to the call system
Simplified depiction of connection unit STIP / Care View IP		

Max. power for corridor components, dependent on selected power supply for the STIP (see **Technical specifications** in the appendix)

Connection unit 79CM307Z4 Care View

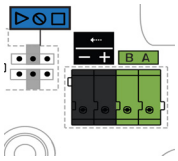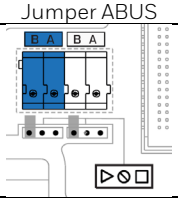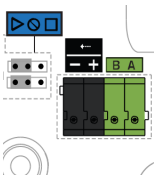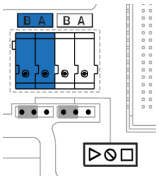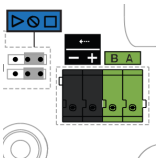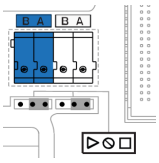Termination of ZBUS and ABUS			
	Jumper ZBUS	Jumper ABUS	
(Factory settings) Devices on the corridor and audio data bus			Device is on the corridor and audio data bus in **any** position. Factory setting for the **ABUS** is terminated as a **start**.
	Jumper ZBUS	Jumper ABUS	
Start of corridor and audio data bus.			Device terminates the **start** of corridor and audio data bus.
	Jumper ZBUS	Jumper ABUS	
End of corridor and audio data bus			Device terminates the **end** of corridor and audio data bus.

When using PoE as the power supply, it is **not** possible to establish safe isolation with 2 x MOPP in accordance with DIN EN 60601-1, as stipulated in DIN VDE 0834-1:2016-06. For 24 V DC power supply from the ward, a standard network connection **without** PoE must be used.

5.2 Connections

To provide a better overview and make everything easier to see and read, in the following connection diagrams the connecting wires are depicted as reaching the connecting terminals from outside.

In practice, all connecting wires will always be run from the middle out to the connecting terminals.

Cable arrangement

The depiction shows an example of a possible cable arrangement from the **middle outward** and applies to all connection board variants.

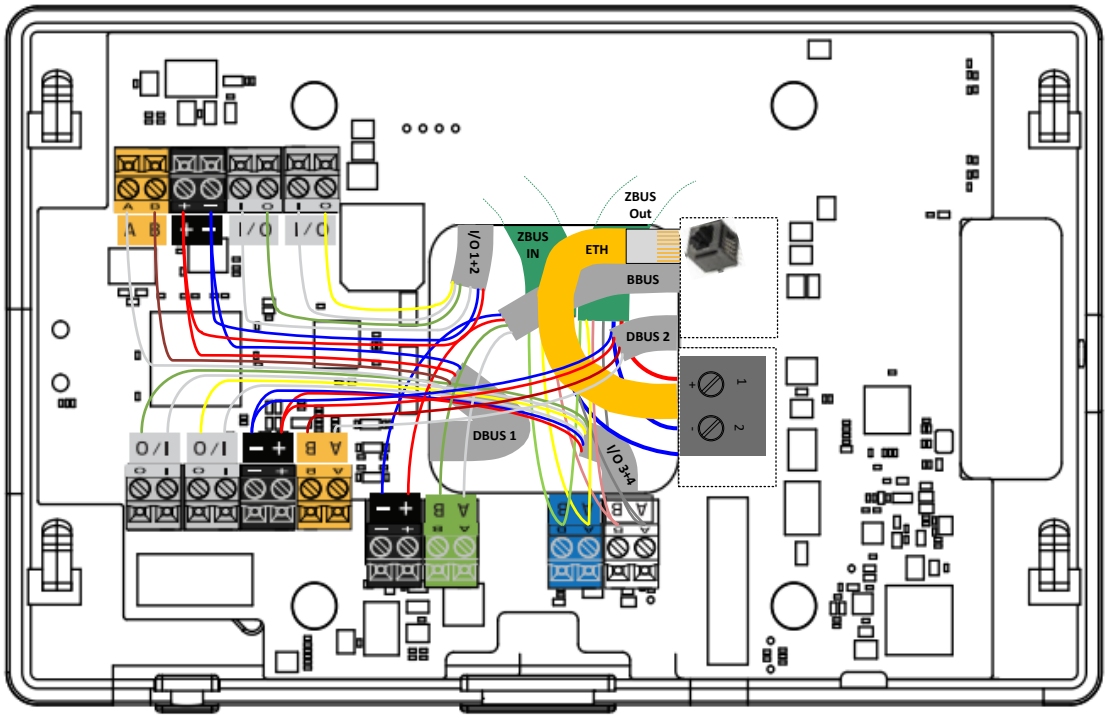


Fig. 25: Arranging connecting wires from the middle outward to the terminals

Simplified depiction

To keep the connection diagrams as clear as possible, a simplified depiction is used for the SCVIP connection units and the Systevo electronics modules. Only the connection type and the termination are displayed. The arrangement and numbering of the connection terminals with the actual position are comparable in this case.

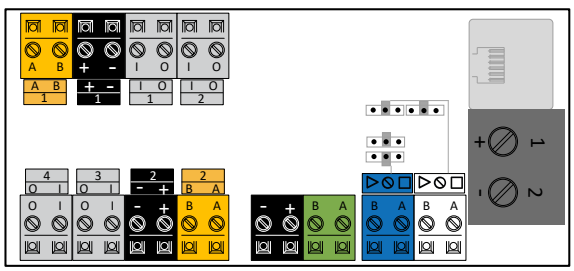
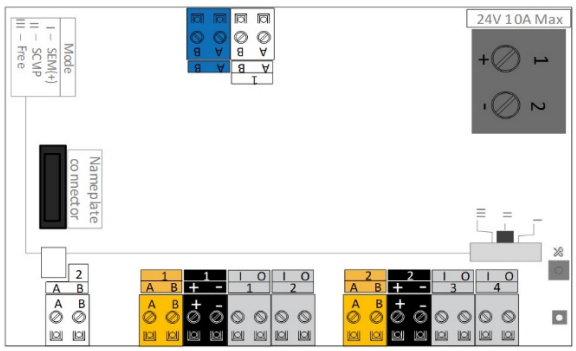






SCVIP connection unit	Systevo electronics module SEM+
	

Fig. 26: Simplified depiction

6 Operating and status messages



The multi-coloured status LED on the connection board is used to display operating statuses as well as any malfunctions. Only one status can be shown at a time. In the event of several events, only the status with the highest priority will be shown (1 is the highest and 12 is the lowest priority).

Priority	Status	1 sec.	2-5 sec.	6 sec.
1	Bootloader active			
2	Firmware update active			
4	The start process and the software version are shown on the display.			
8	Fault			
9	System is operating in emergency mode			
12	Device in operation			

7 Commissioning

For further commissioning, please see the commissioning documentation 89470J9.GB0.

8 Accessories

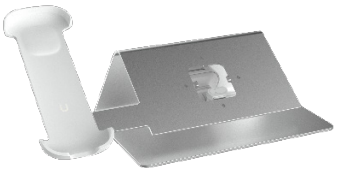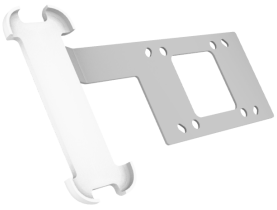Part No.	Name	Figure	Included in the scope of delivery
79CM407.Z1	Table console		---
79CM407.C	Holder for the handset		---
79CM407.HS	Handset for SCVIP		✓
79CM407.cc	Connection cables set	No image available	✓
73091G	SCVIP wall unit		---
88885G3	Cover for wall unit		---

✓ = available
--- = not included

9 Technical specifications

General data			
Approvals/certifications			
SCVIP 7” version	:	CE, FCC, VDE0834, UL 1069	
Desktop unit for SCIP	:	CE, FCC, VDE0834, UL 1069	
Connection cable SCIP, length 2.5 m / weight 90 g	:	CE, FCC, VDE0834, UL 1069	
Electrical data			
Power supply	:	24 V DC +/- 10 %, PoE	
Max. power for corridor components if SCIP is supplied via PoE	:	285 mA (**245 mA**, if audio and RFID active)	
Max. power for corridor components if SCIP is supplied via 24 V DC	:	max. 2 A (all power supply terminals for BBUS + DBUS 1 + 2 together)	
Average power consumption in ongoing operation @ 24 V DC	:	200 mA	
Average power consumption in ongoing operation + Ethernet @ 24 V DC	:	215 mA	
Maximum power consumption in ongoing operation @ 24 V DC	:	300 mA	
Number of DBUS lines	:	2	
Number of DBUS devices per DBUS line	:	4	
I/O port: Passive input	:	0V ~ 24 V +/- 10 %	
I/O port: Passive output	:	max. 100 mA open collector acc. to GND	
Audio	:	Loudspeaker, 600 – 4000 Hz, 10 cm, >85 dB SPL	
Interfaces	:	I/O ports: ABUS, BBUS, ZBUS, DBUS, passive IO, Ethernet port	
Additional electrical data for wall mounting			
ZBUS topology / termination / cable length	:	Bus / on board / 500 m	
ABUS topology / termination / cable length	:	Bus / on board / 500 m	
R-ABUS topology / termination / cable length	:	Bus + radial / on board / 200 m	
BBUS topology / termination / cable length	:	Bus + radial / on board / 200 m	
DBUS topology / termination / cable length	:	Bus + radial / on board / 200 m	
Ambient conditions			
Operating temperature	:	5°C ... +40°C	
Storage conditions	:	-20°C ... +70°C	
Humidity	:	10% – 90% (non-condensing)	
Drop test undamaged	:	3 times from 35 cm	
Protection class	:	IP20	
Mechanical specifications		**SCVIP 7” Version**	**Desktop unit for SCIP**
Dimensions (H x W x D)	:	33 x 143 x 216 mm	151 x 107 x 235 mm
Net weight	:	610 g	1330 g
Antimicrobial / UV resistant	:	Yes	
Display / resolution	:	7” TFT / high definition (1024 x 600) 16.7 million colours	
Background lighting	:	LED	
Touchscreen (hardware)	:	5-point multi-touch capacitive, hardened mineral glass, hardness grade 7H	
Operating button	:	Theft protection	
Fire protection class	:	V-0	
Housing material	:	PC + ABS-FR3010 (8% antimicrobial)	
Housing colour	:	Lyric white 500N	
System architecture			
Processor	:	Cortex-A53 64 Bit quad-core CPU up to 1.2 GHz	
Memory	:	1 GB DDR3, 8 GB EMMC FLASH	
Operating system	:	Linux	
Wireless connections			
WIFI	:	IEEE 802.11 b/g/n radio	
WIFI security	:	WEP, 802.1x, TKIP, AES, LEAP, PEAPv0, PEAPv1, EAP-M, SCHAPv2 EAP-GTC, EAP-TLS, EAP-TTLS, WPA-PSK, WPA2	
Bluetooth / profile / max. range	:	Bluetooth class 4.2 / GAP, SPP, HDP, A2DP / 10 m	
RFID reader	:	4 cm	
Hygiene			
Disinfectants	:	70% isopropyl alcohol / Sani-Cloth HB / Sani-Cloth Plus / Super Sani-Cloth / 70% isopropyl alcohol wipes / Virex 256 / CaviWipes / 409 Glass and Surface Cleaner / Windex Blue /& gentle dish soap and water (Dawn)	

Notes

Novar GmbH a Honeywell Company
Forumstraße 30
41468 Neuss, Germany
Internet: www.ackermann-clino.com
E-Mail: info@ackermann-clino.com

Technical changes reserved!
© 2021 Honeywell International Inc.