

Honeywell | Intelligent Life Care

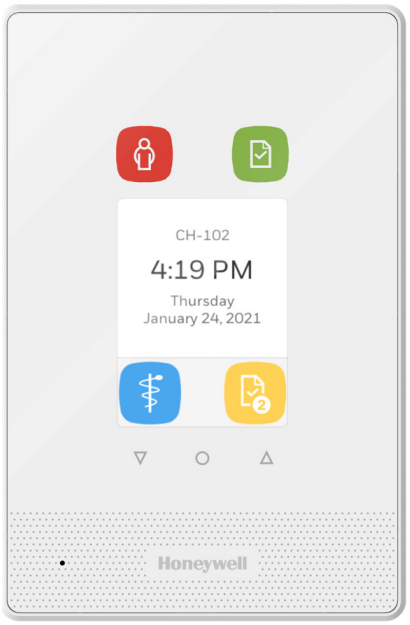

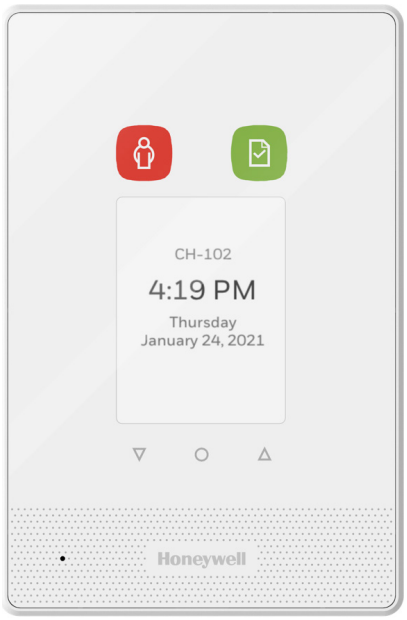

Systevo Room Terminal / Systevo Room Display

(system software V.12.10R200 or higher)

Part No. 74920xx

GB Installation and commissioning instructions

89475A3.GB0
09.2022

Intended purpose
This products may only be used for the applications outlined in the catalogue and in the technical description, and only in conjunction with the recommended and approved external devices and components.
This documentation contains registered and unregistered trademarks. All trademarks are the property of the respective owners. The use of this documentation does not grant you a licence or any other right to use the name, logo and/or the label.
This documentation is subject to the copyright of Honeywell. The content must not be copied, published, modified, distributed, transmitted, sold or changed without the express prior written permission of Honeywell.
The information contained in this documentation is provided without warranty.

Safety-related user information
This manual includes all information required for the proper use of the products described.
In order to ensure correct and safe operation of the product, all guidelines concerning its transport, storage, installation, and mounting must be observed. This includes the necessary care in operating the product.
The term 'qualified personnel' in the context of the safety information included in this manual or on the product itself designates:

- project engineers who are familiar with the safety guidelines concerning patient call systems incl. associated components.
- trained service engineers who are familiar with the components of patient call systems and the information on their operation as included in this manual.
- trained installation or service personnel with the necessary qualification for carrying out repairs on patient call systems incl. associated components or who are authorised to operate, ground and label electrical circuits and/or safety equipment/systems.

Symbols
The following information is given in the interest of personal safety and to prevent damage to the product described in this manual and all equipment connected to it.
Safety information and warnings for the prevention of dangers putting at risk the life and health of user and maintenance personnel as well as causing damage to the equipment itself are marked by the following pictograms. Within the context of this manual, these pictograms have the following meanings:



Warning - Designates risks to person and/or machine. Non-compliance will create risks to person and/or machine. The level of risk is indicated by the word of warning.



Note - Important information on a topic or a procedure and other important information!



Standards and guidelines - Observe configuration and commissioning information in accordance to the national and local requirements.

Demontage



In accordance with Directive 2012/19/EU (WEEE), after being dismantled, electrical and electronic equipment is taken back by the manufacturer for proper disposal.

© Honeywell International Inc./technical changes reserved!
This documentation is subject to copyright law and, as per Sections 16 and 17 of the German Copyright Act (UrhG), is neither permitted to be copied nor disseminated in any other way. Any infringement as per Section 106 of the UrhG may result in legal action.

Table of contents

1 General / Application 4
1.1 Product specification 4
1.2 Associated documents 4
1.3 Abbreviations 5
1.4 Requirements 6
1.5 Scope of functions 6
2 Installation 8
2.1 Dimensions and views 8
2.2 Installation on standard switch boxes 9
2.3 Installation on existing connection board ZT95/ZT99 12
2.4 Removing the device 13
3 Electrical connection 14
3.1 Connection board variants 15
3.2 Termination of ZBUS and ABUS (SCB-RM) 16
3.3 Connecting to the system 16
3.3.1 SRD / SRT with SCB-RM connection board to ZBUS & ABUS in systems from V12.10R200 onward 17
3.3.2 SRD / SRT with SCB-RU connection board to DBUS of SEM / SEM+ in systems from V12.10R200 onward 20
3.3.3 SRD / SRT in systems V10 / V11 23
3.3.4 Explanation of symbols and lines 25
4 Operating menu 26
5 Notes on commissioning 27
6 Configuration 27
6.1 SCB-RM connection board 27
6.2 SCB-RU connection board 27
7 Scope of delivery / accessories 28
8 Technical data 29

1 General / Application

This document provides information about how to install (mounting, wiring, basic commissioning) the Systevo Room Terminal, Systevo Room Display (SRT / SRD) in the Systevo Call Ackermann communication system. Connection units for the ZBUS / DBUS are available for both devices for connection to the field bus 99.

Additional and current information

The described features, specifications and product related information in this manual correspond to the date of issue (refer to date on the front page) and may differ due to modifications and/or amended Standards and Regulations of the System design, Installation and Commissioning.

Updated information and declaration of conformity are available for comparison on the www.ackermann-clino.com homepage.

1.1 Product specification

The Systevo Room Terminal and the Systevo Room Display, hereinafter referred to as SRT and SRD, replace the previous room terminals and display modules. Both devices have easy-to-clean glass surfaces without disruptive edges.

The Systevo Room Display is expected to be available in the first quarter of 2023. Availability upon request.

1.2 Associated documents

Description	Part No.
Installation Instruction ZT95/ZT99 Adapter	89470R2
Installation Instruction Systevo Bed Units	89470K1.GB0
Installation Instruction Systevo Care Unit	89470K3
Installation Instruction Systevo Audio Interface / Systevo Audio Switch	89475A2
Installation Instruction Systevo Electronics Module and Room Lamp	89470K2.GB0

1.3 Abbreviations

ABUS	Audio bus
AI-BUS	Audio Interface Bus (digital audio signal from SAI to SAS)
AP	Surface mounting
CP99Config	Configuration program for Clino Systevo
DBUS	Data bus
DZI	Duty room interface
Intercom	Call answering, responding to patients, announcements
IO	In / Out (passive connection for call units)
IP	Internet Protocol
KSA	Master station
LED	Light-emitting diode
LAN	Local Area Network
PoC	Point of Care (bed space)
PU	Passive unit (passive call and cancel push buttons)
R-ABUS	Room audio bus
SAI	Systevo Audio Interface (connection of an audio source, e.g. TV)
SAS	Systevo Audio Switch (switching matrix for TV sound and intercom)
SEM	Systevo Electronics Module
SEM+	Systevo Electronics Module + audio
SCB-RM	Systevo Connection Board Room Module (connection to ZBUS)
SCB-RU	Systevo Connection Board Room Unit (connection to DBUS)
SCL	Systevo Corridor Lamp (room signal lamp)
SCS	Systevo Call Smart (patient handset)
SCU	Systevo Care Unit (active call/cancel push button unit)
SRD	Systevo Room Display (display only, no intercom)
SRT	Systevo Room Terminal (display and intercom)
STIP	Systevo Touch Terminal IP
SCVIP	Systevo Care View IP, ward's IP central hub of information
UP	Flush mounting
ZBUS	Corridor data bus

1.4 Requirements

The Systevo Room Terminal (SRT) and the Systevo Room Display (SRD) are operated in system environments V10/V11/V12. The full functional scope is supported in system environments ≤ V12.10R200.

1.5 Scope of functions

- Connection to ZBUS with SCB-RM in system environments with **V10/V11** with limited functions:
  - Max. 3 bed units to DBUS 1 (configured as a passive bed) + one additional DBUS unit (SCU)
  - Audio to SRT / SRD is supported.
  - Audio to bed is not supported (V12.10R200 required as a minimum)
- Connection of SRT to ZBUS with SCB-RM in systems **from V12.10R200 onward**:
  - Full DBUS support (2 x DBUS)
  - Support for patient handset SCS
- Connection of SRT / SRD to DBUS with SCB-RU **from V12.xx onward** (1 SRT / SRD to DBUS 1/ DBUS 2)
- Voice to SRT (with SCB-RU or SCB-RM) for connection to SEM+
- Room audio bus with SCB-RM, audio to the bed is possible
- Surface mounted
- Installation on surface-mounted connection board ZT99 / ZT95 possible with adapter 74920Z3

SRT:
Two different connection boards (SCB-RM / SCB-RU) enable flexible connection of the SRT. In conjunction with the connection unit SCB-RM, the SRT is designed as the successor to the room terminal ZT99 and is operated on the corridor data bus. To provide a convenient operating terminal, the SRT is connected to the DBUS of an SEM+ via the SCB-RU connection board; in this case, the SEM+ also performs the function of the corridor lamp.

SRD:
The SRD is intended as the successor to the display modules, and is connected to the DBUS on the Systevo electronics modules SEM / SEM+ via the SCB-RU connection board. It is connected to the corridor data bus via the SCB-RM connection board.

For both SRD and SRT, the use of the SCB-RM connection board and the connection to the corridor data bus means that the corridor lamp SCL is connected via the DBUS. When the SCB-RU connection board is used, the SEM+ also performs the function of the corridor lamp.

Table of functions:

Function	SRT	SRD
Connection to DBUS from SEM / SEM+ with SCB-RU	✓	✓
Connection to ZBUS with SCB-RM	✓	✓
Connection of STIP / SCVIP to SRT DBUS with SCB-RU	---	---
Nurse call audio when connected to ZBUS	✓	---
Nurse call audio when connected to DBUS of SEM+	✓	---
Separate button for PR1 outside the display	✓	✓
Button for PR2 in the display	✓	---
Separate button for normal call outside the display	✓	✓
Button for doctor call in the display	✓	---
Flexible positioning of additional call buttons on the display * *Software function (availability upon request)*	✓	---
Message display	✓	✓
Use of interconnections*	✓	✓
Use of collective announcements*	✓	---
In-built buzzer	✓	✓
Cleaning mode	✓	✓
Time and date display	✓	✓
Night mode	✓	✓
Operation with disposable gloves	✓	✓

* The functions marked with an asterisk are available under licence. Inquire about availability if needed.

Wearing disposable gloves may impede use of the touchscreen.

2 Installation

- All mounting and installation work must be carried out only when the device is disconnected from the power.
- The connecting terminals are suitable for installation cables with a wire diameter of 0.6 mm / 0.8 mm. For cabling in the room, a wire diameter of 0.6 mm is recommended.
- By default, the mode switch is set to position 1 on the SCB-RM connection board, which corresponds to the standard. At present, positions 2+3 are not supported.

2.1 Dimensions and views

The dimensions shown apply to both SRT and SRD. All measurements are given in mm.



Fig. 1: Dimensions in (mm)

2.2 Installation on standard switch boxes

SRT / SRD are designed for surface mounting and are installed on standard switch boxes.



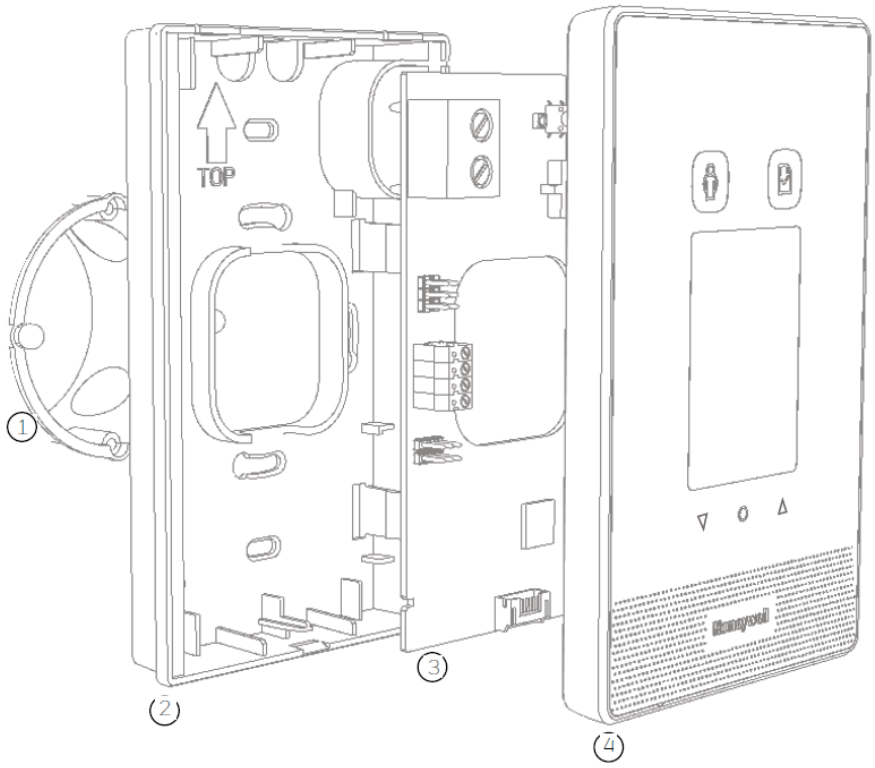


Fig. 2: Surface mounting on standard switch boxes


①	Standard switch box
②	Bottom housing panel
③	PCB
④	Front cover with display

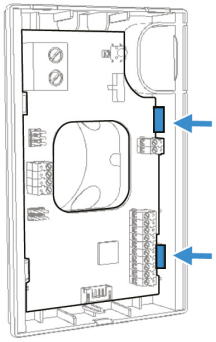


To install the device, first remove the PCB from the housing of the connection board.

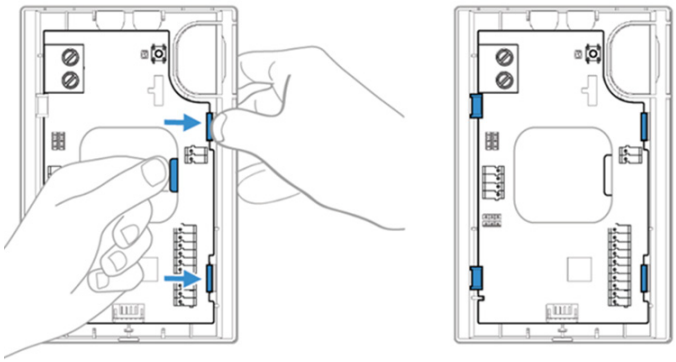


To do this, press the latches (shown in blue) outwards towards the edge of the housing and take out the PCB.

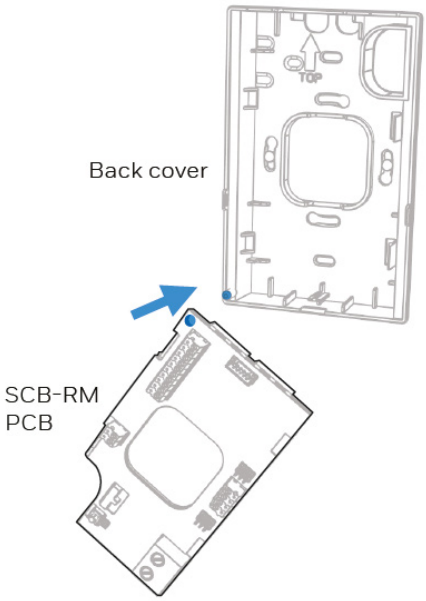


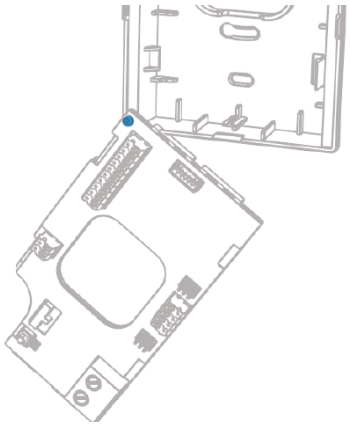


The PCB can be pushed onto the mounting domes (shown in blue) for safekeeping during installation.

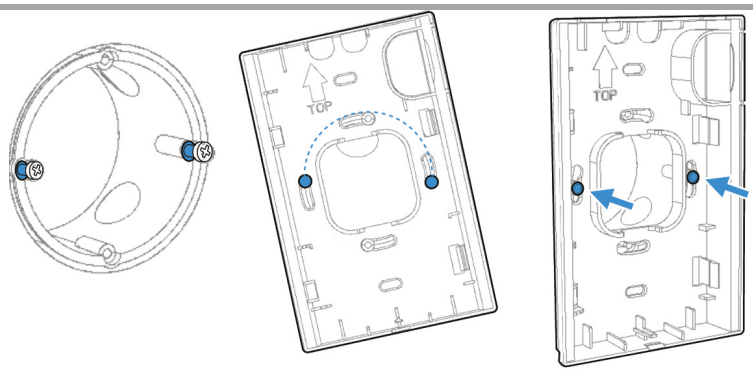



Position the housing on the standard switch box and screw in place.

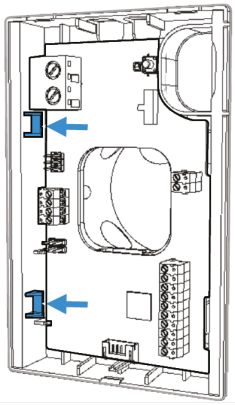

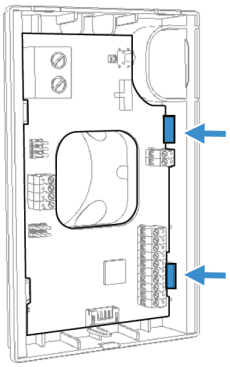



Reinsert the PCB and latch in place.

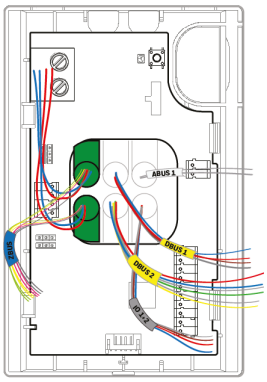

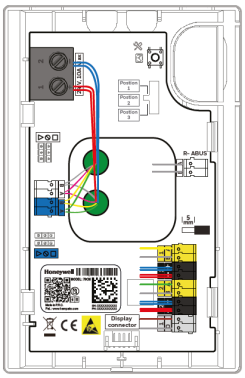



Insert the connecting cables and mark them with the enclosed labels, then connect the connecting cables to the corresponding terminals.

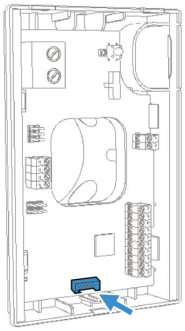

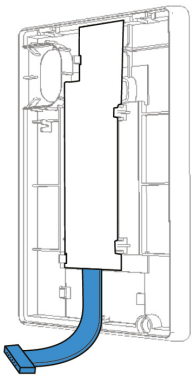


Plug in the connection cable before attaching the front of the housing.

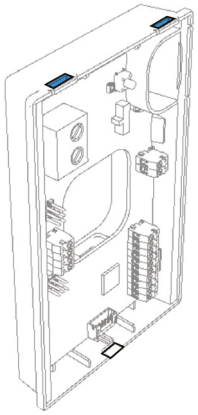

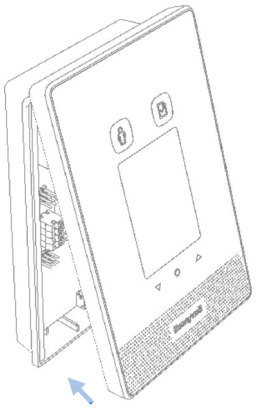

Hook the front part of the housing into the marked openings at the top, fold it down and press together until the mechanism locks the housing.



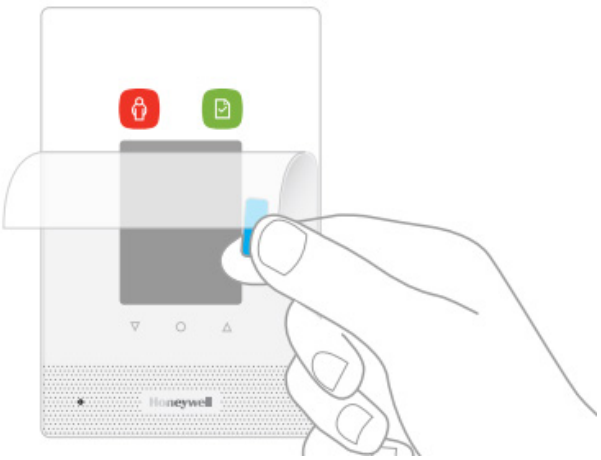

Remove the protective film from the display.

2.3 Installation on existing connection board ZT95/ZT99


Instead of a ZT 95/99, there is an adapter plate (74920Z3) for screwing the device onto existing connection boards.





Fig. 3: SRT / SRD installed on adapter plate 74920Z3

For further installation details, see Installation Instruction ZT95/ZT99 Adapter (Part No. 89470R2).


2.4 Removing the device

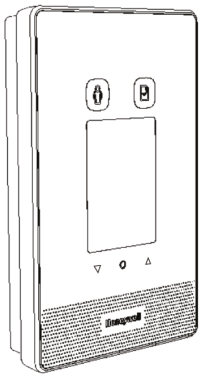


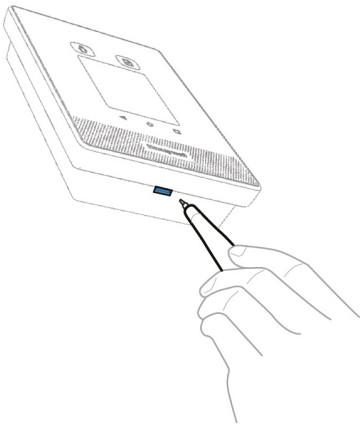

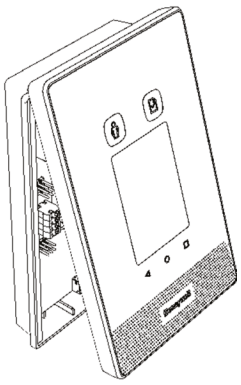

To open the housing, use a suitable slotted screwdriver on the underside of the housing to press open the locking mechanism at the marked point.



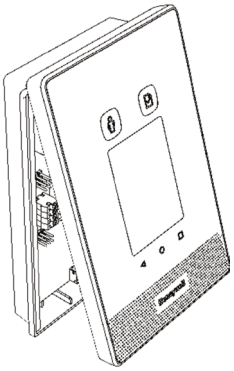


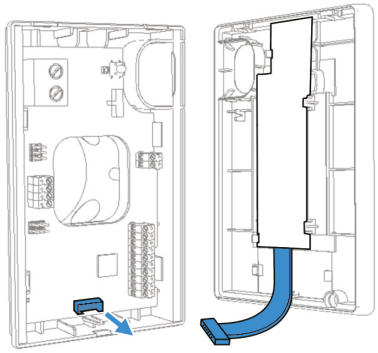

To remove the front of the housing, disconnect the connecting plug.

3 Electrical connection

Connecting terminals and their function:
Straightforward and largely self-explanatory wiring of components and simplified commissioning are a particularly important part of the wiring concept. Specific functions are thus allocated to the connecting terminals via colour coding. Every function e.g. mains power and every data bus has its own colour for easier differentiation.

Function	Connecting terminal	Properties	SCB-RU	SCB-RM
Power in 24 V / 10 A max.		**Mains power supply** from the ward, 24 V max. 10 A 2 wires 1.5 mm² possible per terminal.	---	✓
DBUS		**DBUS:** Use a twisted wire, max. length 400 m. 4 DBUS components possible per DBUS. Radial and mixed cabling possible (4 x 100 m).	✓ For connecting to DBUS of SEM / SEM+	✓ 2 x DBUS for connecting to DBUS devices
ZBUS		**ZBUS:** Use a twisted wire, max. length 2500 m, (without repeater max. 500 m). The ZBUS supports up to 127 ZBUS devices (use repeaters after 64 devices) Radial cabling is **not** permitted.	---	✓
ABUS		**ABUS:** Use a twisted wire, max. length 2500 m, (without repeater max. 500 m). The ABUS supports up to 127 ABUS devices (use repeaters after 64 devices). Radial cabling is **not** permitted.	---	✓
RABUS		**R-ABUS: Corridor audio data bus** Use a twisted wire, max. length 200 m. The R-ABUS supports up to 6 devices.	✓	✓
I/O port		**I/O port:** Connection for passive call units and lamps. **I->** Call circuit input 0 V ~ 24 V +/- 10% DC. **O->** Lamp output (reassurance light) max. 100 mA (open collector to GND)	---	✓
24 V DC Connection		**Mains power supply:** SCB-RU: For SRT of SEM / STIP SCB-RM: For beds, max. 3 A (all mains power supply terminals for + DBUS 1+2 together)	✓	✓


✓ = available | --- = not available



Always make sure that the poles are connected correctly. Faulty or reversed polarity wiring can lead to irreversible damage.

3.1 Connection board variants

Two connection boards with various connection options are available.

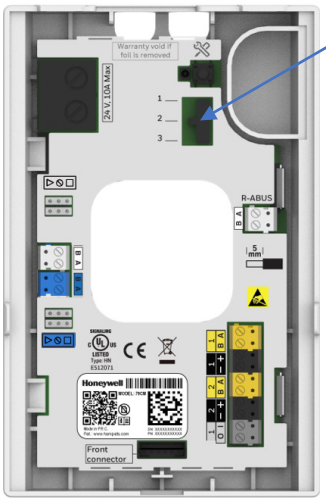SCB-RU for connecting to the DBUS of an SEM / SEM+	SCB-RM for direct connection to the ZBUS + ABUS
	 Mode switch: Default setting ➔ position 1. At present, positions 2+3 are not supported.
Connections for: • DBUS • 24 V DC • R-ABUS	**Connections for:** • 24 V DC mains power supply SRT / SRD • ZBUS and ABUS • R-ABUS • DBUS (2x) • IO port (1x) (normal call and call lamp output preset on delivery) • 24 V DC (2x) mains power supply for room components (max. 2 A for both terminals together)

3.2 Termination of ZBUS and ABUS (SCB-RM)

The SCB-RM connection board is connected to the system via the ZBUS+ABUS and must be terminated according to its position on the bus.

Configuring the jumpers
The jumpers for ABUS and ZBUS enable a termination of the respective data cable. With the factory settings, the termination is switched off so the SRT / SRD can be any device on the ABUS / ZBUS.


Bus start:	Factory settings:	Bus end:
Device terminates the start of ABUS and ZBUS	No termination ➔ device is on the bus in any position between the start and end device	Device terminates the end of ABUS and ZBUS
		

If changes are made to the termination, these must always be carried out in the same way on ABUS and ZBUS.


3.3 Connecting to the system

Various ways of connecting to the system are possible thanks to different connection boards.

SCB-RM:
Connection to the system via ZBUS.
The components in the room are connected to the SCB-RM connection board.

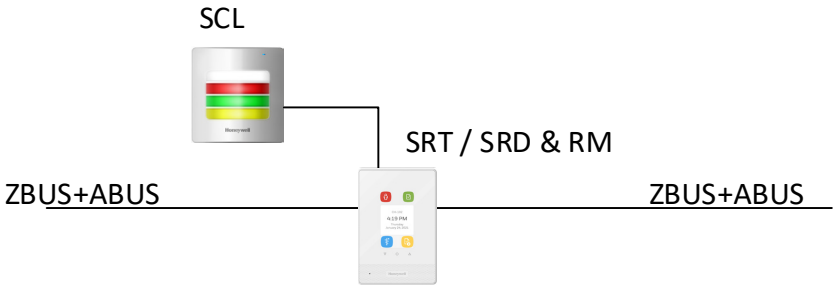


SCB-RU:
Connection via the DBUS of an SEM(+).
The components in the room are connected to the SEM(+).

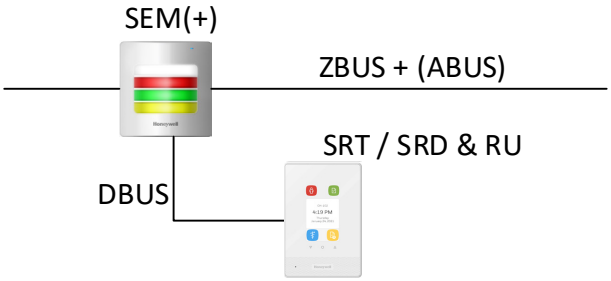


Possible scenarios in the maximum permitted expansion:
The following schematic representations always show the maximum possible expansion. Depending on the project requirements, the number of components may be reduced accordingly.

3.3.1 SRD / SRT with SCB-RM connection board to ZBUS & ABUS in systems from V12.10R200 onward


Room without intercom

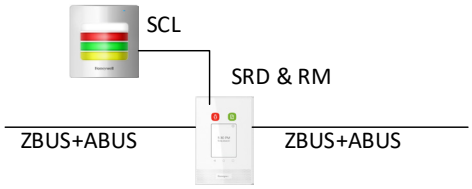


Function	
Room with audio	---
Audio at the terminal / display	---
Audio at the bed	---
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

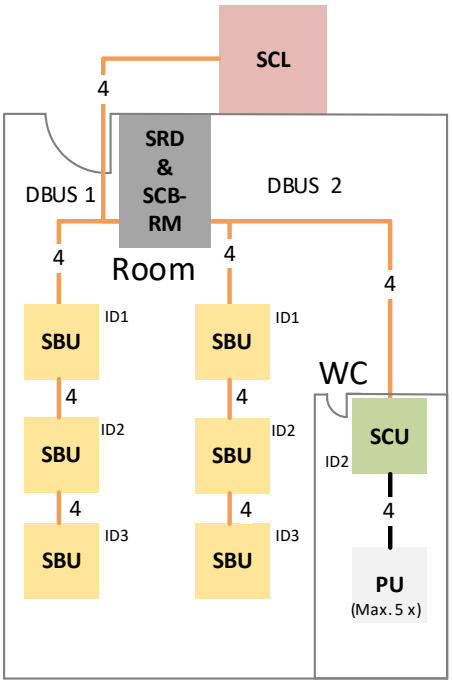


Room with audio to the bed

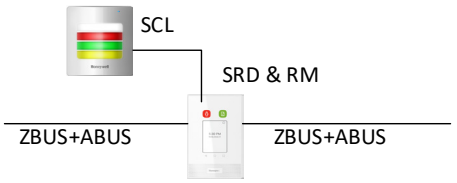


Function	
Room with audio	✓
Audio at the terminal	---
Audio at the bed	✓
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

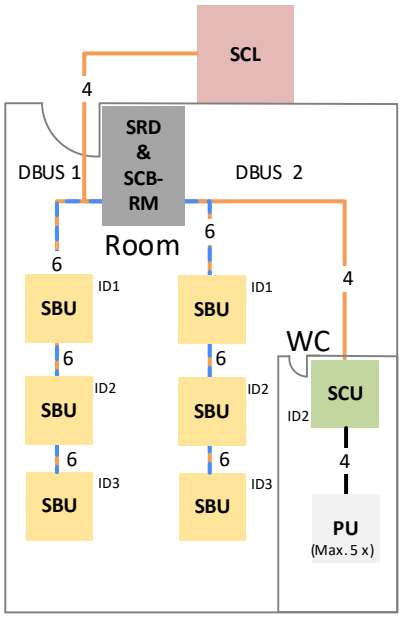


Room with audio to the terminal & bed

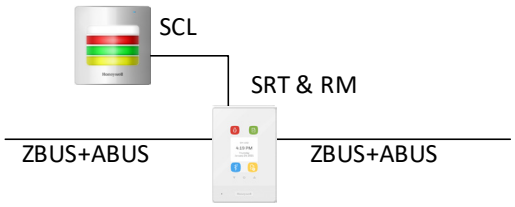


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

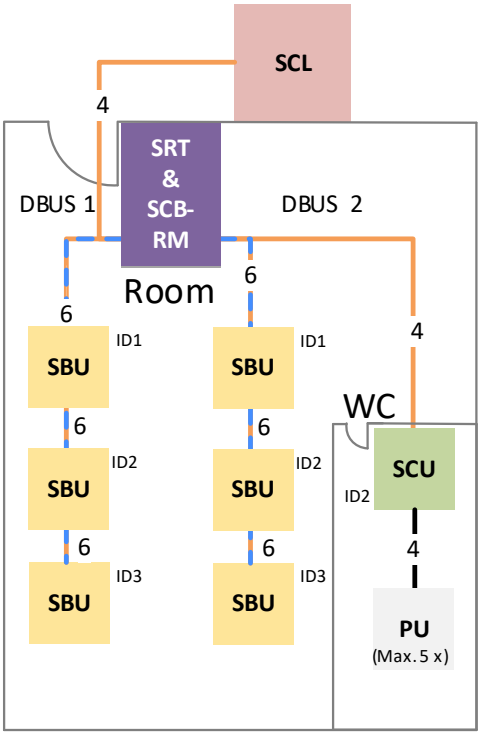


Room with audio to the terminal & bed & 1 x TV

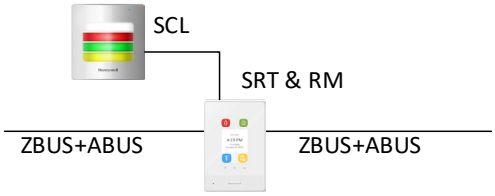


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	✓
2xTV	---
3xTV	---

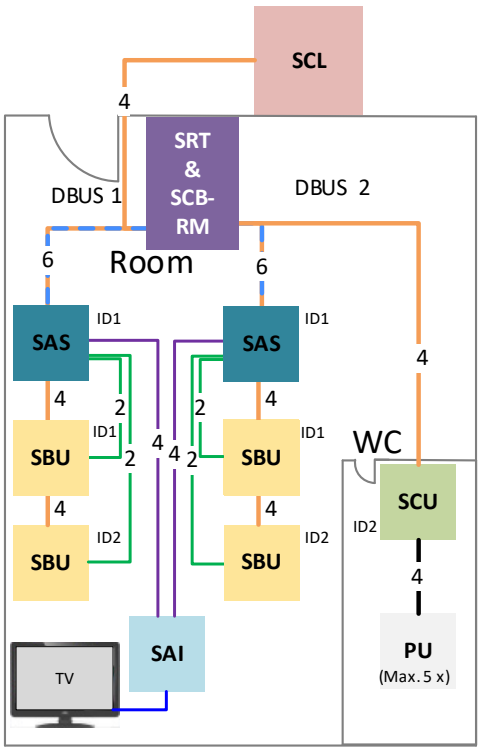


Room with audio to the terminal & bed & 2 x TV

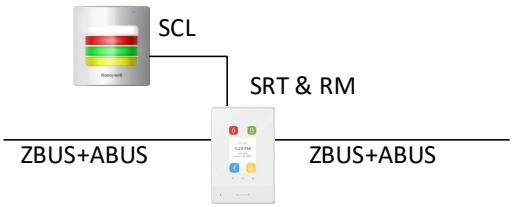


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	---
2xTV	✓
3xTV	---

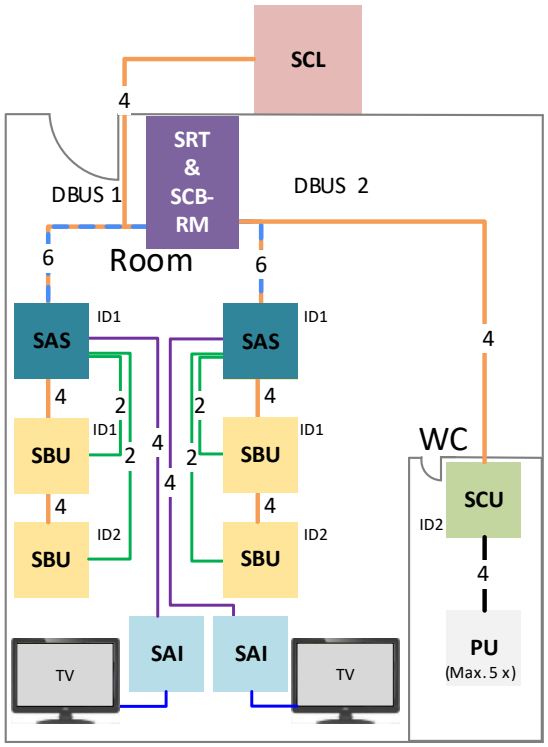

Room with audio to the terminal & bed & 3 x TV

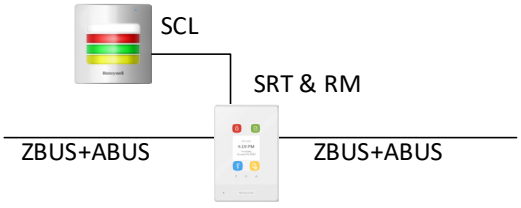


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	---
2xTV	---
3xTV	✓

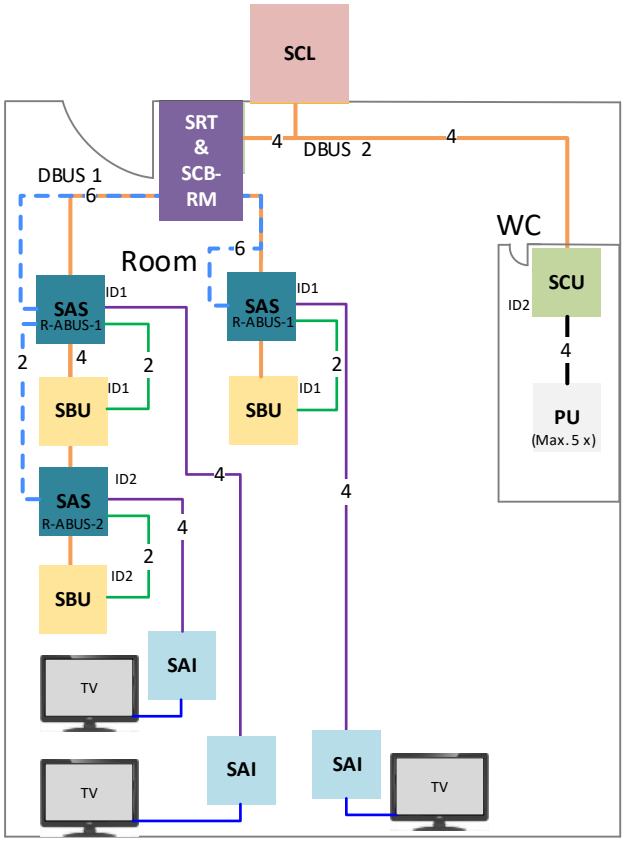


3.3.2 SRD / SRT with SCB-RU connection board to DBUS of SEM / SEM+ in systems from V12.10R200 onward


Room without intercom

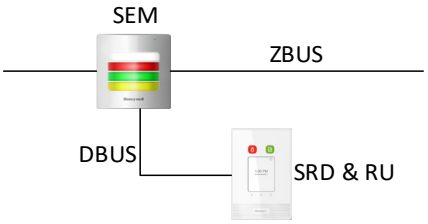


Function	
Room with audio	---
Audio at the terminal / display	---
Audio at the bed	---
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

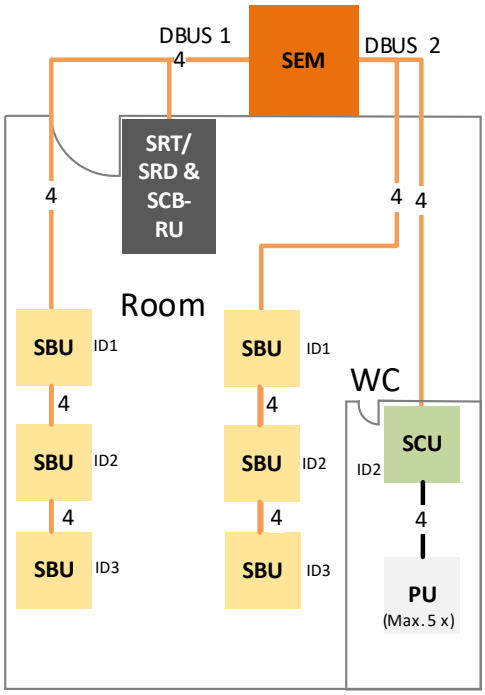


Room with audio to the bed

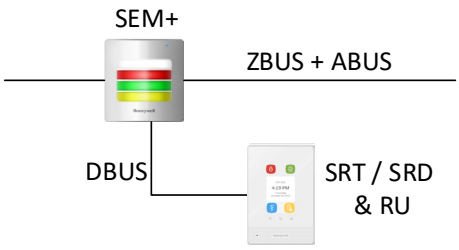


Function	
Room with audio	✓
Audio at the terminal	---
Audio at the bed	✓
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

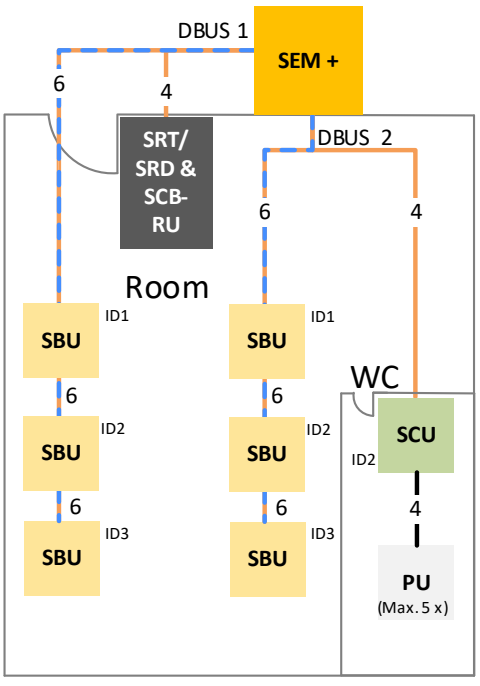


Room with audio to the terminal & bed

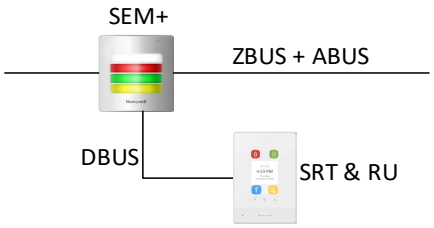


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	---
1xTV	---
2xTV	---
3xTV	---

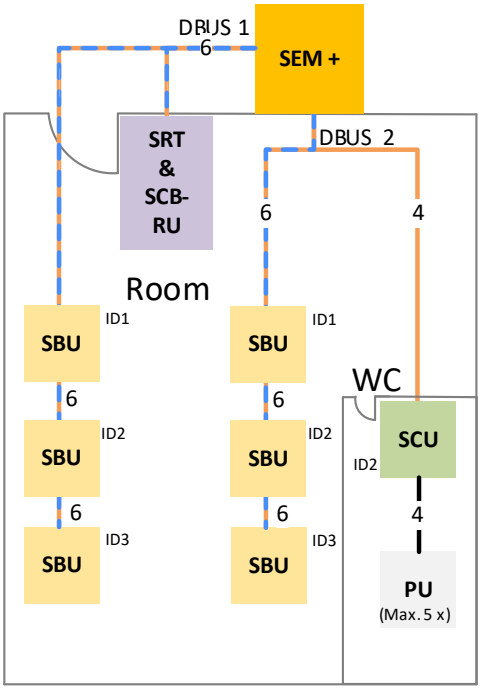


Room with audio to the terminal & bed & 1 x TV

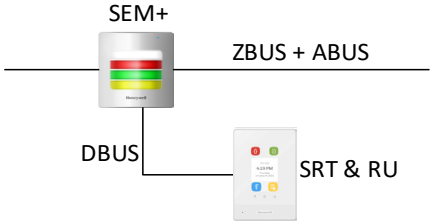


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	✓
2xTV	---
3xTV	---

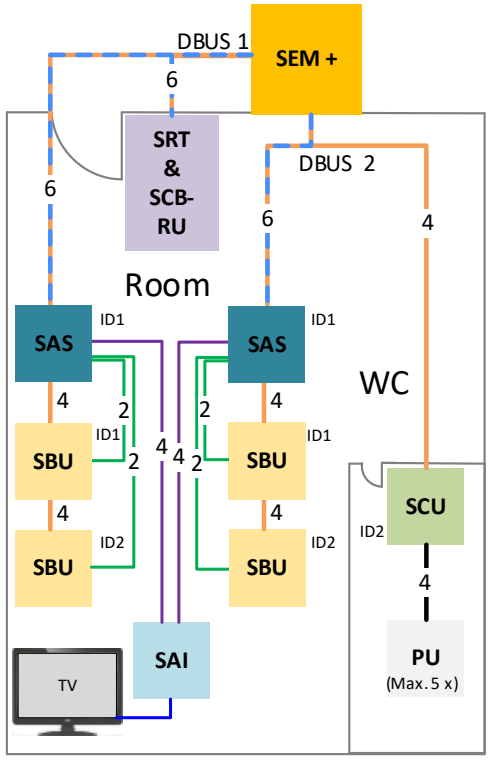


Room with audio to the terminal & bed & 2 x TV

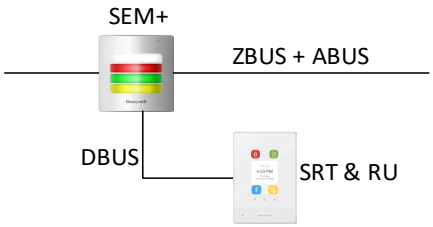


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	---
2xTV	✓
3xTV	---

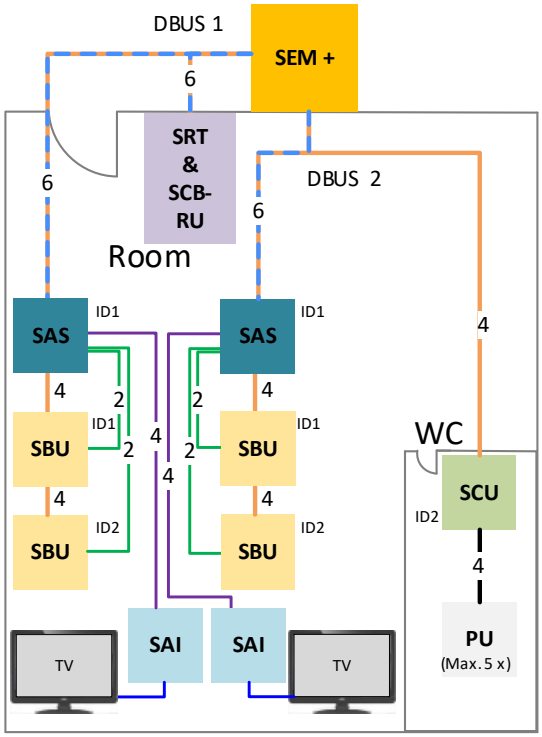

Room with audio to the terminal & bed & 3 x TV

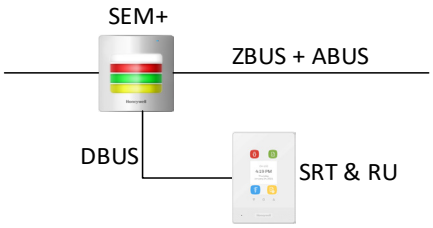


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	✓
TV sound at the bed	✓
1xTV	---
2xTV	---
3xTV	✓

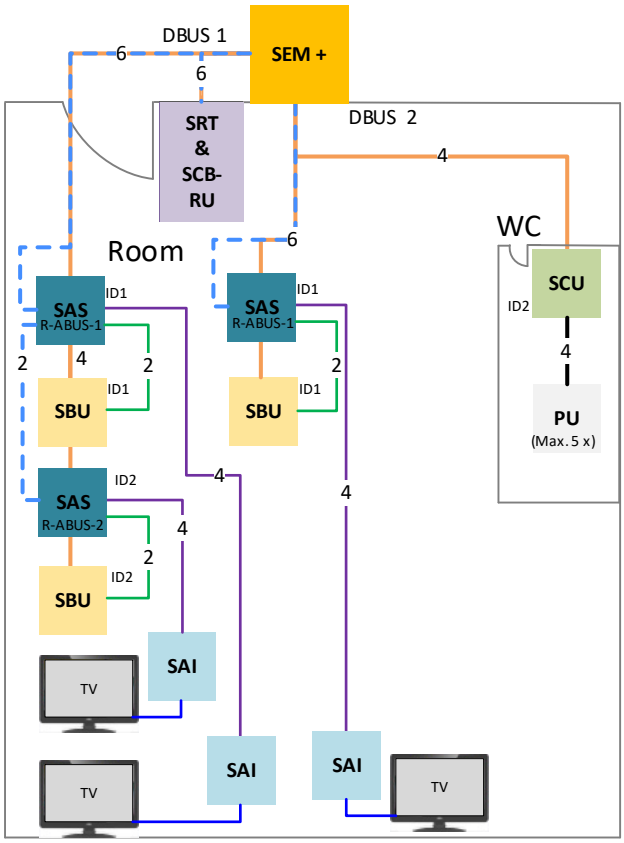


3.3.3 SRD / SRT in systems V10 / V11


Room without audio

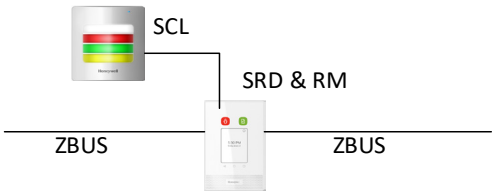


Function	
Room with audio	---
Audio at the terminal	---
Audio at the bed	---

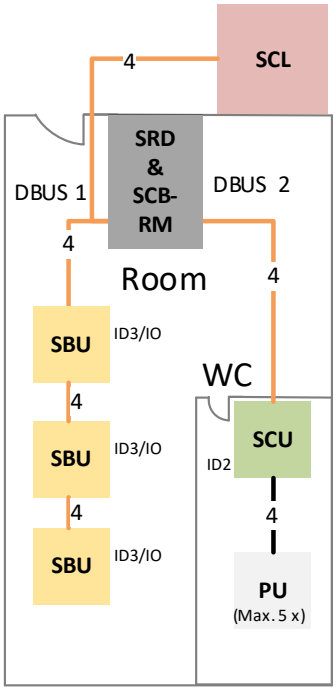


Room with audio

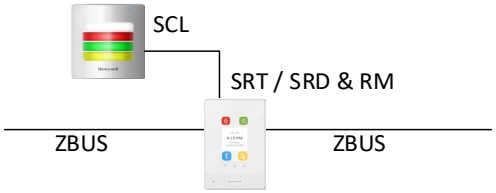


Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	---

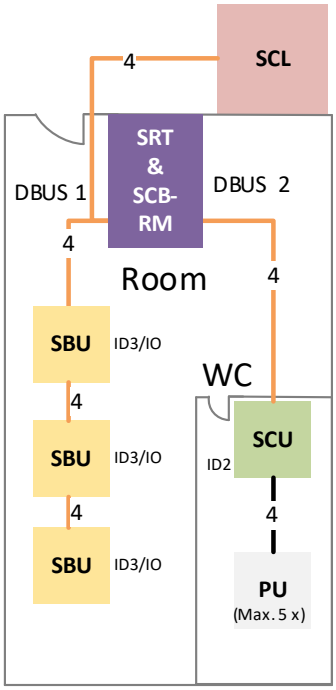


Room without audio

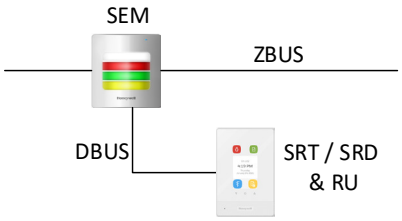


Function	
Room with audio	---
Audio at the terminal	---
Audio at the bed	---

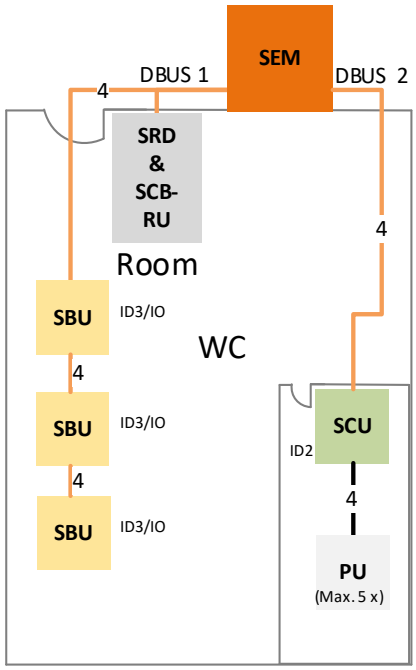

Room with audio

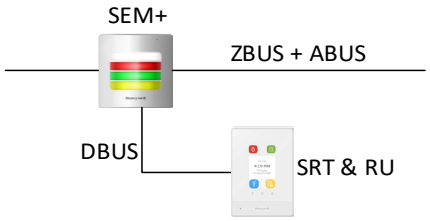

Function	
Room with audio	✓
Audio at the terminal	✓
Audio at the bed	---

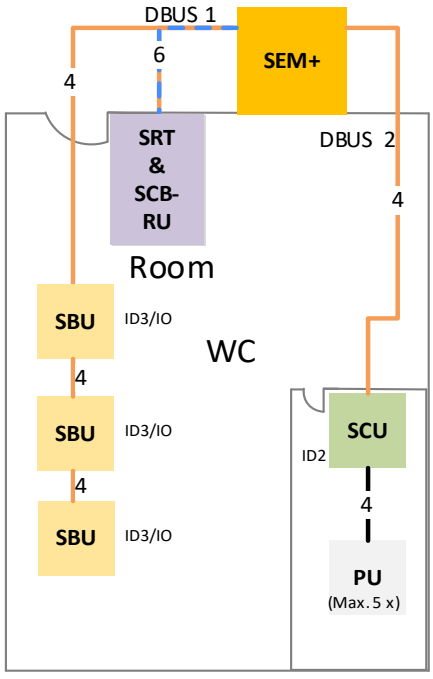

In system environments V10 / V11: passive bed(s) is/are to be configured for the bed call.


3.3.4 Explanation of symbols and lines

The table below explains the units and lines used in the schematic representations.

Unit	Description	Unit	Description	Line	Description
SRD & SCB-RU	Systevo Room Display & DBUS connection board	SCL	Corridor lamp SCL		DBUS line with mains power supply (4-wire, 1 twisted wire pair for DBUS)
SRT & SCB-RU	Systevo Room Terminal & DBUS connection board	SEM	Systevo Electronics Module without audio		DBUS and ABUS line with mains power supply (6-wire, 2 twisted wire pairs for DBUS and ABUS)
SRT/ SRD & SCB-RU	Systevo Room Terminal or Systevo Room Display & DBUS connection board	SEM+	Systevo Electronics Module + audio		Conventionally wired passive call button (4-wire)
SRD & SCB-RM	Systevo Room Display & ZBUS connection board	SBU	Systevo bed unit		R-ABUS line of the connected audio line (1 twisted wire pair)
SRT & SCB-RM	Systevo Room Terminal & ZBUS connection board	SCU	Systevo Care Unit		TV sound and mains power supply for SAI (4-wire, 1 twisted wire pair for sound)
SRT/ SRD & SCB-RM V	Systevo Room Terminal or Systevo Room Display & ZBUS connection board	PU (Max. 5 x)	Passive call button (becomes pull cord unit with adapter 88880C5)		SPDIF connecting cable
	TV set with RC 5/6 protocol and optical sound output (SPDIF)	SAI	Systevo Audio Interface		
		SAS	Systevo Audio Switch		

4 Operating menu

In the area above the display box (touch display), the Systevo Room Display and the Systevo Room Terminal have touch-sensitive buttons for setting / cancelling the presence and for triggering a call. Display and operating functions are executed via the touch display. Beneath the display box there are operating buttons that execute functions when pressed.

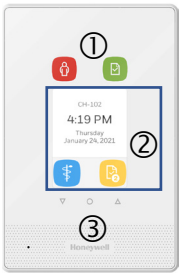SRT	SRD		
		①	Call button and presence push button outside the display box
		②	Display box
		③	Buttons respond to touch

Essentially, a distinction is made between different user groups:

- **Care staff**
  - Operate call system functions
    - Set / cancel presence
    - Trigger call(s)
    - Edit triggered calls
    - Activate/deactivate services
    - Make collective announcements (SRT only)
    - Respond to room/bed from priority list
  - Operate call system functions with password
    - Edit priority and response lists
- **Technician**
  - Pressing and holding (3s) the arrow down button opens the keyboard display for the technician to enter their password.

  - This enables information to be displayed about:
    - Bus connection (address)
    - Device (SRT/SRD)
    - Connection unit
  - Press the circle button to exit the technician menu.

- **Cleaning staff**
  - Pressing and holding (3s) the arrow circle button starts cleaning mode. During this period (15s), the surface can be cleaned without any operating functions or calls being triggered. The remaining time is shown on the display. Press and hold the circle button to exit cleaning mode early.

When a virtual button is triggered in the display box, this is indicated by a white dot in the upper right corner of the button.



5 Notes on commissioning

- Always use up-to-date software.
- If necessary, an update is performed with the FileUpdate program in the usual manner.
- SRT/SRD with the SCB-RM connection board for ZBUS are integrated into the system in the usual manner (address assignment, configuration, database creation).


6 Configuration

6.1 SCB-RM connection board

After the usual ZBUS addressing and subsequent creation of the database, the SRT / SRD is displayed with its own symbol after reading out the system data in the tree structure of the cp99 configuration program.
Configuration is carried out in the program cp99config as usual. SRD/SRT have their own symbols in the device display.

Symbol	Terminal
	SRT
	SRD




6.2 SCB-RU connection board

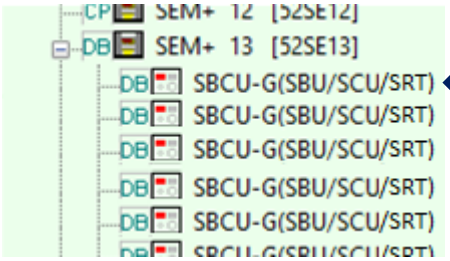

When using the SCB-RU connection board, an SRT / SRD is assigned in the properties of an SEM / SEM+ as a DBUS unit in the same way as a bed unit.

7 Scope of delivery / accessories

The Systevo Room Terminal and the Systevo Room Display are combined with the connection boards SCB-RM and SCB-RU in equal measure. Adapters are available for installation on existing ZT99 / ZT 95 connection boards.

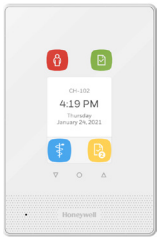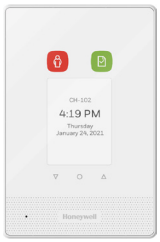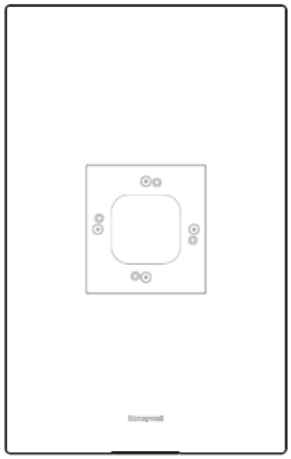	Part No.	Description	Short description
	74920A1	Systevo Room Terminal	SRT
	74920B1	Systevo Room Display	SRD
	74920Z1	Systevo Connection Board Room Module	SCB-RM
	74920Z2	Systevo Connection Board Room Unit	SCB-RU
	74920Z3	ZT95/ZT99 adapter	

8 Technical data

	SRT 74920A1	SRD 74920B1	SCB-RM 74920Z1	SCB-RU 74920Z2
General				
Approvals / certifications	CE, VDE 0834, UL 1069			
Ambient conditions				
Application temperature	+5 °C – +40 °C			
Storage temperature	-20 °C – +70 °C			
Humidity	10% to 90% (non-condensing)			
Protection class	IP 20		IP 20 (with connected SRD/SRT)	
Electrical data				
Mains power supply	24 V DC +/- 10%			
Current consumption when idle at 24 V	Display off: 31 mA Display on: 67 mA		23 mA	Not applicable (passive device without power requirements)
Max. current consumption at full utilisation of the CPU, display and audio at 24 V	158 mA	146 mA	64 mA	Not applicable (passive device without power requirements)
Current consumption in regular operation with average CPU, display and buzzer utilisation at 24 V	92 mA	98 mA	37 mA	Not applicable (passive device without power requirements)
Buzzer volume	---		45 dB (A) ~ 65 dB (A)	---
DBUS termination	Not applicable		---	---
R-ABUS termination	Not applicable		---	---
ABUS termination	Not applicable		Bus device Start device Stop device	Not applicable
ZBUS termination	Not applicable		Bus device Start device Stop device	Not applicable
ZBUS topology / termination / length	Not applicable		Only bus, jumpers on the circuit board, 500 m	Not applicable
ABUS topology / termination / length	Not applicable		Only bus, jumpers on the circuit board, 500 m	Not applicable
R-ABUS topology / termination / length	Not applicable		Bus and radial, max. 200 m	Not applicable
DBUS data rate	115200bps			
Number of DBUS devices on a DBUS	3 + 1 3 identical devices possible at the same DBUS line			
Passive input	Not applicable	Not applicable	0V ~ 24 V +/-10% DC	Not applicable
Passive output	Not applicable	Not applicable	Max. 100 mA open collector to GND	Not applicable
Connecting terminals	Not applicable	Not applicable	Max. three 0.6 mm wires / two 0.8 mm wires per screw terminal	
Mechanical data				
Dimensions (W x H x D)	100 x 152 x 15 mm		94 x 146 x 25.5 mm	
Packaging dimensions (W x H x D)	144 x 190 x 42 mm			
Weight	136 g	131 g	111 g	72 g
Antimicrobial	Yes (apart from the glass surface)		Yes	
Fire protection class	V0			
UV resistant	Yes (apart from the glass surface)		Yes	
Housing material	White plastic: PC+ABS-FR3010 (8% antimicrobial)			
Housing colour	Lyric white 500N			
Display data				
Display dimensions (W x H)	Active area: 43.2 x 57.6 mm Outside dimensions: 98.85 x 147.55 mm		---	---
Display glass type	Gorilla Glass (GG3)		---	---
LCD type	Colour TFT		---	---

Disinfectants

70% Isopropyl Alcohol, Bacillol AF Surface disinfectant, Clorox Bleach 10%, DESCSEPT AF WIPES, Sterillum (floor), Sani-Cloth HB, Sani-Cloth Plus, Super Sani-Cloth, 70% Isopropyl Alcohol Wipes, CaviWipes, Virex 256, 409 Glass and Surface Cleaner, Windex Blue, Gentle Dish Soap and Water (Dawn)

Notes

Notes

Novar GmbH a Honeywell Company
Forumstraße 30
41468 Neuss, Deutschland
Telefon: +49 2131 40615-600
Fax: +49 2131 40615-606
Website: www.ackermann-clino.com
E-Mail: info@ackermann-clino.com

Honeywell

Technical changes reserved!
© 2022 Honeywell International Inc.