Honeywell | Intelligent Life Care



Systevo Informations-Display

(For Software V10, V11, V12)

Part-No. 74659B1

GB Installation and commissioning instructions

89500A2.GB0
04.2023

Intended purpose
This products may only be used for the applications outlined in the catalogue and in the technical description, and only in conjunction with the recommended and approved external devices and components.
This documentation contains registered and unregistered trademarks. All trademarks are the property of the respective owners. The use of this documentation does not grant you a licence or any other right to use the name, logo and/or the label.
This documentation is subject to the copyright of Honeywell. The content must not be copied, published, modified, distributed, transmitted, sold or changed without the express prior written permission of Honeywell.
The information contained in this documentation is provided without warranty.

Safety-related user information
This manual includes all information required for the proper use of the products described.
In order to ensure correct and safe operation of the product, all guidelines concerning its transport, storage, installation, and mounting must be observed. This includes the necessary care in operating the product.
The term 'qualified personnel' in the context of the safety information included in this manual or on the product itself designates:

- project engineers who are familiar with the safety guidelines concerning patient call systems incl. associated components.
- trained service engineers who are familiar with the components of patient call systems and the information on their operation as included in this manual.
- trained installation or service personnel with the necessary qualification for carrying out repairs on patient call systems incl. associated components or who are authorised to operate, ground and label electrical circuits and/or safety equipment/systems.

Symbols
The following information is given in the interest of personal safety and to prevent damage to the product described in this manual and all equipment connected to it.
Safety information and warnings for the prevention of dangers putting at risk the life and health of user and maintenance personnel as well as causing damage to the equipment itself are marked by the following pictograms. Within the context of this manual, these pictograms have the following meanings:



Warning - Designates risks to person and/or machine. Non-compliance will create risks to person and/or machine. The level of risk is indicated by the word of warning.



Note - Important information on a topic or a procedure and other important information!



Standards and guidelines - Observe configuration and commissioning information in accordance to the national and local requirements.

Demontage



In accordance with Directive 2012/19/EU (WEEE), after being dismantled, electrical and electronic equipment is taken back by the manufacturer for proper disposal.

© Honeywell International Inc./technical changes reserved!
This documentation is subject to copyright law and, as per Sections 16 and 17 of the German Copyright Act (UrhG), is neither permitted to be copied nor disseminated in any other way. Any infringement as per Section 106 of the UrhG may result in legal action.

Table of contents

1 General / Application 4
1.1 Functions 4
1.2 Associated documents 5
1.3 Accessories 5
1.4 Abbreviations 5
1.5 Requirements 5
2 Installing the display 6
2.1 Dimensions of the Information Display 6
3 Installing the Information Display 7
3.1 Wiring 7
3.2 Connection 8
3.3 Mode switch 10
3.4 BUS termination 10
3.5 Service button 10
4 Switching on 11
4.1 Switching on the SINF 11
4.2 Commissioning 11
5 Notifications on the display 12
5.1 Depictions on the display 12
5.2 Table of symbols 13
6 Accessories / replacement parts 14
6.1 Set of replacement parts 14
7 Technical specifications 15

1 General / Application

An addition to Systevo call systems, the Systevo Information Display is a large-format alphanumeric display for showing system messages with room and bed identification in plain text, and displaying symbols to show the type of call that has been made. It has a built-in loudspeaker, which is used for announcements and as an acoustic signal for calls. In idle mode and when the server/workstation is connected, the device displays the time.



Additional and current information

The described features, specifications and product related information in this manual correspond to the date of issue (refer to date on the front page) and may differ due to modifications and/or amended Standards and Regulations of the System design, Installation and Commissioning.

Updated information and declaration of conformity are available for comparison on the www.ackermann-clino.com homepage.

1.1 Functions

- Integrated loudspeaker
- Colour display with standard RGB/LED panels
- Suitable for wall bracket
- Suitable for ceiling mounting (single/double display)
- Short ceiling mounting of up to approx. 100 mm
- Adjustable ceiling bracket of 400–800 mm
- No need to open the housing for wiring
- Connecting terminals ensure easy cable connection
- RJ-45 western socket for easy connection of a second display

1.2 Associated documents

Description	Part No.
Commissioning instructions for patient call system	89440C4
Systevo Control IP+ Installation instruction	89490A1
Mounting instructions for wall mounting SINF	89500A4
Mounting instructions for ceiling mounting SINF	89500A5

1.3 Accessories

Description	Part No.
Systevo Information Display	74659B1
Wall bracket for Systevo Information Display	74659Z4
Ceiling bracket for Systevo Information Display	74659Z5
Replacement parts for 74659B1	74659Z6
Set with connecting terminals for STIP/SEM/SEM+/**SINF**	79CM307ZP

1.4 Abbreviations

SINF	Systevo Information Display
STIP	Systevo Touch Terminal IP
SEM (+)	Systevo electronics module (+)
RGB	Red/green/blue
LED	Light-emitting diode
ZBUS	Corridor data bus
ABUS	Audio bus
Vesa (FDMI)	Video Electronics Standards Association (Flat Display Mounting Interface)

1.5 Requirements

- System release V10, V11 or V12 for standard operation installed
- System release V12.xx with licence for enhanced functions installed

When using the SINF in V10.x / V11.x environments, the current patch version of the configuration program CP99Config must be installed. Current software in protected downloads area under www.Ackermann-clino.com/de

2 Installing the display

Details on how to mount the display on the wall or ceiling can be found in the respective mounting instructions (included in the scope of delivery of the respective mounting set).

Mounting instructions for wall mounting SINF➔ 89500A4
Mounting instructions for ceiling mounting SINF ➔ 89500A5

2.1 Dimensions of the Information Display

Front view

Dimensions (W x H) = 855 mm x 155 mm




Back view

Vesa (FDMI) 100 x 100 mm



Side view

Dimensions (D) = 66 mm



Cable entry on the back

Connections for system cables and 1 western socket for connecting to a second display

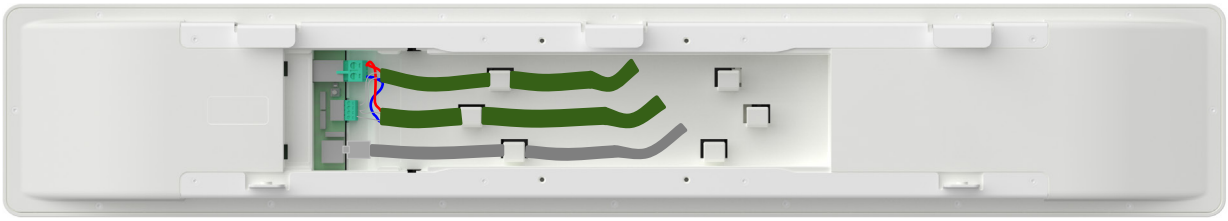


Fig. 1: Device views and dimensions

3 Installing the Information Display

3.1 Wiring

The Information Display is connected to the power supply at the back, with no need to use tools to open the device. All you have to do to connect the device is to unlock and remove one cover plate. The connection concept enables one Information Display to be connected to the ZBUS/ABUS and mains power supply. To connect a second Information Display, a standard patch cable is used as a connecting line between the two Information Displays. This significantly reduces the installation time.


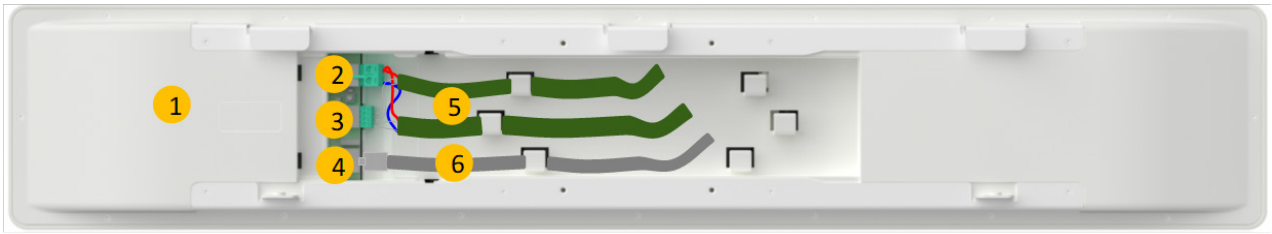



Fig. 2: Back view

1	Back of the display
2	Connection for the mains power supply
3	ZBUS / ABUS connecting terminals
4	RJ-45 western socket
5	2 x system cables
6	Standard patch cable


3.2 Connection

Wall bracket and ceiling bracket for single-sided mounting:
When mounting a single-sided display on a wall or ceiling, the ABUS/ZBUS is connected in the usual way.

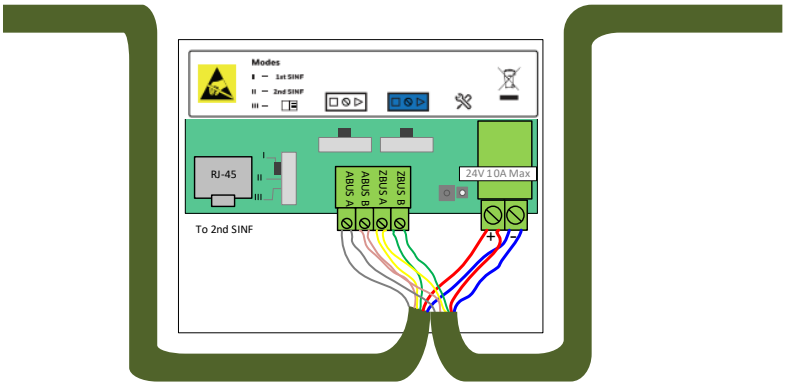

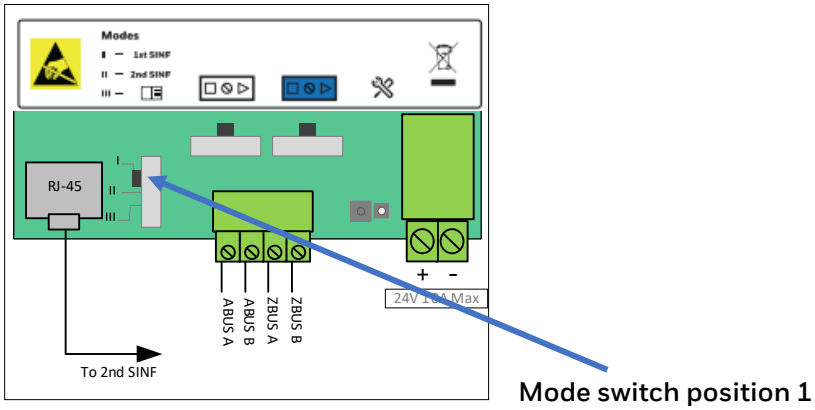


Double-sided Information Display:
Only one of the displays is connected to ABUS & ZBUS in the usual way. The second display is connected using the patch cable supplied.

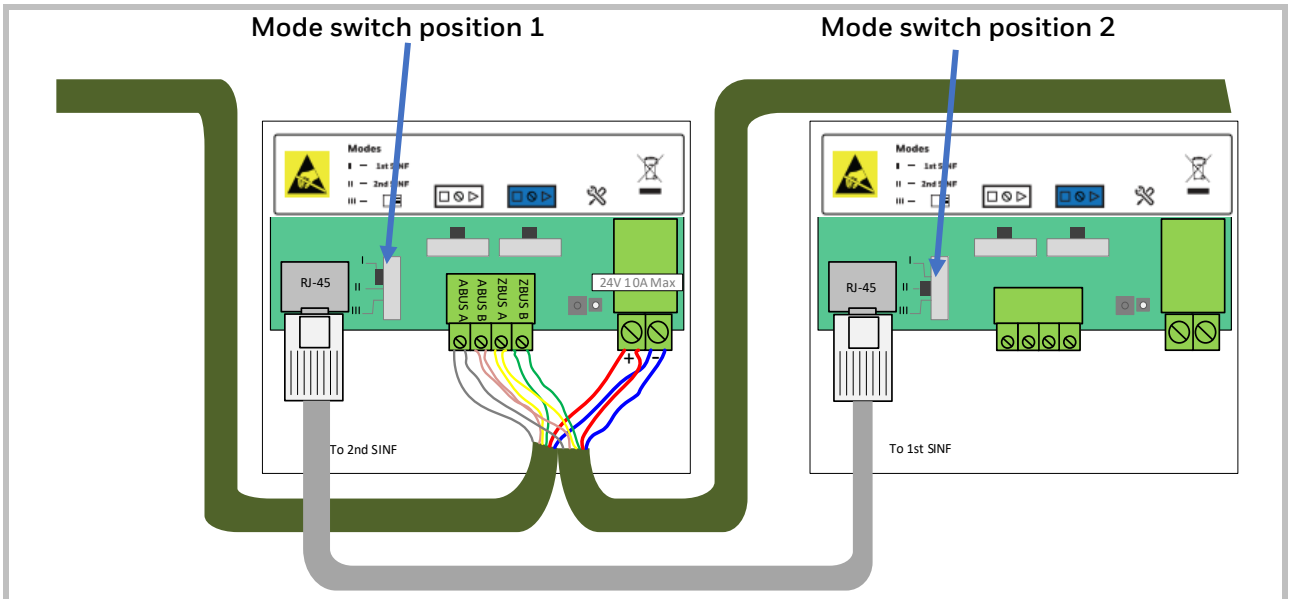

The standard patch cord (included in 74659Z5) is used to connect the first SINF to the second SINF.

Double-sided Information Display:

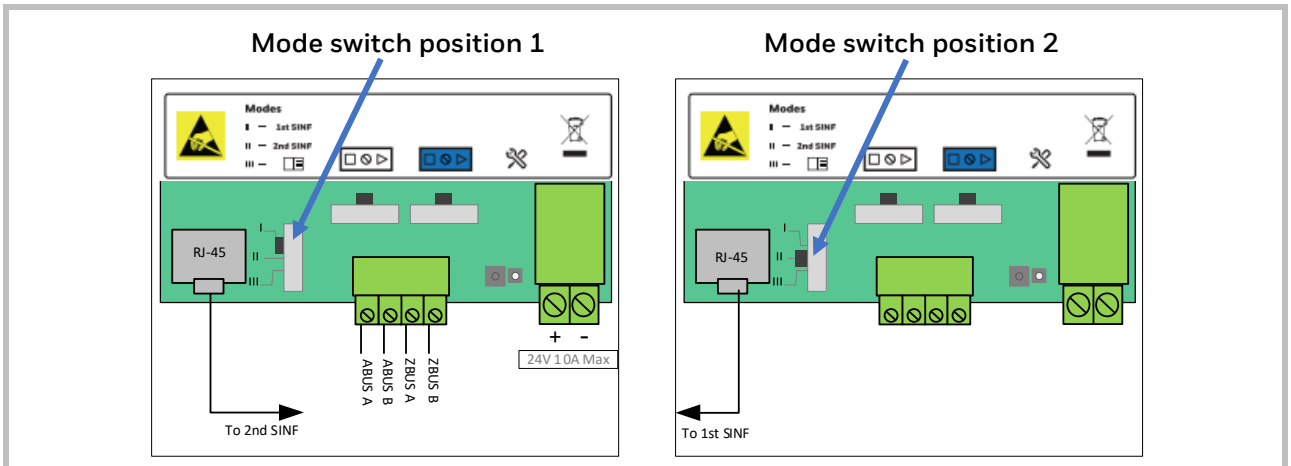

The standard patch cord (included in 74659Z5) is used to connect the first SINF to the second SINF.

3.3 Mode switch

The mode switch determines how the SINF is connected to the data bus.
This is set to position 1 as standard on delivery.


Mode switch position 1		• Setting for SINF for wall mounting • Setting for SINF for single-sided ceiling mounting • Setting for first SINF for double-sided ceiling mounting
Mode switch position 2		• Setting for second SINF for double-sided ceiling mounting

3.4 BUS termination

The slide switches for ABUS and ZBUS termination enable a termination of the respective data cable. In the factory setting, the termination is switched off, so the SINF can be installed as any device on the ABUS/ZBUS.


Factory settings:

No termination ➔ Device installed at any point on the data bus




BUS start:

Device terminates the start of ABUS and ZBUS




BUS end:

Device terminates the end of ABUS and ZBUS



3.5 Service button

The service button can be used to carry out a function test of the display and loudspeaker

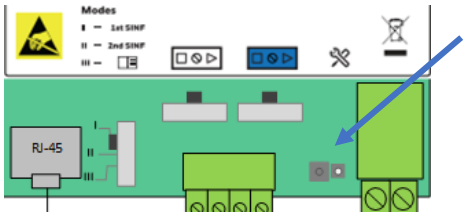

- Press and hold service button for approx. 3 seconds
- A beep sounds to indicate the start of the test mode, the message **“TEST START”** appears on the display followed by the number 10, which counts down to 0 in seconds.
- This is followed by a gong sound to test the audio
- A display test is then carried out (complete display appears for 5 seconds at a time in red, green and then blue).
- At the end of the test mode, it automatically switches to the regular operating mode.

During the test run on a double display, the standard operating function of the second SINF is paused.
When carrying out a test run of the second SINF, the function of the first SINF is not affected.

4 Switching on

4.1 Switching on the SINF

When the SINF is switched on, it displays information about the installed software version and addressing.

Approx. 20 seconds after switching on the SINF, the Honeywell logo is displayed, which signals that the device has successfully started up.		
The software version installed on the device is then displayed.		
After a few seconds, the ZBUS address and nurse call group appear.	Factory condition	
	Already addressed and configured	
The name of the SINF is then displayed.	Factory condition	
	Already addressed and configured	
Once the SINF is operational, either the time or any pending patient calls are displayed (provided it is connected to the control panel).		
If there is no connection to the control panel, “NO DATA” will appear on the display.		

4.2 Commissioning

The SINF is integrated into the system in the usual way (assign address, set up configuration, create database). For more information, see the Commissioning Instructions (89440C4).

5 Notifications on the display

Depending on the software suite used and possible licences, the SINF Information Display allows text and symbols to be displayed in different colours. When there are no calls to be displayed and when the SINF is in idle mode, the display simply shows the time. The following table shows examples of possible notifications that may be shown on the display.

	**Normal call**
	**Bathroom/WC call**
	**Doctor call**
	**Presence 1**
	BUS fault
	Display time

Fig. 3: Example of display options

5.1 Depictions on the display



Fig. 4: Display

1	Symbol for the call type displayed (see Table of symbols, chapter 5.2)
2	Location from which the call originates (max. 12 characters)
3	Additional calls roll across the display.

The symbols used to depict the call types depend on which version is licensed. In the standard version, the symbols are shown in simplified form (see Table of symbols, Chapter 5.2).

5.2 Table of symbols

Nurse and staff call							
[No]	Call type	Standard	Comfort	[No]	Call type	Standard	Comfort
10	Vital call			19	Bathroom/WC call		
11	Answering (a call)			21	Diagnostics call 1		
12	Remind call			20	Diagnostics call 2		
13	Microphone enabled			22	Priority call		
14	Dinner call			23	Fire alarm		
15	Staff call			24	Emergency bathroom/WC		
16	Telephone call			25	Emergency call 1		
17	Plug-out call			26	Emergency call 2		
18	Call						

Call doctor				Call technician			
[No]	Call type	Standard	Comfort	[No]	Call type	Standard	Comfort
28	Reanimation call			4	Fault acknowledged		
29	Doctor call			5	BUS fault		
30	Heart emergency call			6	Hardware fault		

Presence call			
[No]	Call type	Standard	Comfort
9	Presence 1		
8	Presence 2		
7	Presence 3		

Special			
[No]	Call type	Standard	Comfort
31	Special		



In the licensed version, the comfort symbols are used. These can be configured in any colour combination in a later software version.

6 Accessories / replacement parts

The following accessories and replacement parts are available for the SINF Information Display:

Designation	Part No.
Wall mounting adapter	74659Z4
Ceiling mounting set 100 mm & (400–800 mm)	74659Z5
Set of plastic replacement parts and screws for display mounting	74659Z6
Set with connecting terminals for STIP/SEM/SEM+/**SINF**	79CM307ZP

6.1 Set of replacement parts

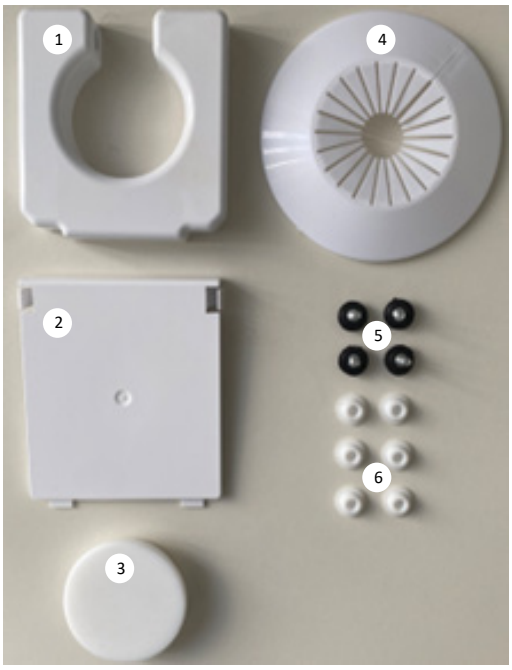


Fig. 5: Set of replacement parts

The set of replacement parts contains the following components:

①	Plastic bracket for Vesa mounting	➔ 1 pc.
②	Cover flap for connecting terminals	➔ 1 pc.
③	Plastic cap for sealing the installation tube	➔ 1 pc.
④	Rosette to cover the installation opening	➔ 1 pc.
⑤	Knurled screws to affix the SINF to the VESA plate	➔ 4 pc.
⑥	Plug to seal the holes in the mounting tube	➔ 6 pc.

7 Technical specifications

General	
Certifications / standards	CE, VDE0834, UL 1069
Environmental conditions	
Application temperature	5°C – +40°C
Storage temperature	-20°C – +70°C
Humidity	10% – 90% (non-condensing)
Protection class	IP20
Electrical data	
Mains power supply	24 V DC +/- 10%
Mean current consumption of time display in idle mode	225 mA @ 24 V
Maximum operating state (pale grey symbol, white text, 100% audio volume)	865 mA @ 24 V
Normal operating state (Full-sized symbol, blue text, 100% audio volume)	590 mA @ 24 V
Economy operation (red bar symbol and red text, 100% audio volume)	460 mA @ 24 V
ABUS termination	BUS termination / start termination / end termination
ZBUS termination	BUS termination / start termination / end termination
ABUS topology / termination / length	Only BUS, slide switches on the circuit board / 500 m
ZBUS topology / termination / length	Only BUS, slide switches on the circuit board / 500 m
Connecting terminal supply	10 A nominal power, 1.5 mm²
Connecting terminal data	3 x 0.6 mm or 3 x 0.8 mm (no flexible wires)
Mechanical data	
Dimensions (W x H x D)	855 x 155 x 66 mm
Packaging dimensions (W x H x D)	975 x 300 x 200 mm
Net weight	3060 g
UV resistant	Yes
Fire protection class	V0
Material	Main frame is plastic, back cover is plastic, BCBA cover: PC+ABS-FR3010 Mounting frame: DC51D+Z (galvanised steel plate) Front glass: PMMA
Colour	Plastic and metal parts: RAL9003 (signal white)

Installation accessories

	Wall mounting bracket Part no. 74659Z4	**Ceiling mounting set Part no. 74659Z5**
General		
Certifications / standards	CE, VDE0834, UL 1069	
Environmental conditions		
Application temperature	5°C – +40°C	
Storage temperature	-20°C – +70°C	
Humidity	10% – 90% (non-condensing)	
Mechanical data		
Dimensions (W x H x D)	600 x 120 x 11 mm	Maximum range [*1]: 860 x 140 x 140 mm Minimum range [*1]: 460 x 140 x 140 mm Short version [*2]: 210 x 140 x 140 mm
Packaging dimensions (W x H x D)	680 x 200 x 100 mm	632 x 312 x 130 mm
Net weight	0.790 g	3.430 g
Material	Plates: DC51D+Z (Galvanised steel plate)	Plastic bracket: PC + ABS (FR3010) All plate parts: DC51D+Z (Galvanised steel plate) All tubes: Q235 (Galvanised round structural steel) Plastic caps: Silicone
Colour	RAL9003 (signal white), matt surface	

[*1] Length-adjustable mounting bracket:
Maximum range ➔ full installation length
Minimum range ➔ shortest installation length
[*2] Short version ➔ short mounting bracket

Novar GmbH a Honeywell Company
Forumstraße 30
41468 Neuss, Germany
Internet: www.ackermann-clino.com
E-Mail: info@ackermann-clino.com

Technical changes reserved!

© 2023 Honeywell International Inc.