

Dear Customer,


Welcome Aboard! Thank you for connecting to Safaricom Home Fiber.

Here are Easy Steps to Change WI-FI Name & Password.

TO CHANGE YOUR WIFI NAME AND PASSWORD THROUGH YOUR BROWSER FOLLOW THE STEPS BELOW:

- Connect your device (computer, phone, tablet) to your Home fiber. Click this link https://192.168.100.1. You will be presented with the login page below:
- 2. Account: root (details also available at the back side of your router)

 Password: e.g. admin- (Check your password at the back of your router)

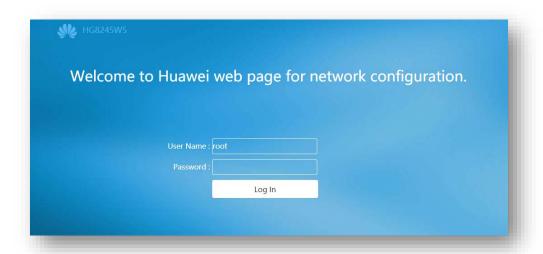

3. Once successfully logged in, you will be directed to **the page with your current Password.**Do not change anything, **click on Next** to go to next page.








4. **Input your new password** and Click Next.



Change your login password.


The login password cannot be the default one. Change it immediately.

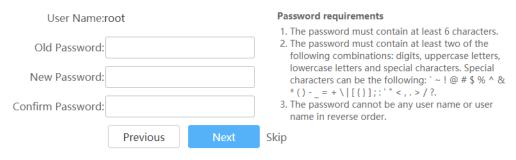

5. Once done, go back to Homepage & **restart your router**. Key in your new password on all your devices and continue enjoying Safaricom Home Fibre. Simple for You.





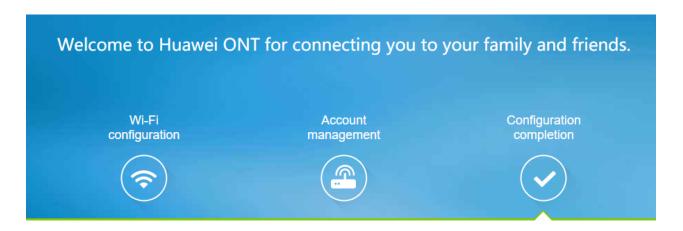

Current network connection mode: Wi-Fi

If you have modified Wi-Fi parameters, try the connection again. You can navigate to the home page and start using the ONT.

Previous Return to Home Page

Should you require more information, please do not hesitate to contact us on 400 or click here https://wa.me/254722000100 to chat Zuri or email us on safaricom.co.ke

Thank you for choosing Safaricom Home Fiber. Enjoy!

