



UV-Sight carrier board for the XIAO nRF52840 Sense

UV LED driver: LED in the sight, 2-core wire to J3.
LED runs from the battery (3.4-4.2 V). D6 PWM switches Q1.
BC547 pinout (flat side facing you, legs down): C - B - E

Light sensor: D2 powers the LDR only during a measurement.
LDR head sits in the hole in the housing floor.

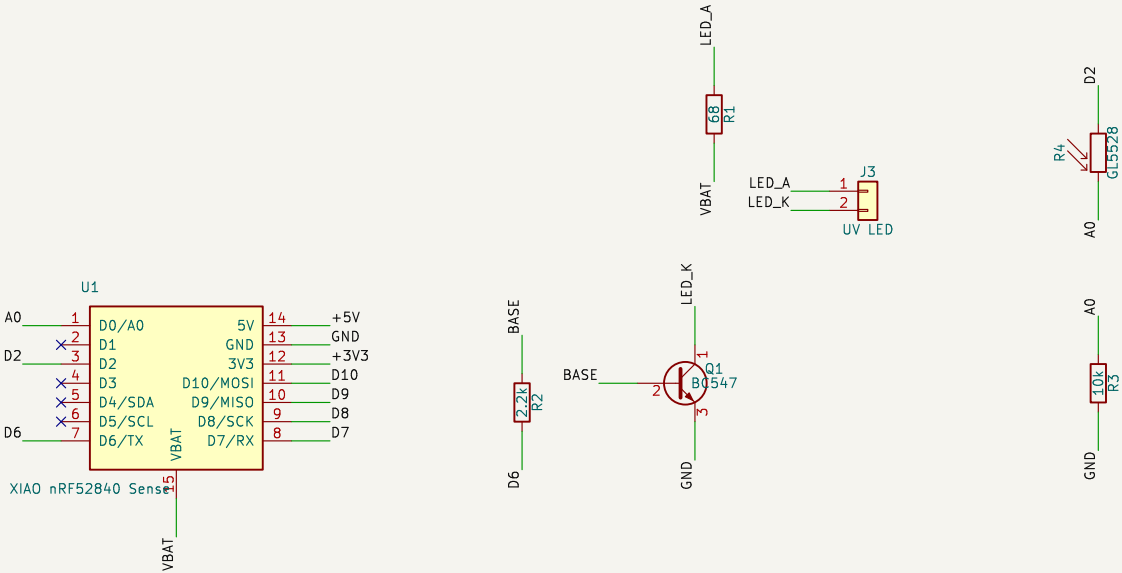

D1, D3, D4/SDA, D5/SCL stay free (reachable on the XIAO header pins).

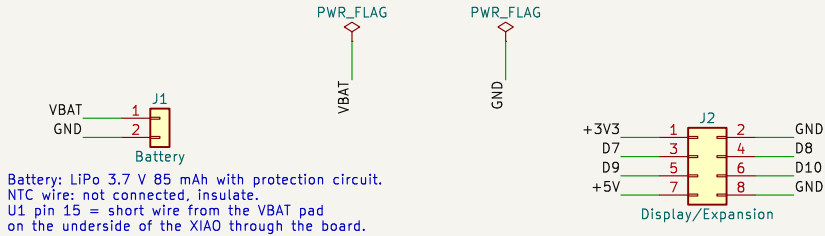

Battery: LiPo 3.7 V 85 mAh with protection circuit.
NTC wire: not connected, insulate.
U1 pin 15 = short wire from the VBAT pad on the underside of the XIAO through the board.

J2: display / expansion (unused XIAO pins)
1 3V3 2 GND
3 D7 4 D8 (SCK)
5 D9 (MISO) 6 D10 (MOSI)
7 5V 8 GND

Wiring as in the UV-Sight README (firmware 5.8)
XIAO nRF52840 Sense on 2x7 pin headers, 26.4 x 19.4 mm, 2 layers

Sheet: /
File: uv-sight-carrier.kicad_sch

Title: UV-Sight carrier board

Size: A4	Date: 2026-10-07	Rev: 2
KiCad E.D.A. kicad-cli 7.0.11+dfsg-1build4		Id: 1/1