


4.6 User Frame

The User Frame is a plane coordinate frame that can be defined on any position in space, such as a workpiece or a workbench. By referring to the positions of Origin, +X axis, and XY, the User Frame can be transformed from the World frame. The generated User Frame is as follows.

Note: you need to set the Tool Frame n before defining the User Frame.

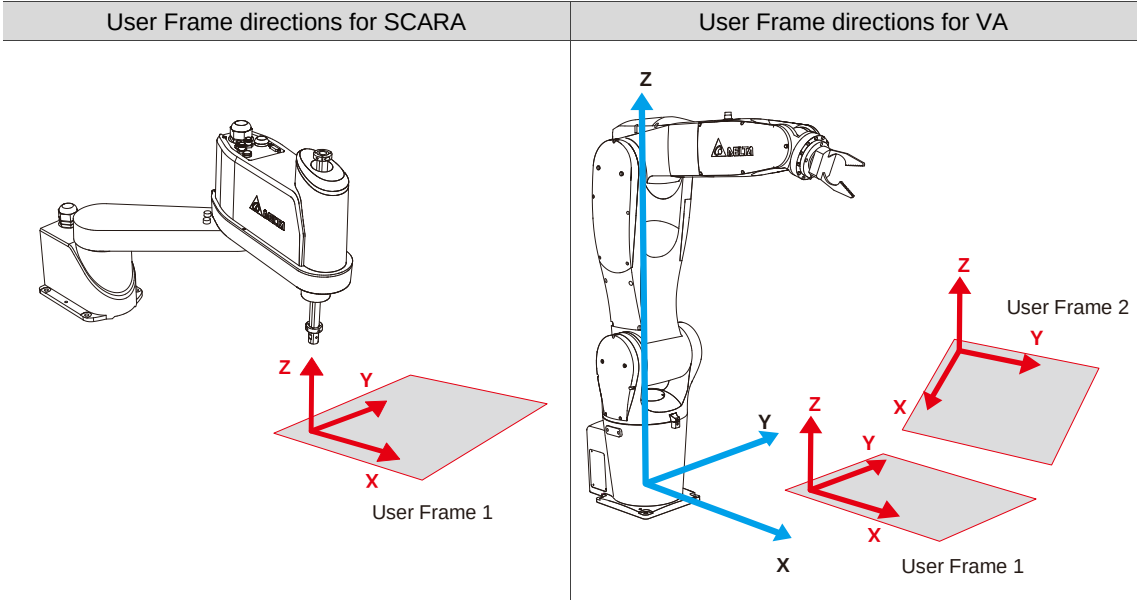

The **User Frame** tab in the Point management page:

User Frame

ID: 1

Type: OrthogonalInclined

Input: (1). Use "teach" button

	X(mm)	Y (mm)	Z (mm)
Origin	520.000	175.000	-200.000
+ X axis	530.000	175.000	-200.000
XY	530.000	202.000	-200.000

(2). Set /Get user frame data

Set

Get

Clear

■ ID

The User Frame ID (ranges 1 to 9). The default setting is 0, indicating the User Frame directions are the same as that of the World frame.