

4

- Move the robot to the PO position to be set on the rectangle. Click the **PO** table row, and then click **Teach**.

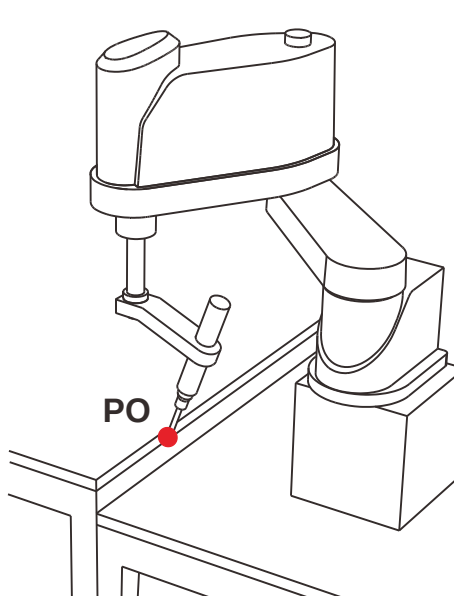


Diagram showing a robot arm positioned at the PO (Point of Origin) on a workpiece.

Software interface for Work Space configuration:

Area: Restricted Area

Status: Disable

Restricted Area DO: Disable

Show Alarm: ☒

Rectangle table:

	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	0	0	0
PY	0	0	0

Buttons: Reset, Get, Set

Motion Command(mm) section:

Please choose one point

File: Workspace

Name:

Motion: MovP

Buttons: Teach, Ext, Go

- Move the robot to the PX position to be set on the rectangle. Click the **PX** table row, and then click **Teach**.

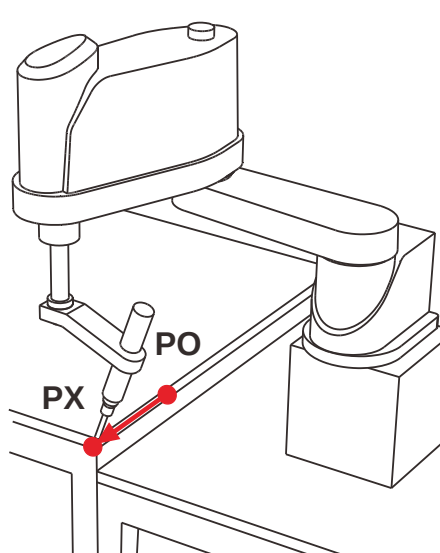


Diagram showing a robot arm positioned at the PX (Point X) on a workpiece.

Software interface for Work Space configuration:

Area: Restricted Area

Status: Disable

Restricted Area DO: Disable

Show Alarm: ☒

Rectangle table:

	X (mm)	Y (mm)	Z (mm)
PO	467	-85	-12
PX	472	-85	-12
PY	0	0	0

Buttons: Reset, Get, Set

Motion Command(mm) section:

Please choose one point

File: Workspace

Name:

Motion: MovP

Buttons: Teach, Ext, Go