


3. Move the robot to the top center of the cylinder. Select the **Center** table row, and then click **Teach** to save the current position to the X, Y, and Z columns.

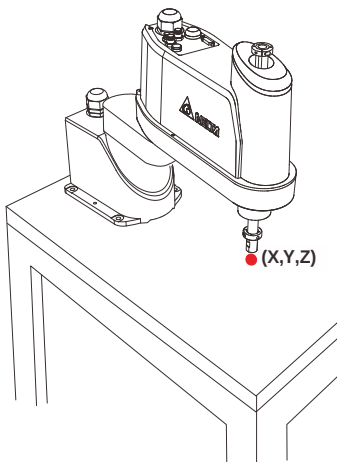

Work Space

ID 1

Type Cylinder

Status Enable

Show Alarm

Area Working Area

Restricted Area DO Enable

DO1

ON

Work Space is Closed

Cylinder	X (mm)	Y (mm)	Z (mm)	Radius (mm)	Height (mm)
Center	340	40	-20	100	100

Reset

Get

Set

Motion Command(mm)

Please choose one point


File: Workspace

Name:

Motio: MovP

Teach


Ext



4

4. Manually input the Radius (R) and Height (H) to the table.

Important: setting the height of the cylinder to a positive value indicates downward direction; a negative value indicates upward direction.

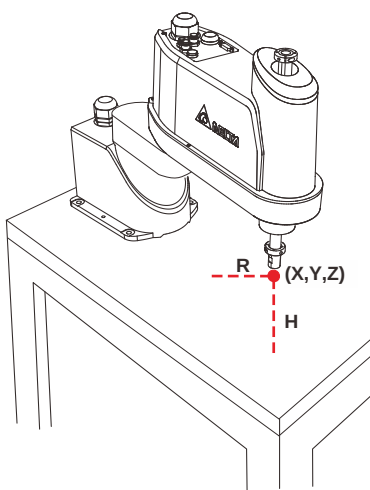

Work Space

ID 1

Type Cylinder

Status Enable

Show Alarm

Area Working Area

Restricted Area DO Enable

DO1

ON

Work Space is Closed

Cylinder	X (mm)	Y (mm)	Z (mm)	Radius (mm)	Height (mm)
Center	340	40	-20	100	100

Reset

Get

Set

Motion Command(mm)

Please choose one point

File: Workspace

Name:

Motio: MovP

Teach

Ext

