


The System DI/O pin assignments for Delta SCARA robot controller are shown as follows:

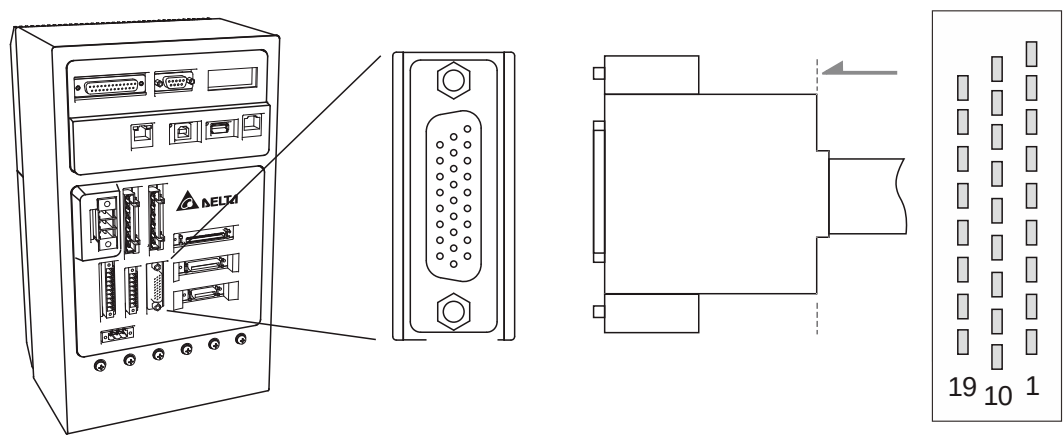

Signal	Pin No.	Description
DI1	16	E-STOP (Emergency Stop)
DI2	25	Functional Pause
DI3	8	Reset Functional Pause
DI4	18	Operation Mode selection 1
DI5	7	Operation Mode selection 2
DI6	17	Project Control 1
DI7	26	Project Control 2
DI8	9	Alarm Reset
DI_COM	5, 6	Reference voltage

Signal	Pin No.	Description
DO1+	14	Alarm Status
DO1-	15	
DO2+	11	Servo Status
DO2-	10	
DO3+	2	Moving Status
DO3-	1	
DO4+	4	Functional Pause (Functional pause status)
DO4-	3	
DO5+	19	Project Execution Status 1
DO5-	20	
DO6+	22	Project Execution Status 2
DO6-	21	
DO7+	12	Controller Ready Status
DO7-	13	
DO8+	24	Reserved
DO8-	23	