



6.1.1 System DI

The System DIs allow you to perform safety and program operations on the robot through external signals.

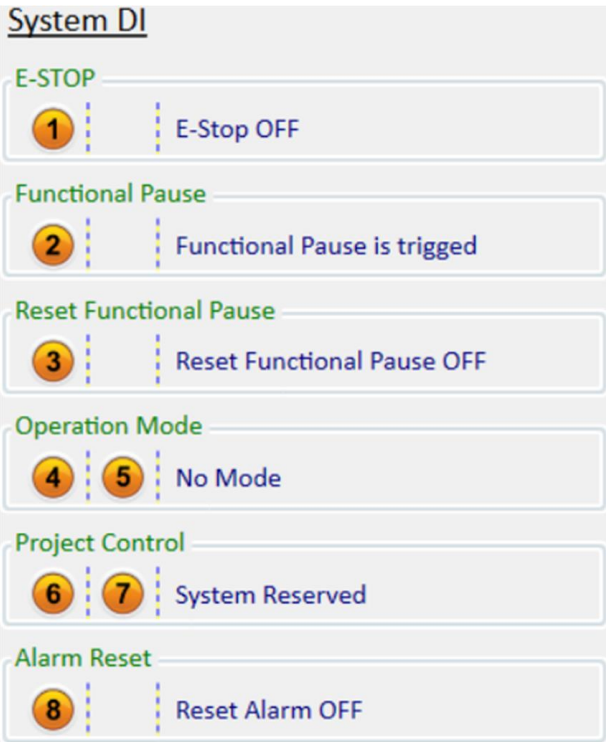

■ E-STOP (Emergency Stop)

You can trigger the System DI1 (E-STOP function) through the SYS.DIO connector on the SCARA robot controller, the Safety connector on the VA robot controller, or the E-STOP button on teach pendants (TP).



When the E-STOP function is triggered, the robot stops immediately, and the system stops running the current project and displays E#013 (# indicates the axis code).



Alarm / Warning	E#013 (Safety Stop)
Probable Cause	The E-STOP function is triggered
Recommended Action	Check if the E-STOP function of the TP or the system is triggered. The E-STOP function should be off. Clear the alarm with Alarm Reset.