


6


■ Functional Pause

The System DI2 is On by default, indicating that the functional pause is not triggered.



When the functional pause is triggered (System DI2 is Off) during jogging, the robot pauses while the servo status remains unchanged. In this scenario, you cannot operate the robot.

When the functional pause is triggered during program execution, the program pauses at the current execution line and the system displays WA001.



Alarm / Warning	WA001 (Gating is triggered)
Probable Cause	Functional pause is triggered
Recommended Action	Untrigger the functional pause and turn on the reset switch (System DI3) to clear the alarm.


You can only reset the functional pause with the System DI3 after the System DI2 is switched back to On. Then, the program execution resumes, and the robot continues moving.

Note:

1. The functional pause is only applicable in the Auto and T2 modes, not in the T1 mode.
2. You can also set or read the functional pause status through RL. For details, refer to Section A.2 Functional pause in RL.

■ Reset Functional Pause

Use the System DI3 to reset the functional pause status of the robot.

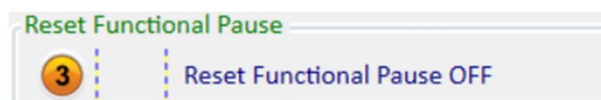

After you trigger the System DI3 to reset the functional pause status, WA001 is cleared.

