

6

■ Servo Status

Use the System DO2 to output the current servo status. The following indicates that all the axes are disabled.




The System DO2 is On after all the axes are enabled.



■ Moving Status

Use the System DO3 to check whether the robot is moving.

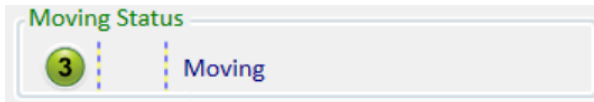

■ Functional Pause (Functional pause status)

Use the System DO4 to check whether the robot is in the functional pause status.

System DO4 is Off when the functional pause function is triggered (System DI2 is Off).



System DO4 is On when the functional pause function is not triggered (System DI2 is On).

