


6.3 Remote IO

If you need more DI/Os than the default ones provided by the robot, use the external expansion modules that support Delta's DMCNET system.

Click the  **External** page in the menu. Once the controller and the external device are successfully connected, click **Scan***Note.

Note: you need to perform scanning before operating an external expansion module for the first time.

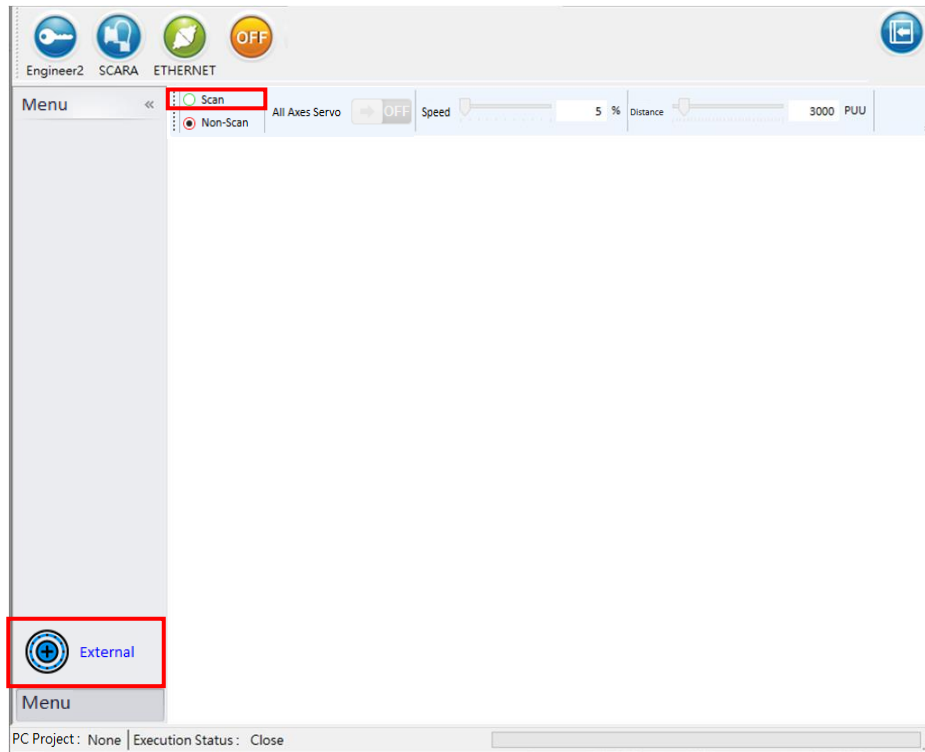

Wait for several seconds, and the system displays all the devices that are connecting to the controller through DMCNET communication. Then, click **Control this IO**.

