



- Open the **Modbus R/W** subtab of the **Function** subpage and set the value of 0x1000 to 99.

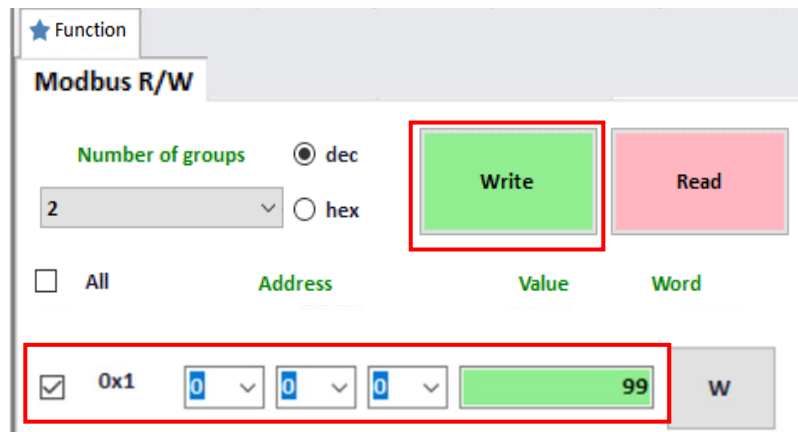

- Go to the **Modbus Read Only** subtab and read the value of 0x1001, which is automatically mapped from the setting value of 0x1000.

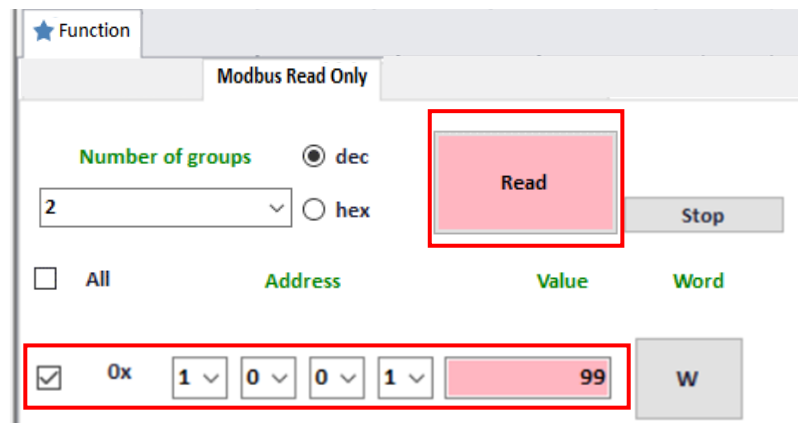

- Then, click **User IO** in the **I/O** page.



You can find the User DO1 is currently Off.

