


The **Home** page includes the **Go Home**, **Z index**, and **Hardware Limit** tabs, which allow you to check whether the motor of each robot axis is offset. Contact Delta if the home position is lost.

7

7.1 Go Home

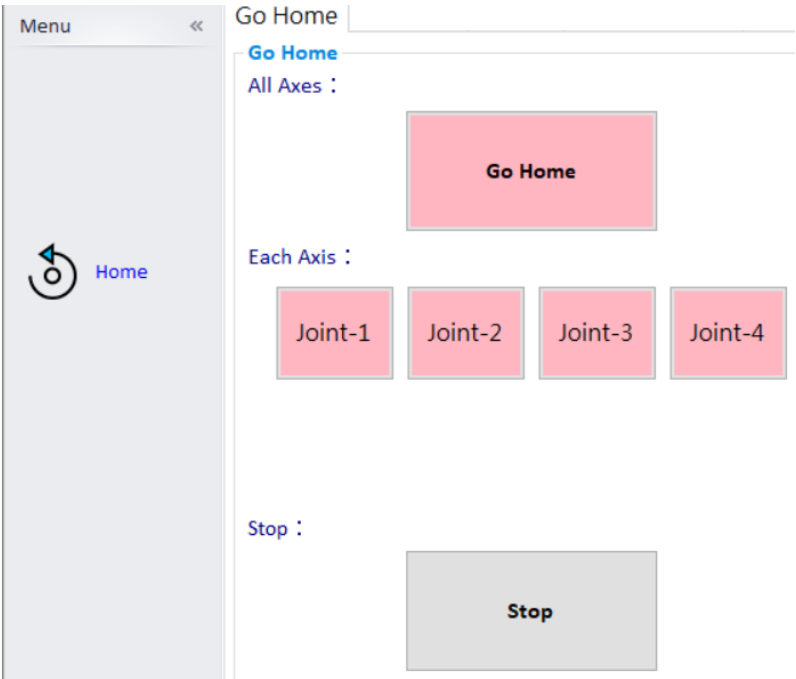

Item	Description
All Axes	Perform homing on all axes.
Each Axis	Perform homing on one single axis.
Stop	During homing, click Stop to immediately stop the robot as needed. Important: before homing, make sure there is no obstacle on the homing path to prevent collisions.
Speed	The homing speed is determined by the override setting in the JOG page or the JOG subpage. Refer to Section 2.2 Speed Override for details.