

7.3.1 J4 & J6 axes


Since the J4 and J6 axes have no hardware limits and their rotation counts cannot be calculated, the Hardware Limit function for the two axes is disabled by default. If you use the JRC value to obtain the absolute positions and the rotation counts of the J4 and J6 axes, you can manually enable the Hardware Limit function for the two axes.

1. Go to the **Options** tab of the **System** page, and then select the **J4 Enable** and **J6 Enable** check boxes in the Hard Limit area.



The screenshot shows a section titled "Hard Limit" with two checkboxes: "J4 Enable" and "J6 Enable". Both checkboxes are currently unchecked.

2. Return to the **Hardware Limit** tab. You can see that the previously grayed out Hardware Limit function for the J4 and J6 axes is now enabled.

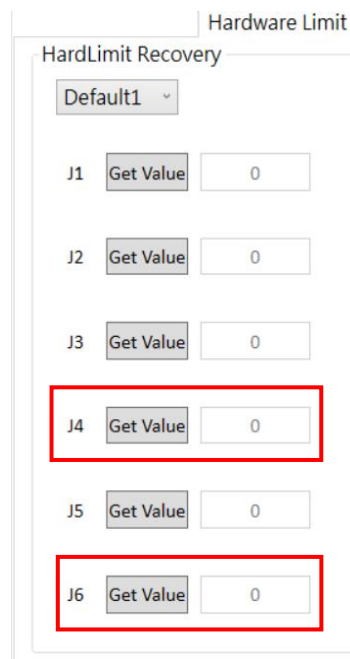

The screenshot shows the "Hardware Limit" tab. At the top, there is a "HardLimit Recovery" dropdown menu set to "Default1". Below this, there are six rows for axes J1 through J6. Each row has a "Get Value" button and a text box containing the value "0". The rows for J4 and J6 are highlighted with red rectangular boxes, indicating that the hardware limit function for these axes is now enabled.