



2. Enter a new software limit in PUU*^{Note} (will be auto-converted to values in degree or in mm after uploaded) in the field. The modified value is in red before uploaded.

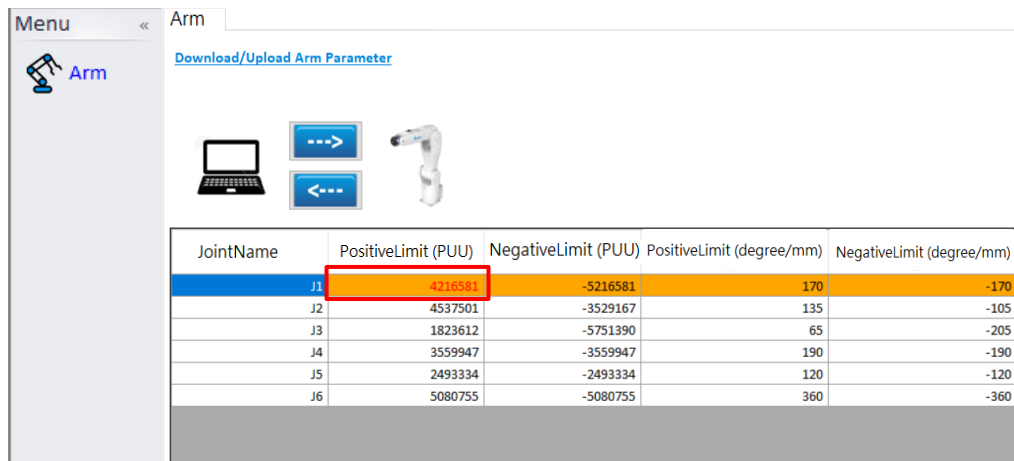

Note: PUU (Pulse of User Unit) is a unit scaled by the E-Gear ratio.

3. Click  (upload) to upload the Arm parameters to the robot.
4. Click **Yes** to confirm the change.

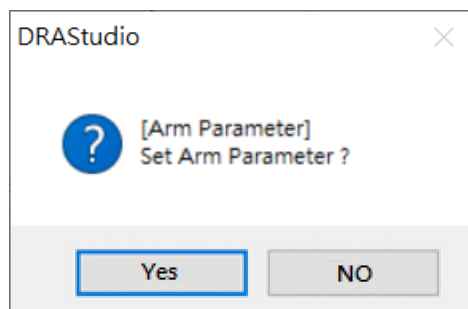

5. The robot limit settings are complete, and the auto-converted value in degree or in mm is updated as well.

