


1.3.3 Connection

Click  (Connection) to display the Connect window. There are two communication interfaces available for connecting the Delta robot to the software:

- Ethernet
Ethernet connection. Use the RJ45 cable to connect the robot with the computer. In this case, you can operate the robot through the software.
- USB1
USB connection. Use the USB Type B cable to connect the robot with the computer. In this case, you can only check the IP address of the robot controller through the software.



In the IP fields*^{Note}, enter the IP address of the robot controller. The default IP address is 192.168.1.1.

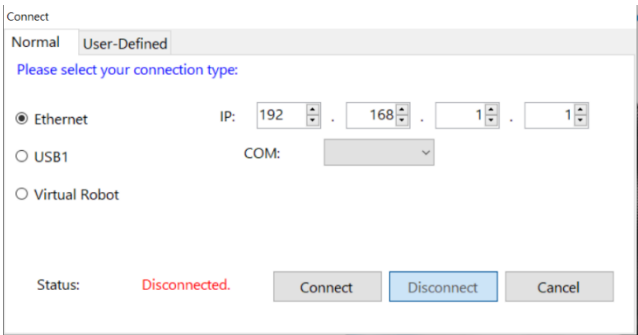

Note: the computer and the connecting robot must be within the same domain. Thus, you need to set the computer's IP address to 192.168.1.XX when connecting to a new robot.

Click **Connect**, and the connection between the software and the robot is established.

Icon	Description
	Connection not established.
	Connection established.