


The **Info** page displays the controller parameters. The content of each tab is detailed as follows.

9.1 Info.

The **Info.** tab contains the Robot Info and the Alarm Info areas.

■ Robot Info

Displays the position value and unit, the motor speed, and the motor torque of each robot axis at present.

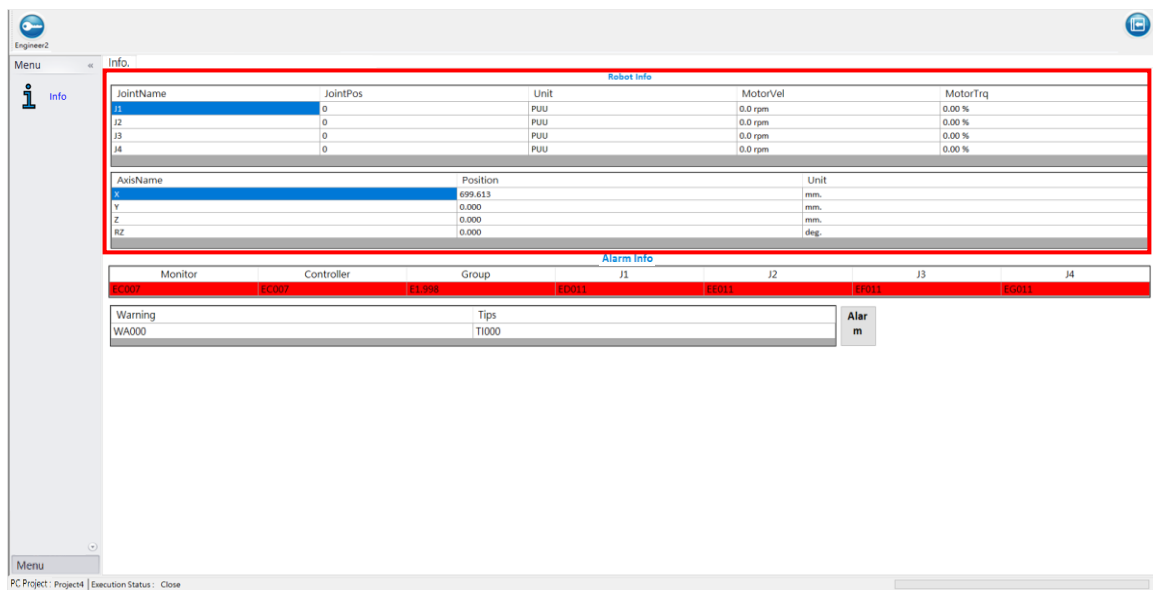

■ Alarm Info

Displays the alarms and warnings of the robot. For details, you can go to the **Alarm** subpage to check the error code, Probable Cause and Recommended Action.

