


10.6 Options

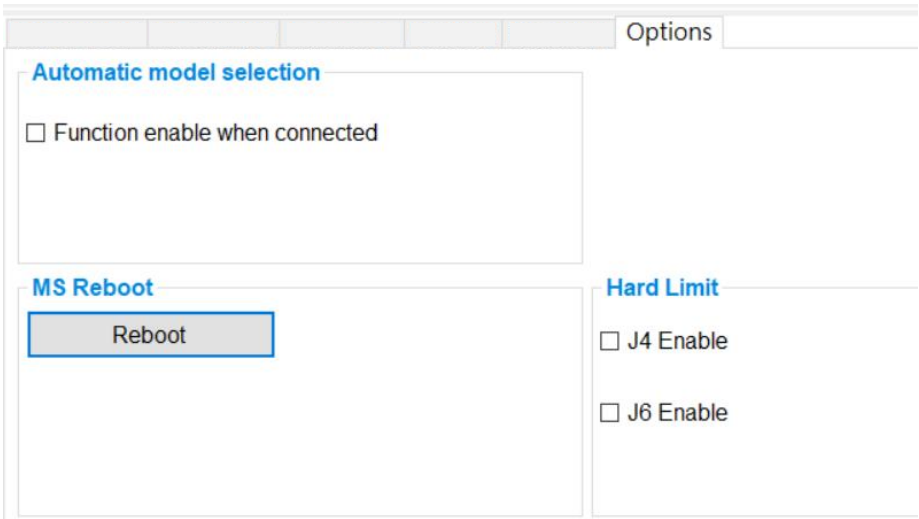

In this tab, you can perform the following operations:

Area	Function description
Automatic model selection	Select the Function enable when connected check box to have the system automatically read the parameters and determine the model number when a robot is connected.
MS Reboot	Click Reboot to restart the controller.
Hard Limit	Select the J4 Enable and J6 Enable check boxes to enable the Hardware Limit function for J4 and J6 axes in the Hardware Limit tab of the Home page.