


See the following example for verifying the license of the CVT module:

1. After filling in the required fields, click **Register** to generate the AuthorityKey.

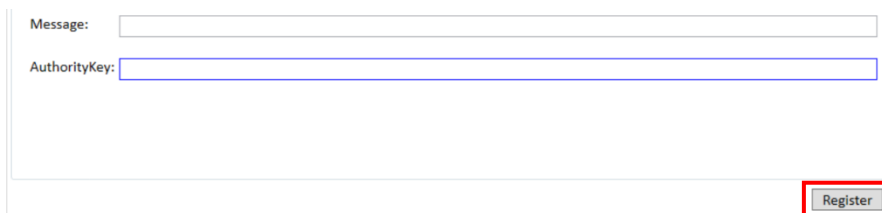


Message:

AuthorityKey:

Register

2. The Message field displays SUCCESS when the AuthorityKey is generated. If FAIL is displayed instead, correct the input content and retry.

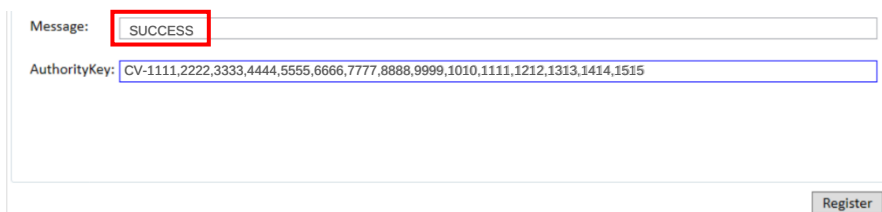


Message: **SUCCESS**

AuthorityKey: CV-1111,2222,3333,4444,5555,6666,7777,8888,9999,1010,1111,1212,1313,1414,1515

Register

3. Go to the **DCS/DCV** tab. Enter the AuthorityKey to the CTV field, and click **Verify**.

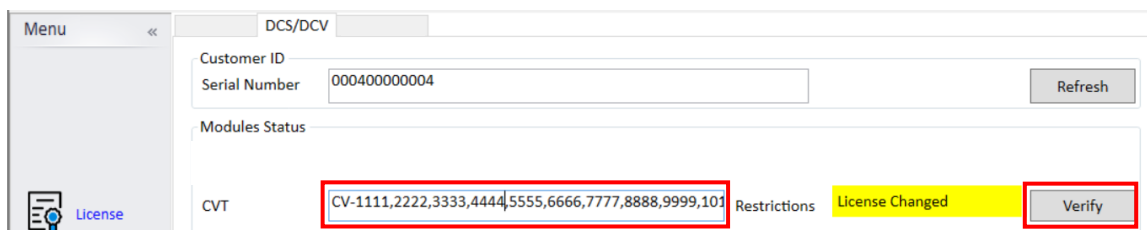

Menu << DCS/DCV


Customer ID
Serial Number 000400000004 **Refresh**

Modules Status

CVT CV-1111,2222,3333,4444,5555,6666,7777,8888,9999,1010,1111,1212,1313,1414,1515 Restrictions License Changed **Verify**

4. Cycle power to and then restart the controller. If the verification succeeded, the Expiration Date is displayed on the right side of the CVT field.

Note: check the Expiration Date when the function does not work properly. To extend the Expiration Date or purchase a permanent license, contact Delta or the distributor.

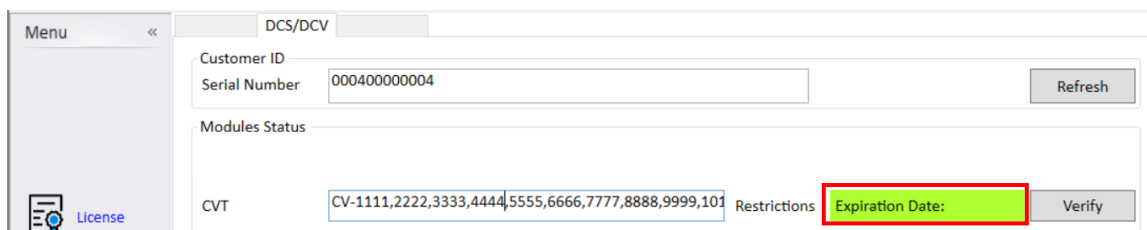

Menu << DCS/DCV

Customer ID
Serial Number 000400000004 **Refresh**

Modules Status

CVT CV-1111,2222,3333,4444,5555,6666,7777,8888,9999,1010,1111,1212,1313,1414,1515 Restrictions Expiration Date **Verify**