


11.3 DCS/DCV

The functions in the **DCS/DCV** tab are controller-bound. For a permanent license, you only need to verify the license once. Contact Delta or the distributor if you want to transfer the verified licenses to another controller.

11

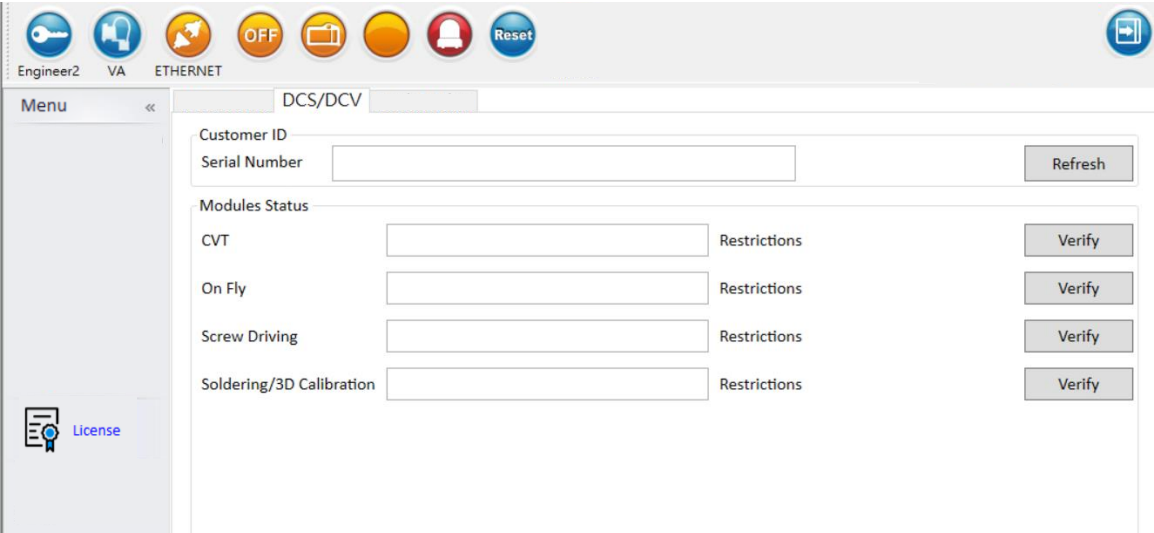

| Area                                                          | Name                     | Description                                                      |
|---------------------------------------------------------------|--------------------------|------------------------------------------------------------------|
| Customer ID                                                   | Serial Number            | 12-digit serial number of the controller.                        |
|                                                               | Refresh                  | Click this button to obtain the serial number of the controller. |
| Modules Status<br>(verification status of functional modules) | CVT                      | AuthorityKey for the conveyor tracking module.                   |
|                                                               | On Fly                   | AuthorityKey for the on-the-fly module.                          |
|                                                               | Screw Driving            | AuthorityKey for the screwdriving module.                        |
|                                                               | Soldering/3D Calibration | AuthorityKey for the soldering module.                           |
|                                                               | Verify                   | Click this button to verify the AuthorityKey.                    |

For the verification steps, refer to the descriptions in Section 11.2.