



13.1.1 Operating the External page

1. Click the **External** page in the menu. Once the controller and the external device are successfully connected, click the **Scan** radio button*Note.

Note: you need to perform scanning before operating an external DI/O device for the first time.

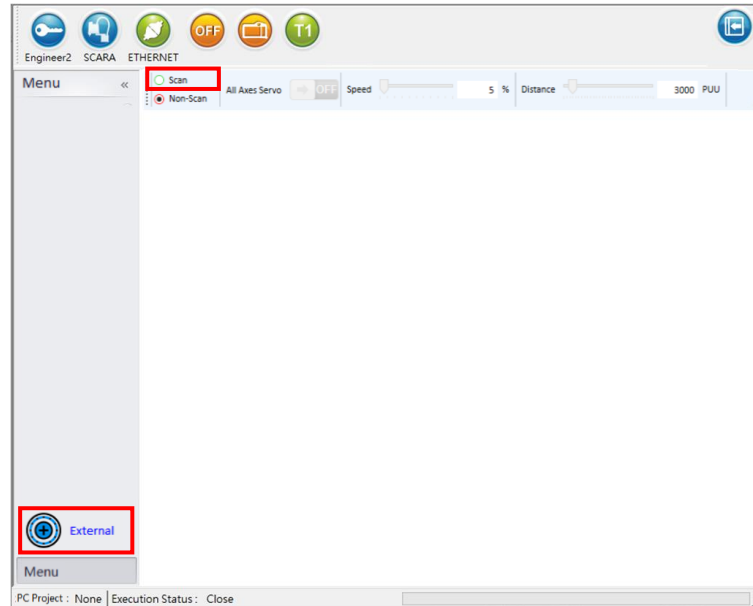

2. After several seconds, the system displays all the devices connected to the controller through DMCNET communication. Then, click **Control this IO** for the device to be controlled.

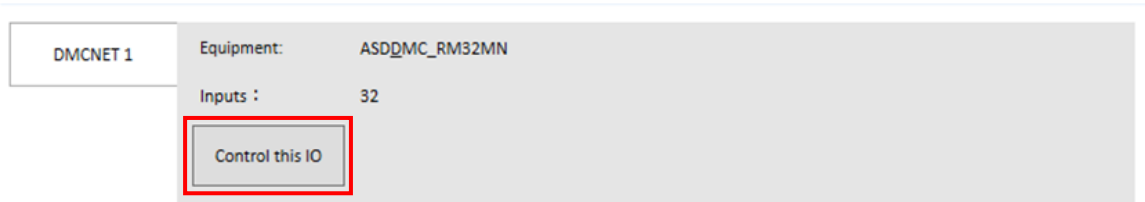

The system automatically jumps to the **Remote IO** screen in the **I/O** page. In this screen, green circle **1** indicates that the DI/O is On; orange circle **1** indicates that the DI/O is Off.

