


13.2 External axis

This section provides descriptions of operating the external axis through the **External** and **RL** pages. The external axis expands the number of motors for you to control by connecting to Delta's A2 / A3 / B3 series servo drives.

13.2.1 Operating the External page

The main setting screen of the **External** page is as follows.

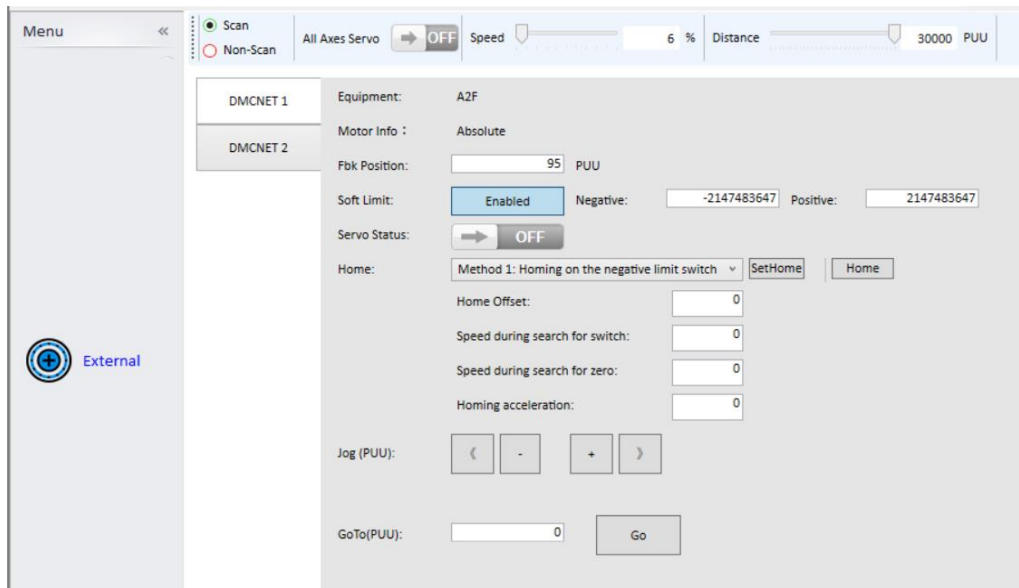

Function	Name	Description
Function bar	Scan / Non-Scan	Make sure the servo drive and controller are properly connected. Then, click Scan to control the external axis in this page.
	All Axes Servo	Click to enable all axes.
	Speed	Set the speed of the current external axis (unit: %).
	Distance	Set the distance of each jog movement (unit: PUU).
Servo information	Equipment	Model number of the servo drive.
	Motor Info	Displays the encoder type as "Incremental" or "Absolute".
	Fbk Position	Displays the current position of the external axis (unit: PUU).
Parameter settings	Soft Limit	Set the Negative and Positive limits; click Enabled to enable or disable the software limit function.
	Servo Status	Click to switch the servo status to On or Off.
	Home	Select a homing mode; refer to Delta's servo drive user manuals for details.
Movement operation	Jog (PUU)*Note	■ Press and hold to move the axis continuously in the negative direction. ■ Press and hold to move the axis continuously in the positive direction. ■ Click to jog the axis in the negative direction. ■ Click to jog the axis in the positive direction.
	GoTo(PUU)	Input a PUU value, and then click Go to move the axis to the corresponding PUU position.

Note: before moving or jogging the axis, make sure the servo status is On.