

13.2.2 Operating the RL page

1. Create a new project, and then go to the **RL** page in the menu of DRASstudio to write the RL instructions for controlling the external axis. For example:

```
ExtServoOn(1)           --Enable the servo for the external axis J1


ExtMovJ (1,1001)         --Move the external axis J1 to Point number 1001 at the default speed
ExtMovJ (1,1002)         --Move the external axis J1 to Point number 1002 at the default speed
ExtMovJ (1,3000,"PUU",30,20,30) --Move the external axis J1 to 3000 PUU at the maximum speed of
                           30%, acceleration of 20%, and deceleration of 30%.

DELAY(2)
ExtMovJ (1,15000,"PUU",30,20,30) --Move the external axis J1 to 15000 PUU at the maximum speed
                                   of 30%, acceleration of 20%, and deceleration of 30%.

DELAY(2)

ExtServoOff(1)          --Disable the servo for the external axis J1
```

2. You can set breakpoints and execute the program line by line to check for the logic errors in the program. See the following figure.

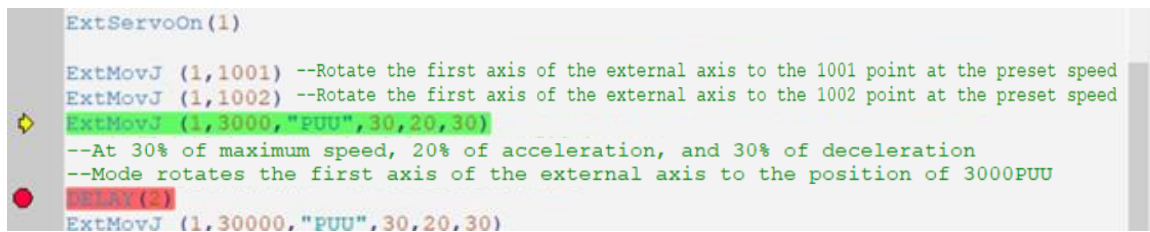

3. There will be a slight difference between the set PUU value and the actual PUU position.

