

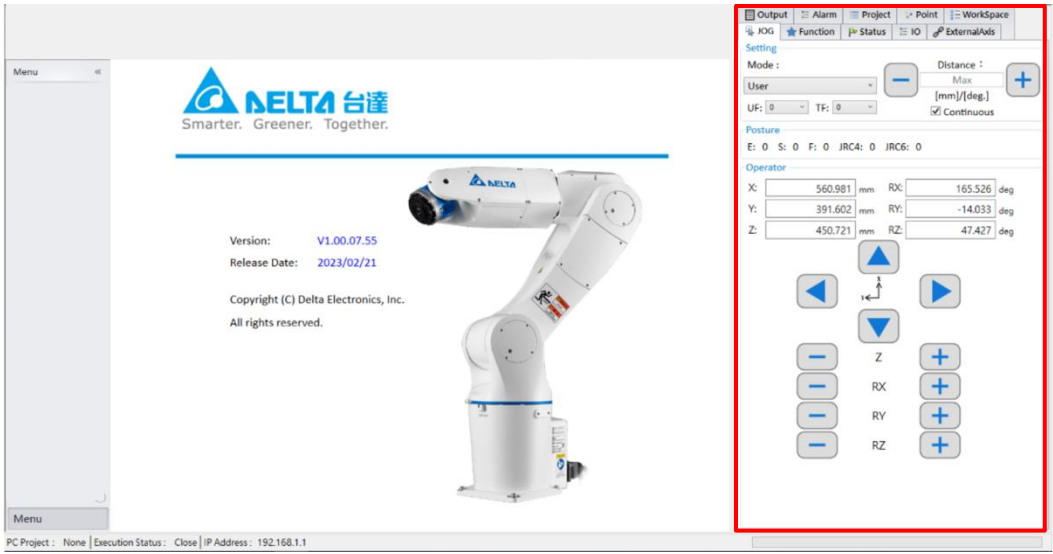










1.5 Subpage

Click  (Switch for Subpage) to display the subpage on the right of the software screen, which provides auxiliary functions for the menu items.



Descriptions of the tabs in the subpage are as follows.

Icon	Description
	Controller information check
	Alarm message
	Project information
	Point data editing
	Workspace status
	JOG operation
	Modbus reading / writing
	Status display of robot functions
	External axis control
	Robot language shortcut keys
	IO status check and User DI control