


1.5.11 IO

In the **IO** tab, you can check the statuses of system IOs and user IOs.

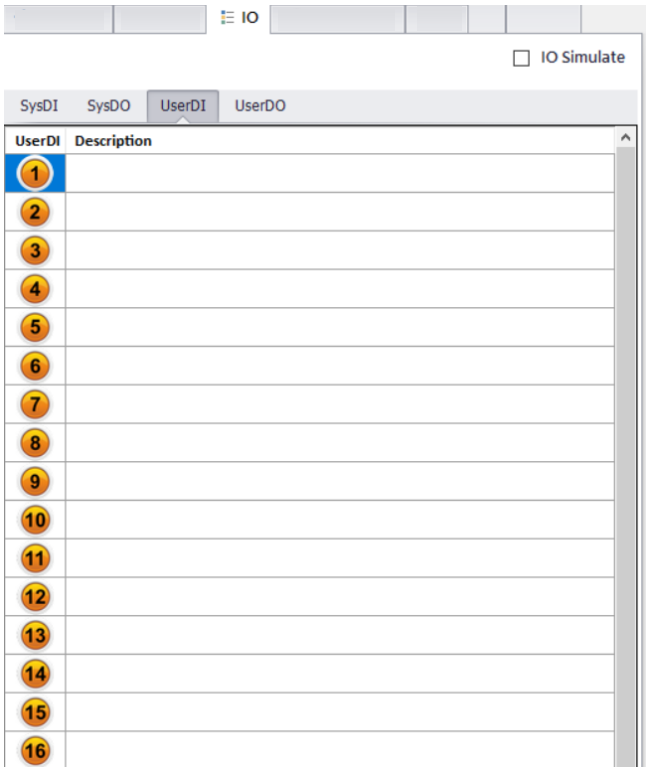

After selecting the check box for **IO Simulate**, you can turn the User DI signals to On or Off.

