


2.3 Mode selection

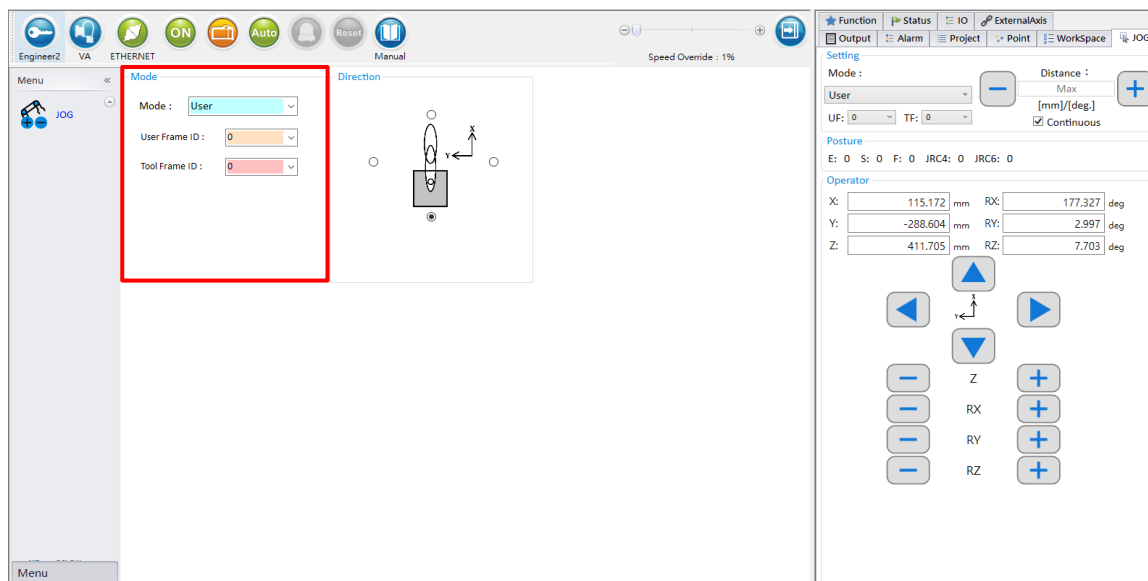

Select the Mode to switch between coordinate frames. There are four types of modes (coordinate frames), including the Joint frame mode, World frame mode, User frame mode, and Tool frame mode. Select the proper mode to operate the robot according to the applications. When selecting **User** or **Tool** for the Mode, you can specify the User Frame ID (UF) and Tool Frame ID (TF).

