
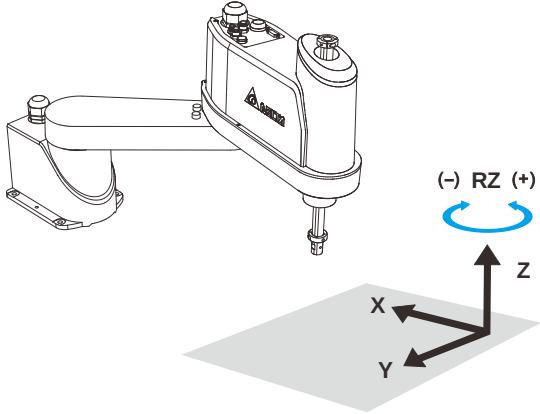


2.3.3 User frame mode

The User Frame can be defined on any position in space, such as a workpiece or a workbench.

| User Frame directions for SCARA                                                   | User Frame directions for VA                                                        |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |

- The default User Frame setting is 0 (UF: 0), which directions are the same as that of the World frame described in Section 2.3.2.
- After the User Frame is defined, the robot moves in the directions of the coordinate frame, which can be a horizontal plane or an inclined plane. Refer to Section 4.6 User Frame for the detailed settings.

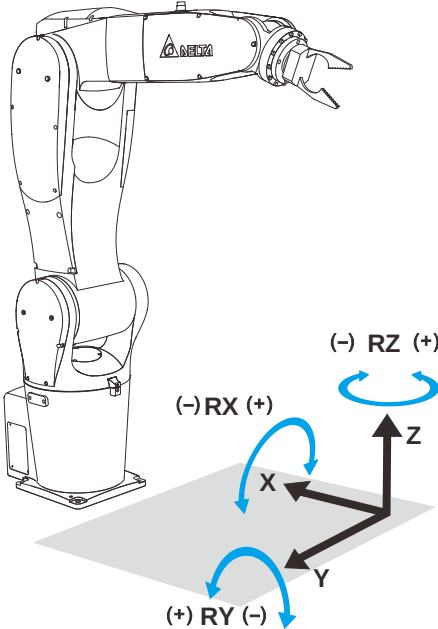