



Select **User** for the Mode. In the User frame mode, you can set the User Frame ID and Tool Frame ID to the ID numbers with the corresponding frames established ^{*Note}. The default settings are both 0.

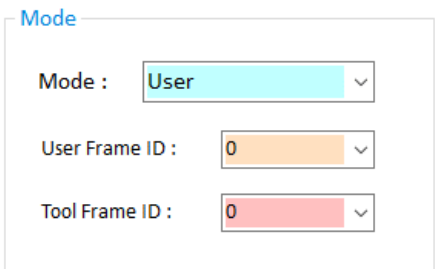

On the other hand, you can open the **JOG** subpage and select **User** for the Mode, and then set the UF and TF to the ID numbers with the corresponding frames established ^{*Note}. The following example is based on the operation screen when a VA robot is connected.

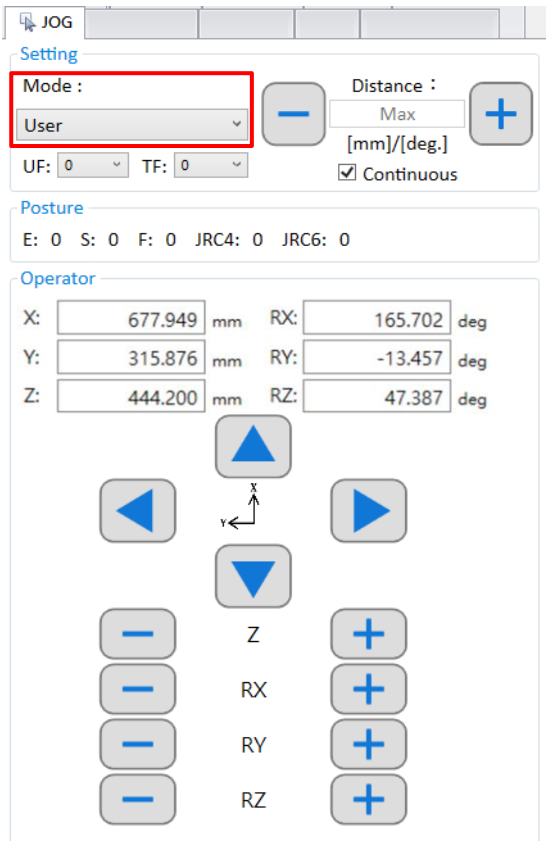

Note: you must establish the corresponding frames before specifying the IDs. If there is no frame established for the specified ID, the action of switching the frame fails and this will trigger the alarm E1.82A or E1.82B.

Alarm	E1.82A	E1.82B
Probable Cause	Switching error of user's coordinates system	Switching error of the tool coordinates system
Recommended Action	1. Check if the group of user's coordinates system (User Frame ID) designated by the motion command is correct. 2. Check if the coordinates system is taught correctly.	1. Check if the group of working coordinates system (Tool Frame ID) designated by the motion command is correct. 2. Check if the coordinates system is taught correctly.