



After the Direction setting is changed based on the position of the operating personnel relative to the robot, the X and Y directions shown in the Operator area of the **JOG** subpage changes as well.

When the Direction is set to A:

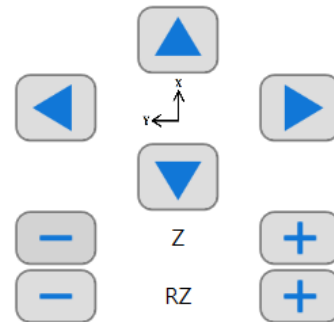

When the Direction is set to C:

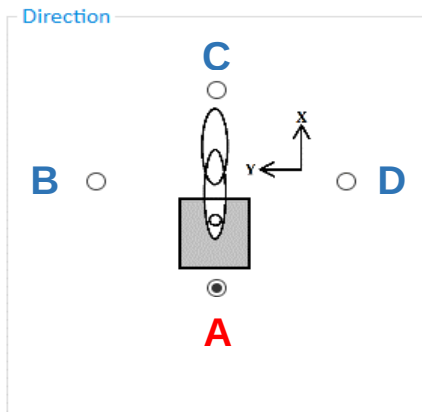