


When you select **Joint** for the Mode in the Setting area, the Operator area shows the coordinate data of each axis in units of “deg” or “puu”, which is set in the Setting area.

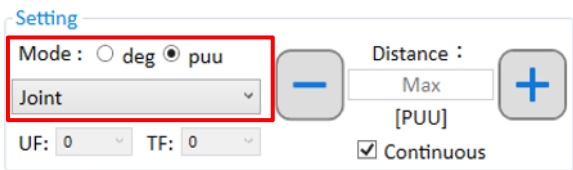

2

See the following figures.

When a SCARA robot is connected, you can control the movements of the J1 - J4 axes in the Operator area.

When a VA robot is connected, you can control the movements of the J1 - J6 axes in the Operator area.

Operator area for SCARA	Operator area for VA
Operator J1: 888750 puu J2: -2617680 puu J3: -61561 puu J4: 358822 puu J1 J2 J3 J4 — + — + — + — +	Operator J1: 0 deg J2: 0 deg J3: 0 deg J4: 0 deg J5: 0 deg J6: 0 deg J1 J2 J3 J4 J5 J6 — + — + — + — + — + — +