


■ Project management

Right-click a PC project, and the following options are shown.

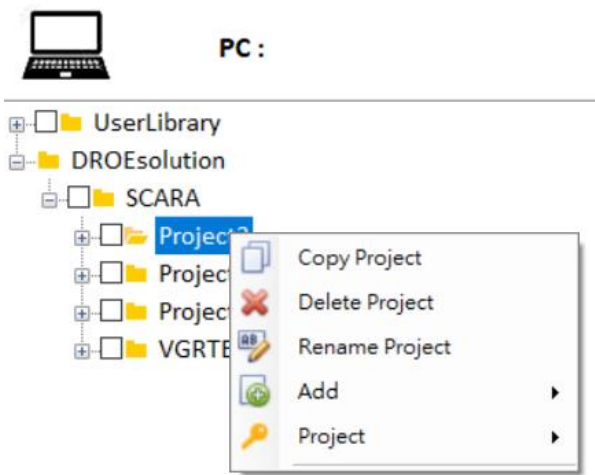

Icon	Name	Description
	Copy Project	Copy the project. You will be asked to enter a name for the new file.*1
	Delete Project	Delete the project. This option is invalid when the project is open.
	Rename Project	Rename the project.*1 This option is invalid when the project is open.
	Add	Add a file to the project. There are three options: ■ New RL*2 Create a new User Library file for writing a subprogram. Refer to “How to add a User Library” in Section 3.8 for details. ■ Existed RL Open an existing User Library file for writing a subprogram. ■ Csv Open a CSV file.
	Project	Encrypt or decrypt the project file. ■ Encrypt Protect the project with a password. The project file becomes locked and can only be viewed after being unlocked. Only English letters and numbers can be used for setting the password; symbols and spaces are not allowed. The maximum length of the password is 16 characters. ■ Decrypt Unlock the project file by entering the correct password. If you forget the password, contact Delta or the distributor.

Note:

- *1. Only English letters and numbers can be used for naming the project; symbols and spaces are not allowed. The maximum length of the project name is 26 characters.
- *2. For the method to call the Lua files, refer to the description of CALL instruction in Delta’s Robot Language Manual.
- *3. Save a copy of the original file before managing the project in case the file is overwritten or not saved.