


4

There are four axis rotation modes. The descriptions for each mode are as follows.

■ Mode 1: JRC Active

(the default mode for VA robots and the J4 axis of 5-axis SCARA robots)

When the joint motion instructions such as MovP, MovPR, MArchP, and RelToolP are executed, the rotation axis refers to the JRC value and moves to the target position.

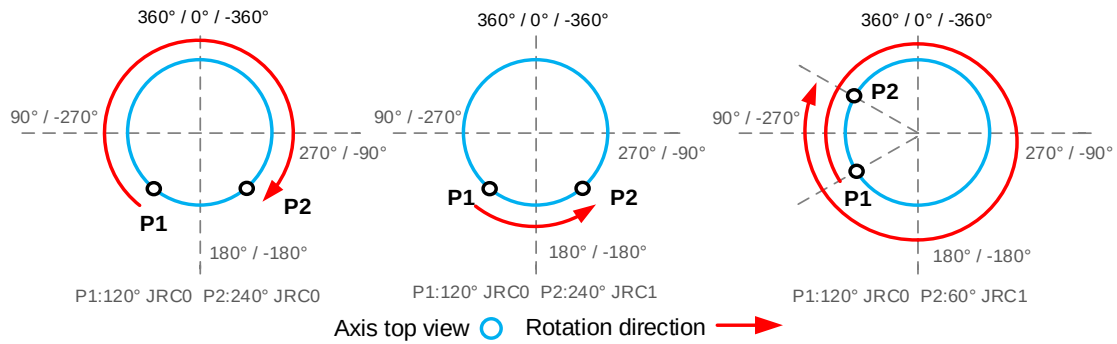

When the linear motion instructions such as MovL, MovLR, MArchL, and RelToolL are executed, the rotation axis moves the shortest distance to the target position. However, when the target position exceeds the angle limit of the rotation axis, the system displays an alarm and stops the robot.

