


■ **Mode 4: Directly motion by value**
 (the default mode for the 4-axis SCARA robots;
 not supported by VA robots and the J4 axis of 5-axis SCARA robots)

When the joint motion instructions such as MovP, MovPR, MArchP, and RelToolP are executed, the rotation axis only refers to the angle (instead of the JRC value) and moves to the target position.

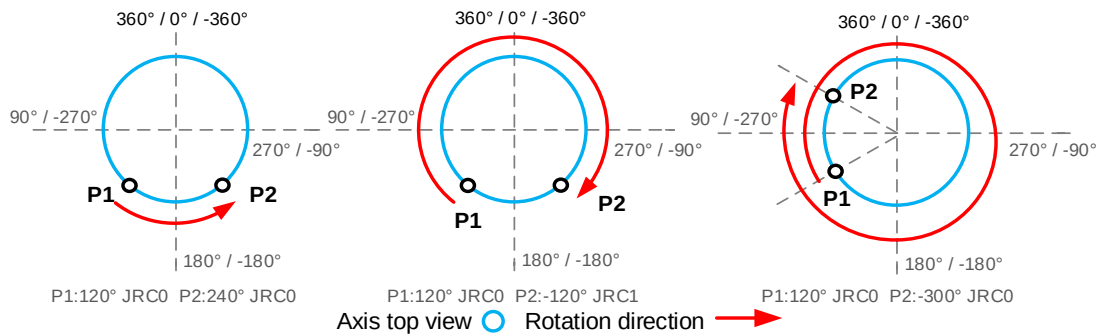

When the linear motion instructions such as MovL, MovLR, MArchL, and RelToolL are executed, the rotation axis refers to the angle and moves to the target position.

