


14. Plug the power cord connected to the ADU to a power supply outlet. The outlet must supply power rated between 100~240Vac.
15. Turn on the power switch. After start-up, check whether the system status LED indicator illuminates (green). If not, inspect whether the power supply is normal. If the power supply is normal but the LED indicator still does not illuminate, contact your local dealer or customer service.



WARNING:

Before you supply any power to the ADU, remove any debris that may exist on or near the fans. Failure to remove debris could cause damage to equipment or result in injury.

16. Replace the raised floor.
17. Please see **Figure 3-f** for ADU Cool Air Supply Illustration.

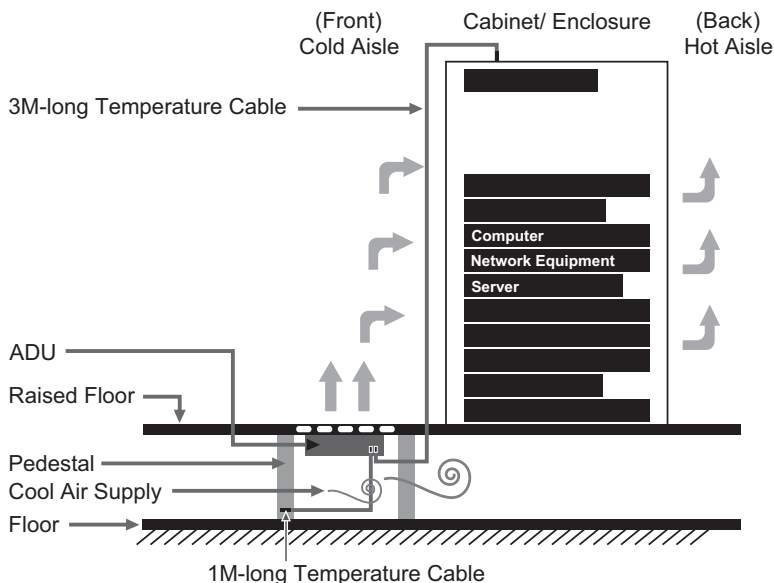

(Figure 3-f) ADU Cool Air Supply Illustration