


● Identification

Go to **Monitor** → **Information** → **Identification** to view the information of Identification and UPS Rating.

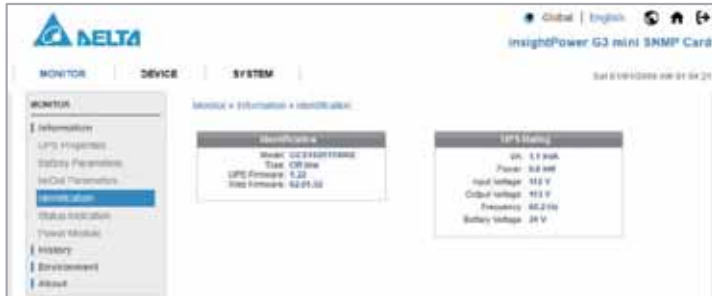

● Status Indication

Go to **Monitor** → **Information** → **Status Indication** to view the UPS's event list. When an event occurs, the indicator lights up.



● Power Module

Go to **Monitor** → **Information** → **Power Module** to view the information of every Power Module and the status of Power Module Bypass.