


- **Date:** The date of the event that occurred.
- **Time:** The time of the event that occurred.
- **Level:** The level of the event that occurred.
- **Event Log:** The description of the event that occurred.
- **Download Event Log from UPS:**

The Mini SNMP monitors the status of UPS automatically and displays the event logs according to their event levels. All of these event logs are saved in the Mini SNMP.

● Data Log

Go to **Monitor** → **History** → **Data Log** to see all the device data saved. You can view and download the data (DataLog-year-month-day.csv) of an assigned period of time on your computer.

The Mini SNMP can store the data logs for one year circularly at one-minute intervals.

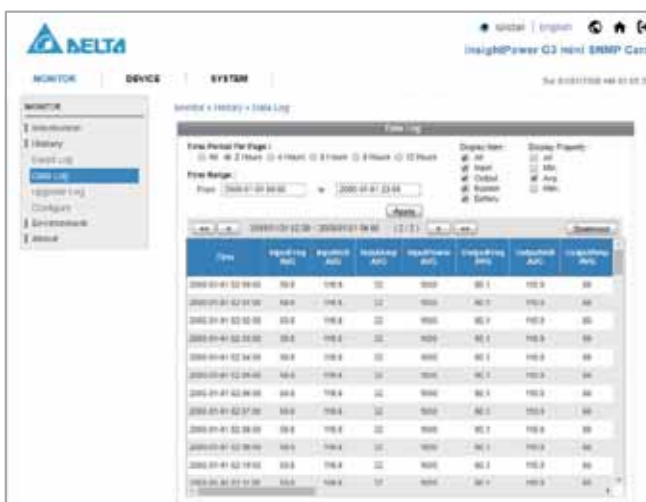

Time	Inputting Volt	Inputting Amp	Inputting Watt	Inputting PFC	Inputting Temp	Inputting Fan	Inputting Fan
2008-01-01 00:00:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:01:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:02:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:03:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:04:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:05:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:06:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:07:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:08:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:09:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:10:00	110.0	110.0	121	1000	100.0	100.0	100
2008-01-01 00:11:00	110.0	110.0	121	1000	100.0	100.0	100